


Installation Instruction

1. Remove the airbox lid retaining system
2. Take off the lid and carefully remove the original filter.
3. Blank off the carburettor intakes to ensure nothing falls into the engine.
4. Clean the inside of the airbox .
5. Remove the blanking material from the carburettor intakes.
6. Install the K&N filter in the airbox; the gasket should fit downwards to the engine.
7. Replace the lid retaining system and tighten to the required torque.

FILTER MAINTENANCE: K&N suggests checking the filter periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the recharger service kit ([99-5000EU](#)). Recharger kits are available from your K&N dealer. For cleaning instructions please visit our website: www.knfilters.com/cleaning

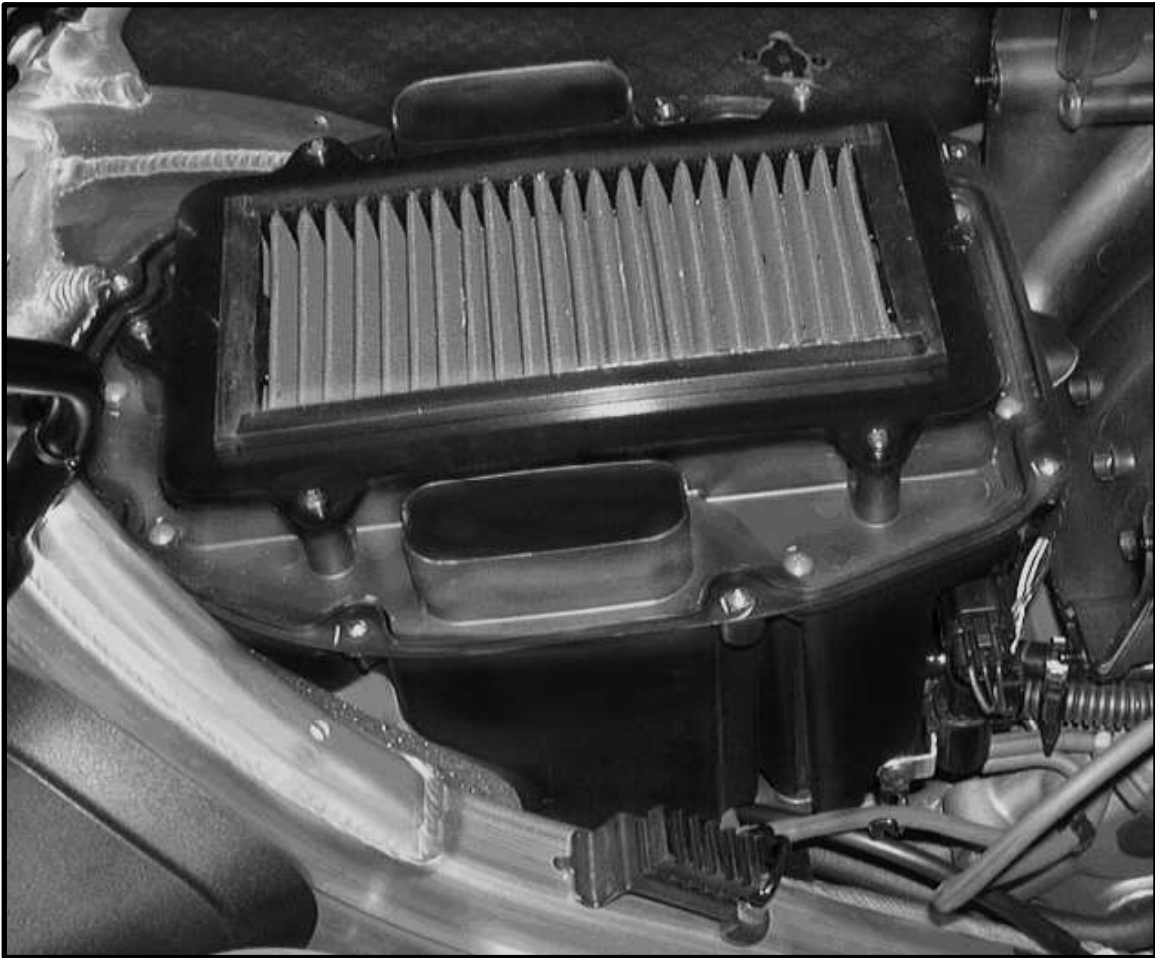

For UK technical support contact R&D department on 01925-636950: Mon-Thu from 8:30 am to 5 pm. For technical support contact our European technical team: eindhoven.tech@knfilters.com we will try to answer your mail within 48 hours. For other K&N products and / or more information about the K&N products please visit our website: www.knfilters.com