


DIRECTION 383

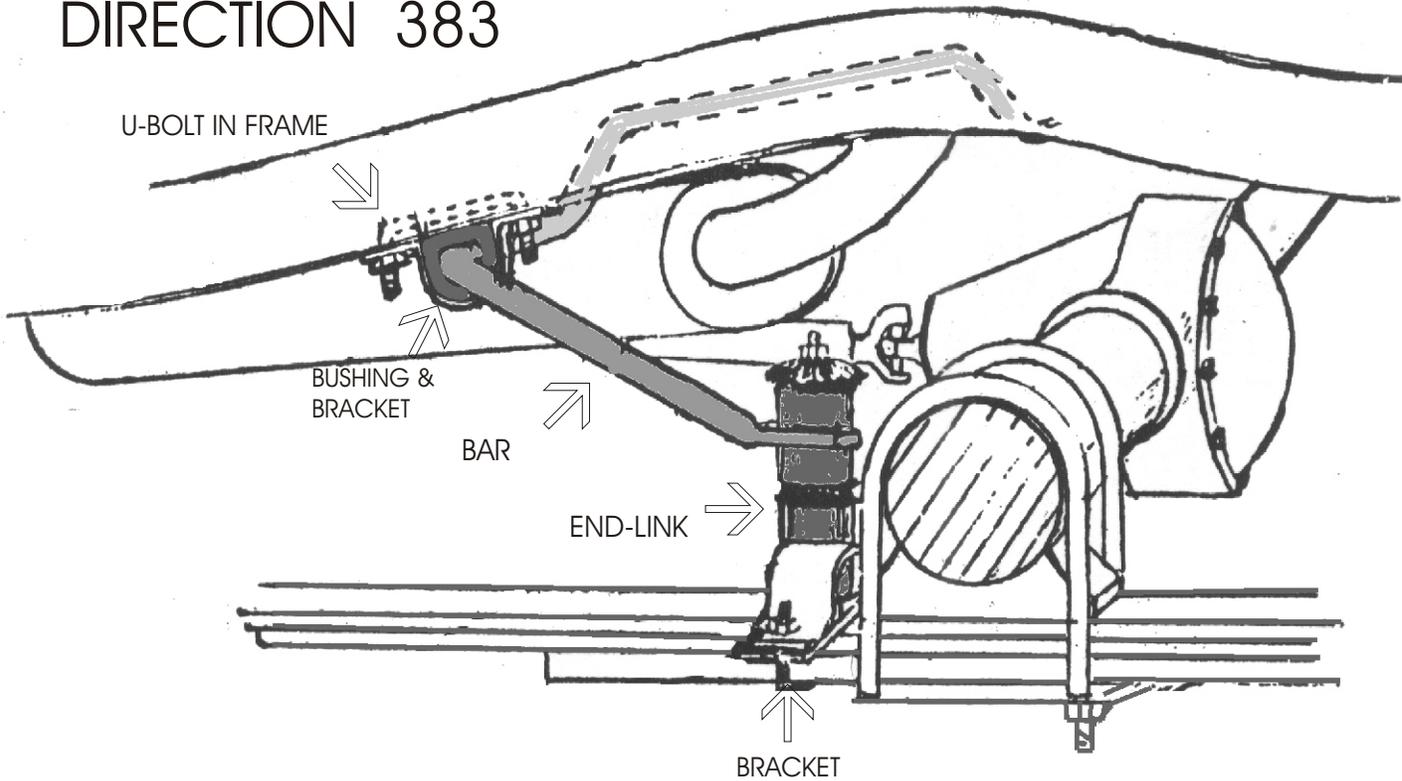

DIRECTIONS 383

- STEP #1.** Place bar over the drive shaft, and over the muffler, with its arms to the rear. On models with a heat shield, the shield should be bent upwards slightly.
- STEP #2.** Assemble end-links on the ends of the bar as illustrated. To do this pass the 5/16" center bolt through a cupped washer on the round side, through a bushing, through two washers, through the spring saddle bracket (from the inside,) through another bushing, through the bar eye, through another bushing, through a cupped washer (from the hollow side) and secure with the lock-nut provided. Be sure that the stepped side of the bushing fits into the hole in both the bracket and the bar eye with the smooth side being next to the cupped washer.
- STEP #3.** Position the spring saddles across the spring just forward of the axle saddles. Pass the long legged U-bolt around under the spring, up through the base plate and bracket. Secure with the lock-nuts provided. The assembly should now be similar to that illustrated.
- STEP #4.** Place the D-shaped bushing on the bar next to the bends. Raise the bar mid-section to the frame, cover the bushing with the frame brackets as shown and mark for drilling. Drill the frame with a 3/8" drill bit.
- STEP #5.** Place a lock-nut on one end of the U-bolt. Insert the other end through the hole in the frame bracket, through one of the holes drilled in the frame and maneuver it until it reappears in the other hole in the frame. Then secure free end of the frame bracket to it with another lock-nut. Tighten the nuts on the U-bolt to 10 ft./lb.
- STEP #6.** Have someone bounce the rear of the car so you can check for clearance throughout the suspension travel distance. Road test the vehicle to accustom yourself to its new handling. As we cannot supervise your installation, or your driving, we cannot be held responsible for more than the cost of the kit.

HARDWARE

2	RH 040 Brackets	2	RH 041 Brackets
2	RH 031 Plates	2	RH 015 End-Links
2	RH 508 D-Bushings	2	RH 403 U-Bolts
2	RH 402 U-Bolts	8	RH 304 Lock-Nuts
4	RH 104 Washers		