




**INSTALLATION INSTRUCTIONS
#200-983 MODULAR INTAKE TUBE
OR**

**#200-783 AIRAID JR. KIT
'03-'07 HUMMER H2, '05-'07 HUMMER SUT**

Thank you for purchasing the Airaid Modular Intake Tube. Please read this instruction manual carefully before proceeding with the installation. Contact Airaid @ 800-498-6951 8:00 AM – 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Modular Intake Tube was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, please contact Airaid.

THANK YOU FOR SELECTING AIRAID.

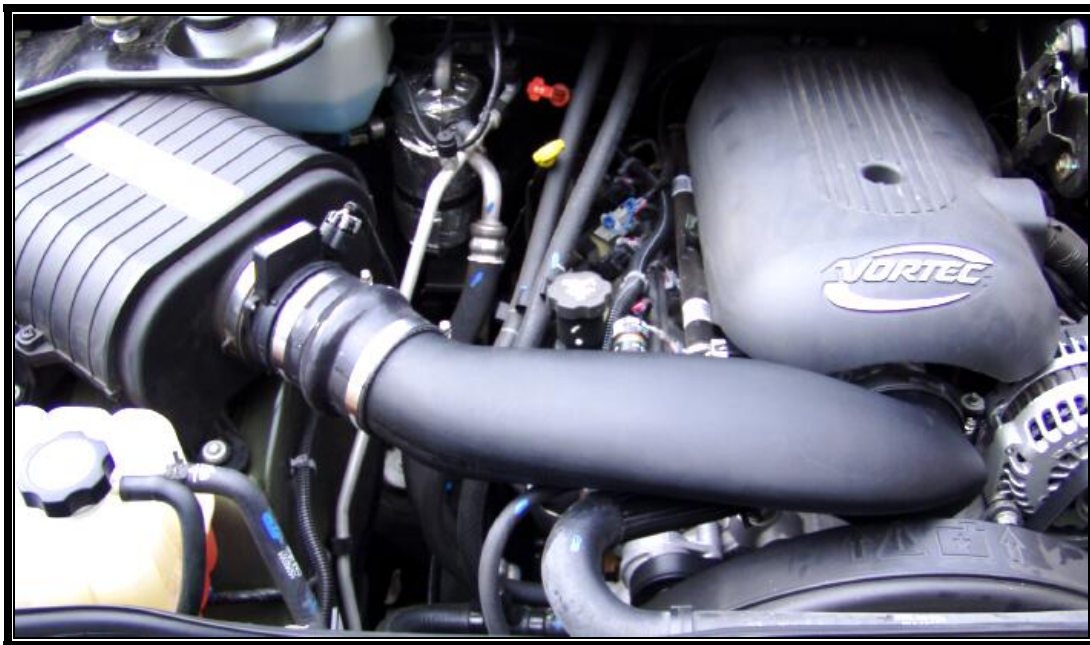

Packing List:

| | | |
|--------------|---------------------|---|
| KIT912T | Modular Intake Tube | 1 |
| KITHUMPHS02 | Silicone Hump Hose | 1 |
| KITCOUPLER02 | GM Coupler | 1 |
| KITHS56 | #56 Hose Clamp | 2 |

Tools Required for this Installation:

Flat Head Screwdriver



Installation Instructions. Read Me!

I DISCONNECT NEGATIVE (-) BATTERY CABLE

II Remove Factory Intake Assembly

- Remove factory filter minder and rubber grommet and retain for re-installation. See Fig #1
- Loosen the factory hose clamps on each end of the factory intake tube assembly. See Fig #2
- Remove the factory intake tube assembly from vehicle. See Fig #2

III Airaid Modular Intake Tube Installation

- Install the GM coupler provided onto the Airaid Modular Intake Tube (MIT). See Fig #3
- Install the silicone hump hose provided onto the Airaid Modular Intake Tube (MIT) with the supplied hose clamps. (Hint: slide the hump hose all the way onto the end of the MIT. See Fig #4
- Install the Airaid MIT in place of the factory intake tube assembly. See Fig #5
- Re-install factory filter minder and rubber grommet into rear of Airaid MIT. See Fig #6
- Check for interference and adjust the MIT accordingly, then tighten the hose clamps.

IV Airaid Jr. P/N 200-783 Replacement Filter

- If you purchased the Airaid Jr. kit P/N 200-783, replace the factory air filter with the Airaid Premium Filter included in the Airaid Jr. kit.

V Finishing Up

- Make sure that the intake path is clear of debris.
- Double check work to ensure proper fit and that all clamps are securely fastened.
- Re-connect negative battery cable.

Figure #1



Figure #2

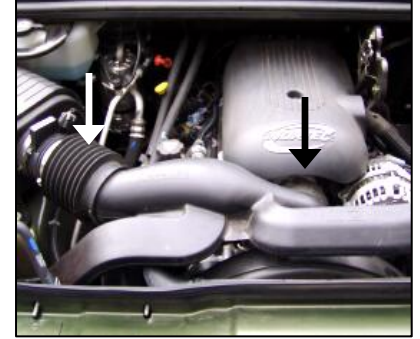


Figure #3

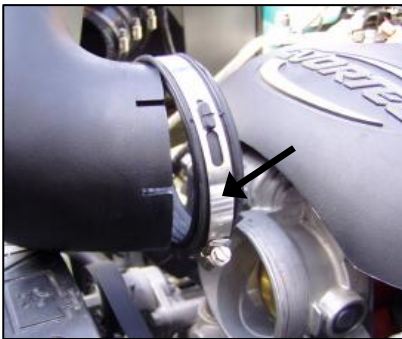



Figure #4



Figure #5



Figure #6

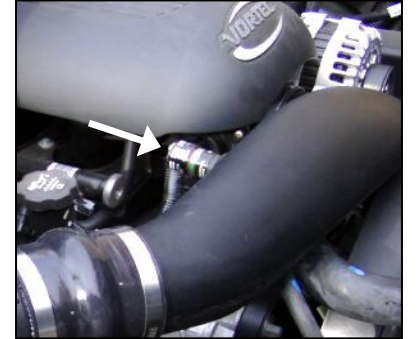

Airaid Cool Air Dam



Rev. 01/10/07