

AIR AID®

INTAKE SYSTEMS

300-125-1 INSTALLATION INSTRUCTIONS

02-05 (New Body Style) Dodge Ram 3.7L, 4.7L, 5.7L, 5.9L

NOTE: DOES NOT FIT 2006 AND NEWER DODGE RAM

Thank you for purchasing the Airaid Intake System. Please read the instruction manual carefully before proceeding with the installation. Contact Airaid @ (800) 498-6951: 8:00 AM - 5:00 PM MST Weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing or damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris in its new location. Care should be taken not to drive through deep water. WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned using the Airaid Filter Tune-Up Kit periodically.

Thank you for selecting Airaid.



Packing List:

700-445	Airaid Premium Filter	1
KIT125-1DC	Cool Air Dam	1
KITWSTRIP02	Weather Strip 33"	1
KIT125-1HP	Hardware & instructions	1
- KITSNP24GHS	#24 Speed Clamp	1
- KITSNP19M4	#19 Speed Clamp	1
- KIT125-1CAP	Black Rubber Cap	1

Tools Required for this Installation:

Flat Head Screwdriver



Installation Instructions Read Me!

I Disconnect the Negative (-) Battery Cable

II Remove the Factory Air Cleaner Lid

- a) Loosen the intake tube clamp at the factory air box lid. See Fig#1

2004-2005 Models Only:

- b) Disconnect breather hose from factory air box. See Fig#1

- c) Unclip the factory air box lid and remove. Leave the factory air filter base in place.

III Install the Airaid Cool Air Dam

- a) Position the Airaid Cool Air Dam in place of the original air box lid. Snap in place. Refer to Fig#2
- b) Connect the factory intake tube to the Airaid Cool Air Dam and fasten with factory hose clamp. Refer to Fig#2
- c) Mount the Airaid Premium filter inside the Cool Air Dam & secure with hose clamp provided. Refer to Fig#2

2002-2003 Models Only:

- d) Slip the black rubber cap over the nipple on the Cool Air Dam and secure using the #19 black speed clamp provided. See Fig#3


2004-2005 Models Only:

- e) Mount factory breather hose to nipple on the Cool Air Dam and secure using the #24 black speed clamp provided. Refer to Fig#4

- f) Align notches in weather strip to the corners. Press weather strip on to Cool Air Dam. See Fig#5

IV Finishing up.

- a) Re-connect negative battery cable.
- b) Check your overall work.
- c) Check hood clearance before closing.
- d) Make sure no foreign objects are in the intake path!

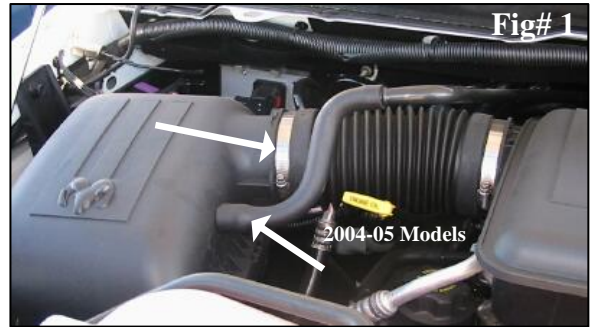

**Don't forget your
Airaid Filter Tune-
Up Kit!**

P/N 790-550



Instructions Revision
Date: 11/9/06