




350 S. St. Charles St. Jasper, In. 47546
Ph. 812.482.2932 Fax 812.634.6632
www.ridetech.com

Part # 11326699
78-88 GM "G" Body Rear Upper StrongArms

Components:

- | | | |
|---|----------|----------------------------------|
| 2 | 90001118 | Upper StrongArm (Set to 11.125") |
| 2 | 90001589 | Kevlar lined Heim end |
| 4 | 90002065 | Aluminum spacers for Heim end |

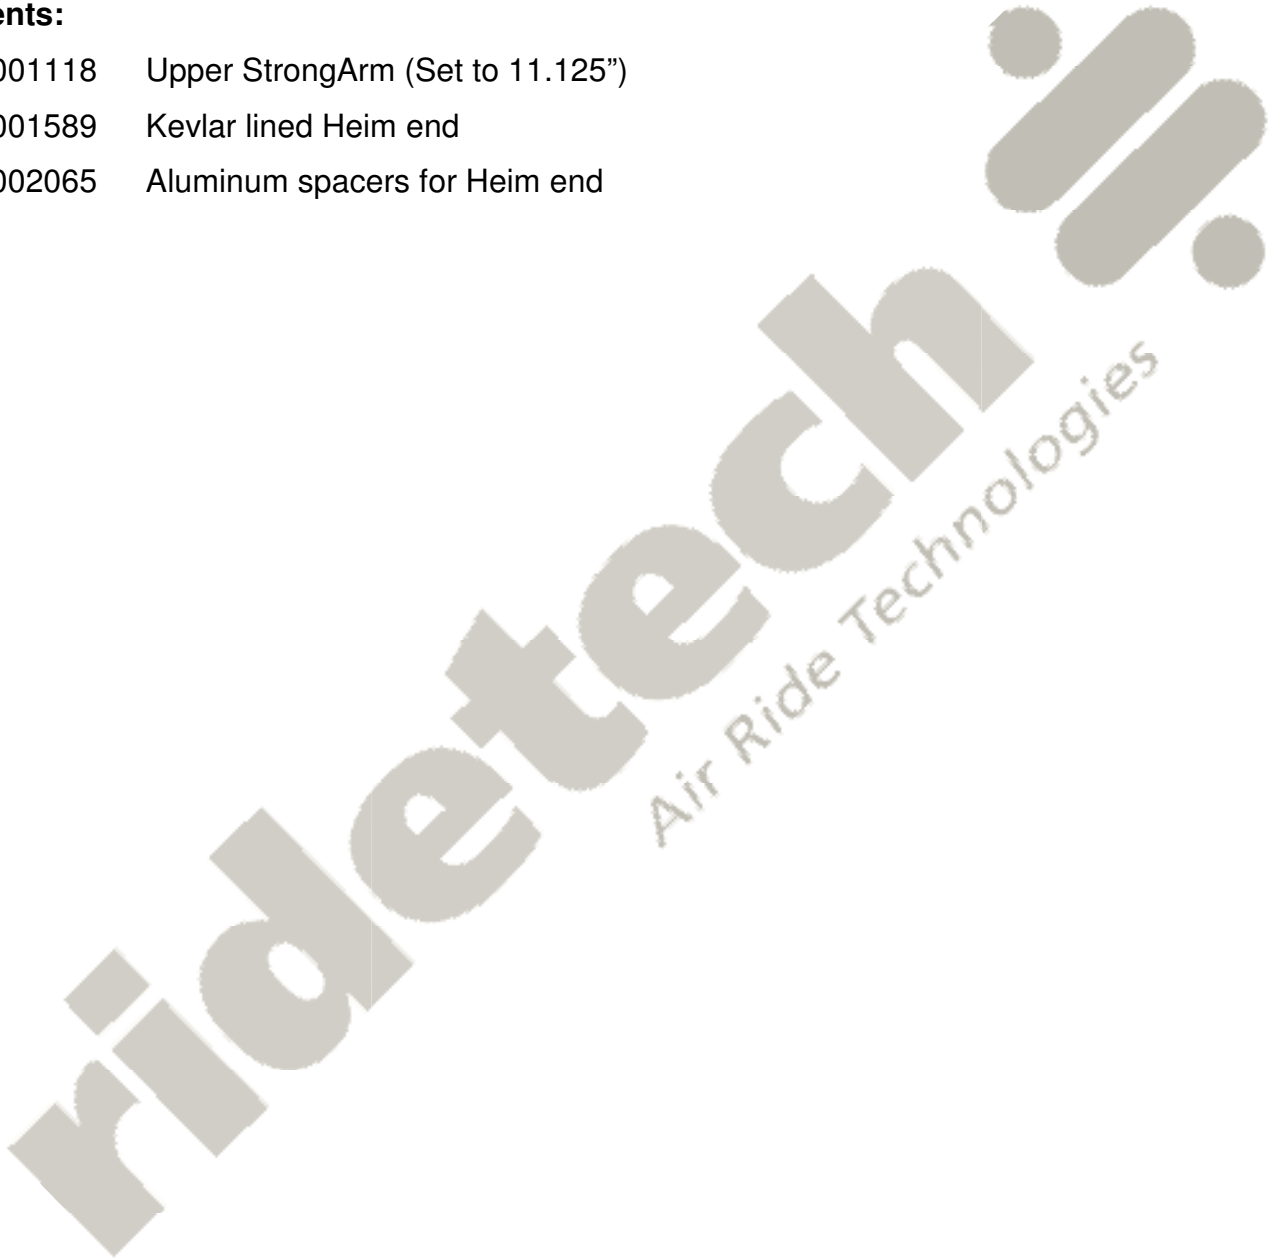

Installation Instructions



1. The length of the upper bar should be set from the factory at 11.125" center to center. Ensure that the jam nut is tight.
2. Using the factory hardware, fasten the heim end to the frame bracket. An aluminum spacer must be installed on each side of the Heim end.



3. Fasten the other end of the bar to the axle using the factory hardware.
- Note:** Inspect the rubber bushing in the axle for wear or cracked. Replace with factory replacement bushing if needed.