




350 S. St. Charles St. Jasper, In. 47546  
Ph. 812.482.2932 Fax 812.634.6632  
[www.ridetech.com](http://www.ridetech.com)

**Part # 11389100**  
**99-06 Silverado Front MuscleBar**

**Components:**

- |   |          |                |
|---|----------|----------------|
| 1 | 90001768 | Front sway bar |
| 1 | 90001769 | Hardware Kit   |

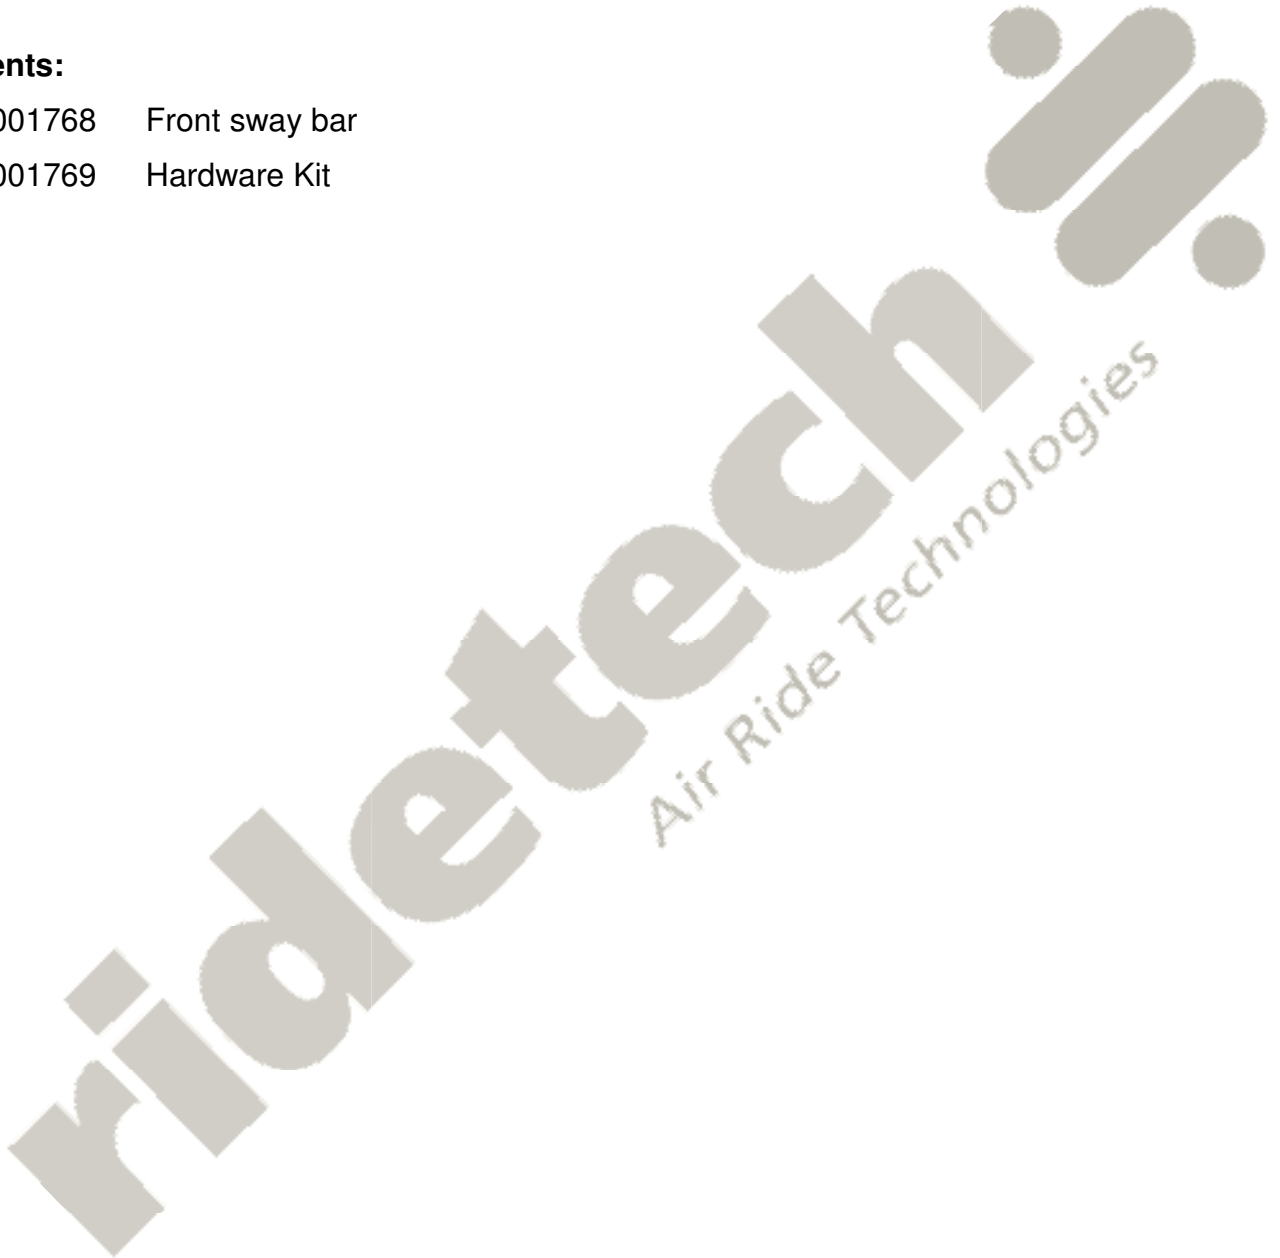


# MUSCLEbar™


by Air Ride Technologies

## Installation Instructions

This sway bar is designed for use with lower StrongArms.

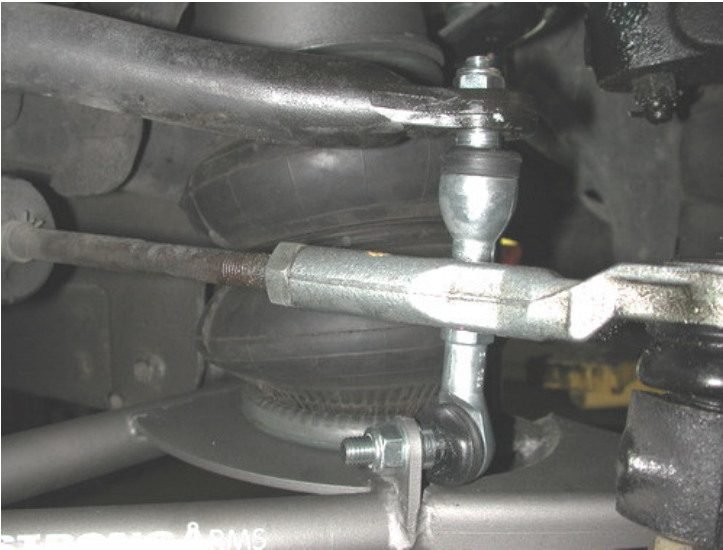

1. Apply lubricant to the poly bushing and slide it over the sway bar. Using the frame brackets supplied bolt the sway bar to the frame. Do not tighten the bolts yet.

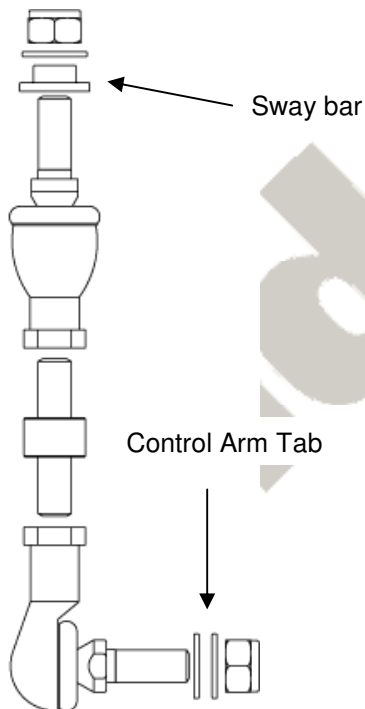

2. Bolt the PosiLink to the between the bar and lower arm. The T bushing will be installed between the PosiLink and the sway bar. 7/16" flat washer will be used at the other connection points.

3. Tighten the frame bolts.

4. Check clearance through full suspension through full suspension travel. Make sure the PosiLinks do not bind.