




INSTALLATION INSTRUCTIONS

MAKE: BMW
MODEL: 335i (F30)
YEAR: 2012-2013
ENGINE: L6-3.0L (t) N55

Cat-Back
304 Stainless Steel
49-36320-P
49-36320-B

aFe recommends professional installation of our products.

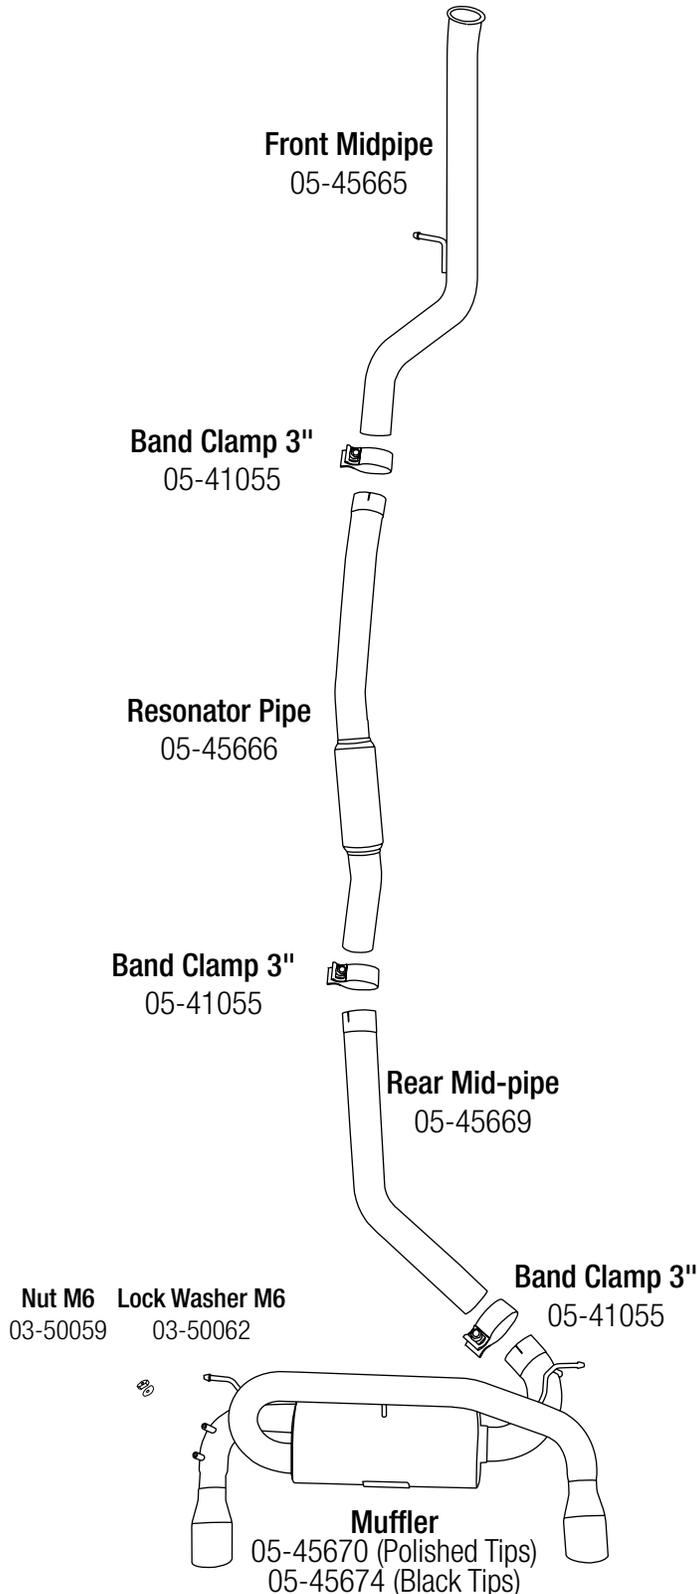

Caution: Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

- Step 1:** (Read Instructions prior to installation) Secure vehicle on jack stands (Refer to your manual for specified jack stand positions).
 - Step 2:** Remove the center brace under the O.E. exhaust system.
 - Step 3:** Un-plug the actuator drive at the rear of the O.E. muffler.
 - Step 4:** Loosen the band clamp securing the O.E. mid-pipe to the catalytic converter.
 - Step 5:** Un-bolt all rubber hanger mounts off the chassis and remove O.E. exhaust system.
 - Step 6:** Remove all rubber hangers off the O.E. exhaust and install onto the aFe exhaust system.
 - Step 7:** Using the original bolts, install the center brace removed from step 2 and tighten.
 - Step 8:** Remove the actuator drive off the O.E. exhaust and install onto the aFe muffler brackets (the fixing bow and exhaust flap will not be re-used). Use (x1) supplied M6 nut and lock washer to secure the original bottom bolt to the actuator drive.
 - Step 9:** Using the original band clamp and gasket (Replace if necessary) from step 4, install the aFe front pipe over the catalytic converter but do not tighten.
 - Step 10:** Install the bracket removed from step 5 and tighten.
 - Step 11:** Using (x1) supplied 3.0" aFe band clamp, install the aFe resonator pipe onto the front pipe but do not tighten.
 - Step 12:** Using (x1) supplied 3.0" aFe band clamp, install the aFe mid-pipe onto the resonator pipe but do not tighten.
 - Step 13:** Using (x1) supplied 3.0" aFe band clamp, install the aFe muffler pipe onto the mid-pipe but do not tighten.
 - Step 14:** Using the original bolts, secure the aFe muffler pipe rubber hanger mounts and tighten.
 - Step 15:** Align aFe exhaust and then tighten all band clamps.
 - Step 16:** Plug the actuator drive wire back on the actuator drive.
 - Step 17:** Verify all your work and remove from jack stand.
- Note:** It is normal for the aFe exhaust system to emit smoke for the first few minutes upon initial start-up.