




P.O. Box 1719
 Corona, CA 92878
 Support: 951-493-7100
 www.aFeFilters.com

Intake Kit Installation Instructions: 1995-1999 Volkswagen Golf/ Jetta GTI VR6 V6-2.8L

Kit Part #	51/54-10821	Tools Required	Part List:	3 Washer wavy M6
Make:	Volkswagen	5/16" nut driver or slotted screwdriver	1 Air filter (replacement # 24-40505)	1 7/16 Trim seal (26.5")
Model:	Golf/ Jetta GTI VR6	10mm socket or wrench	Pro Dry S™ 21-40505	1 Self Tapping Screw
Engine:	V6-2.8L	Ratchet and extension	1 Housing	
Year:	1995-1999		1 Intake Tube	
			1 Breather Filter	
			1 Hose Clamp #052	
			3 Screw M6x1x25	
			3 Nut M6	
			4 Washer flat M6	




Step 1
 Complete intake system. Verify all parts listed are present prior to beginning installation.

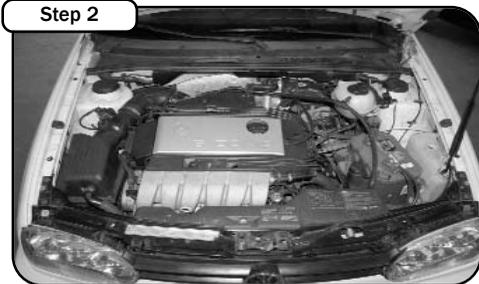


Step 2
 Stock intake system.



Step 3
 Unclip the top portion of the air box and remove from the engine bay. Remove the breather hose at the valve cover.

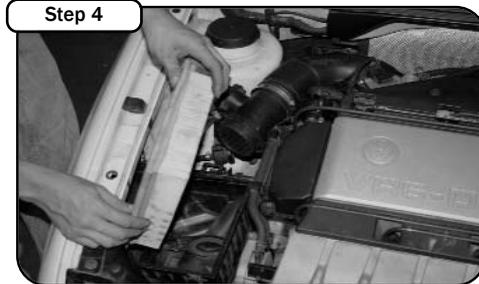

Step 4
 Remove the factory air filter.

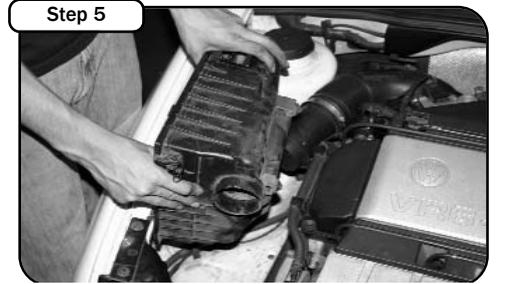

Step 5
 Remove the bottom half factory air box by grabbing the air box by the sides and lift up and out.



Step 6
 Place the supplied breather air filter on the OE location. Secure with the supplied hose clamp.




Step 7
 Secure the new intake tube to the new housing using the supplied screws, washers and nuts.




Step 8
 Place the supplied trim seal along the edge of the housing.



Step 9
 Position the new intake into the engine bay. Slide the MAF unit into the intake tube. Secure with the provided hose clamp.

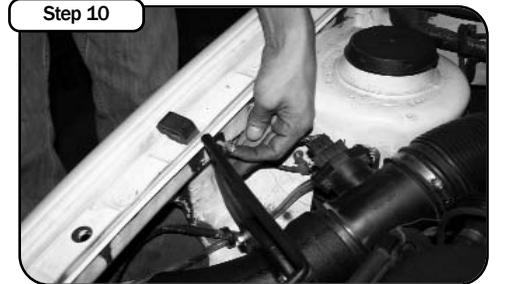

Step 10
 Secure the side of the housing with the supplied self tapping screw and washer.

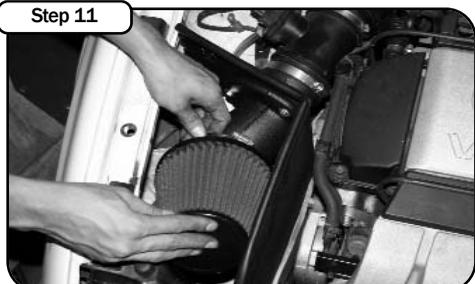

Step 11
 Install the new air filter into the housing secure the filter with the provided clamp. The air filter is pre oiled from the factory.



Step 12
 Your installation is now complete. Make sure you tighten all clamps and check all electrical connections. Re check periodically.

Installation Tip

For proper air filter installation. Mark the intake tube at 1" from the end of the tube. Insert air filter on tube up to the 1" line you marked. Tighten clamp to secure air filter to intake tube.

Note: Filter Cleaning and Re-oiling: When cleaning your aFe filter, be sure to use only aFe's "Restore Kit" (aFe P/N: 90-50001 blue oil aerosol, or aFe P/N: 90-50501 blue squeeze bottle oil Filter Replacement: Magnum FLOW PN: 24-40006 (black w/blue media). Pro Dry S™ P/N: 21-40505 (black w/ white media) Pro Dry S™ cleaning: see cleaning instruction sheet 06-00074