




## Part # TABT4038

1955-59 GM / Chevrolet Truck with Low Tunnel  
Full Insulation and Sound Dampening Kit

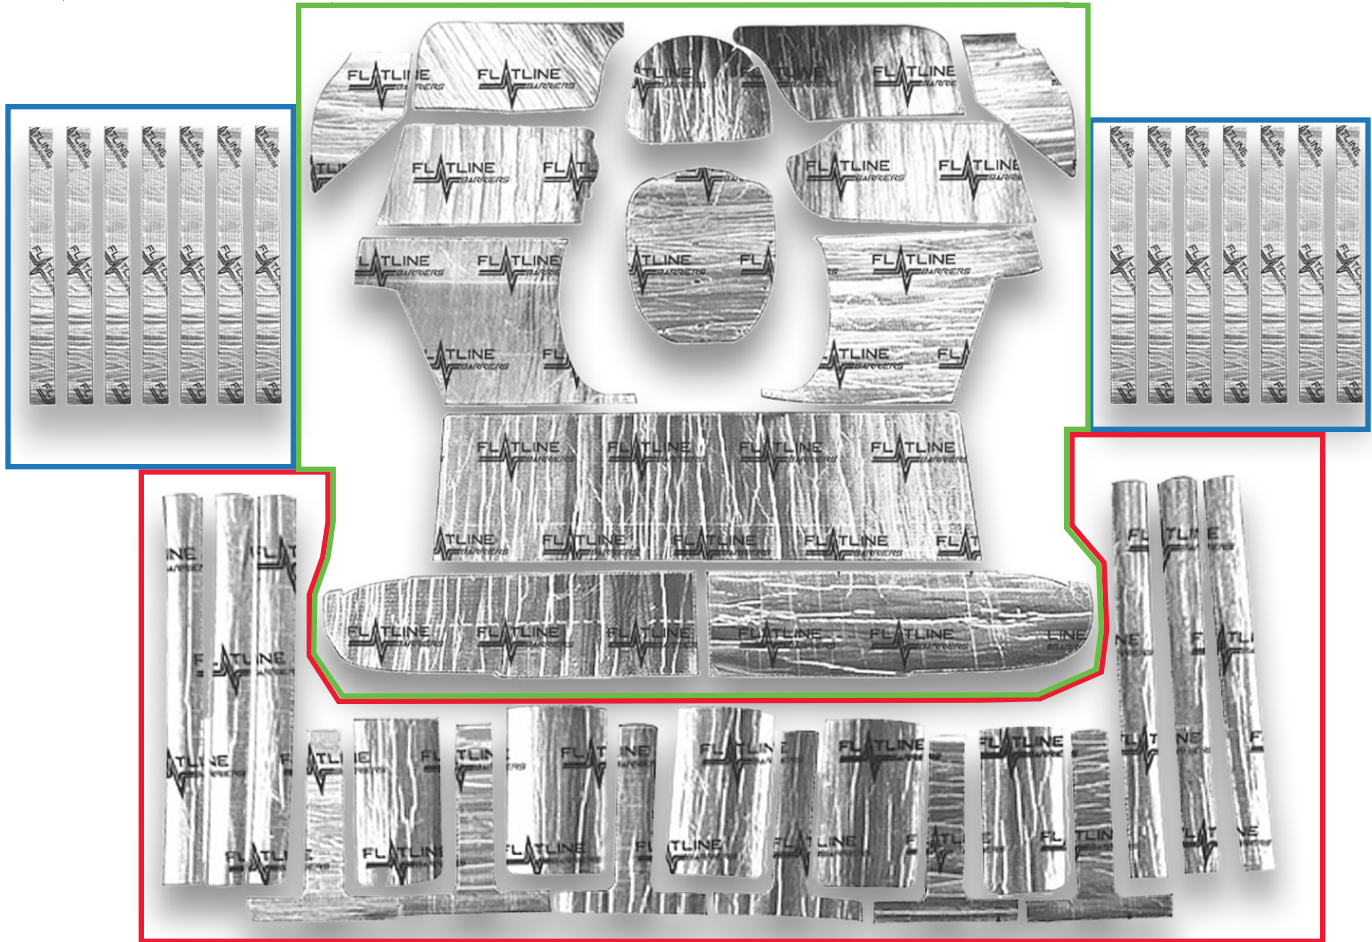

**TABT4033** - 1955-59 GM / Chevrolet Truck with Low Tunnel Floor Insulation and Sound Dampening Kit

**TABT4036** - 1955-59 GM / Chevrolet Series 2 Truck Cab Wall Insulation and Sound Dampening Kit

**TABT4037** - 1955-59 GM / Chevrolet Series 2 Truck Door Insulation and Sound Dampening Kit

### Installation Directions:

1. Clean any dirt, debris, or grime from the intended installation area using a degreasing agent.
2. Allow intended installation area adequate time to dry.
3. Remove the kit from its packaging, and dry fit the components allowing you to see exactly how the product will be placed for final installation.
4. Now you are ready to install. Remove the protective layer exposing the adhesive on your first piece applying it to its final position, using light pressure.
5. Repeat step 4 for each individual component until the full kit is installed.

For further information please contact [sales@flatlinebarriers.com](mailto:sales@flatlinebarriers.com)