

2010-2014 Ford F-150 Raptor SVT 6.2L V8

2011-2014 Ford F-150 Platinum, Lariat, Harley Davidson 6.2L V8 2011-2013 Ford F-250, F-350 F-450, F-550 6.2L V8 Applications

85mm Throttle Body Part #1823

Special Tools Required:

Install Time: Approximately

1 Hour


No special tools required

Difficulty:

2 out of 5

Follow these instructions carefully to ensure correct fitment and operation.

STEP 1

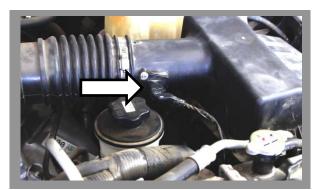

Disconnect the Mass Air Flow (MAF) Sensor.

STEP 2



Remove the two vent hoses going into the factory intake system.

STEP 3





Loosen the two 10mm mounting bolts that secure the factory intake system to the vehicle. Also remove the clip on the passenger side of the stock intake system using pliers.





Check us out on Youtube www.youtube.com/bbkperformance

GO TO NEXT PAGE





For any questions, email us: tech@bbkperformance.com

installation instructions



2010-2014 Ford F-150 Raptor SVT 6.2L V8

2011-2014 Ford F-150 Platinum, Lariat, Harley Davidson 6.2L V8 2011-2013 Ford F-250, F-350 F-450, F-550 6.2L V8 Applications

85mm Throttle Body Part #1823

STEP 4





Unclip the three clips at the air box and remove the entire system out of the vehicle. NOTE!!! The rubber coupler also needs to be removed from the throttle body.

STEP 5



Disconnect the electrical connector at the throttle body and remove the throttle body from the vehicle.

STEP 6



Bolt on the BBK Throttle Body and reconnect the connector.

STEP 7

Re-install the Air Intake System. Turn the vehicle on and let idle for a few minutes to make sure there are no problems.







Check us out on Youtube www.youtube.com/bbkperformance

WWW.BBKPERFORMANCE.COM

