



A BBK Company

2005-2006 Mustang GT/ V6
Gripp Tubular Strut Tower Brace
Part # 2617, 26170, 26175

I N S T A L L A T I O N I N S T R U C T I O N S

- Step 1** Attach the decorative plate to the strut tower brace using the supplied button head cap screws and nylock nuts.
- Step 2** Remove the bolt that attaches the negative battery cable terminal ground loop to the passenger side strut tower tab. *(for this install, the terminal will be relocated under the strut tower tab.)*
- Step 3** Remove the bolts that attach the vapor recovery canister bracket to the driver side strut tower tab. *(for this install, the bracket will be relocated under the tab using the coupling nut as spacers)*
- Step 4** Set the BBK strut tower over the strut tower tabs.
- Step 5** Attach the brace to the strut tower tabs using the supplied flange hex bolts.
Note: *Some models may not have threaded holes in the strut tower tabs. For this we have supplied extra nylock nuts.*
- Step 6** Tighten the supplied coupling nuts onto the protruding ends of the two outboard screws under the driver side strut tower tab where the bracket will mount. **These are the same two holes that the bracket was originally attached to.**
- Step 7** **(Photo A)** Line up the two bolt holes in the vapor recovery canister bracket with the bottom of the coupling nuts. Tighten the remaining two flanged hex bolts up through the bracket and into the coupling nuts.
- Step 8** Place the ground loop terminal under the passenger side strut tower tab and over the protruding threads of one of the bolts. Tighten one of the supplied nylock nuts over the threads to secure the loop.

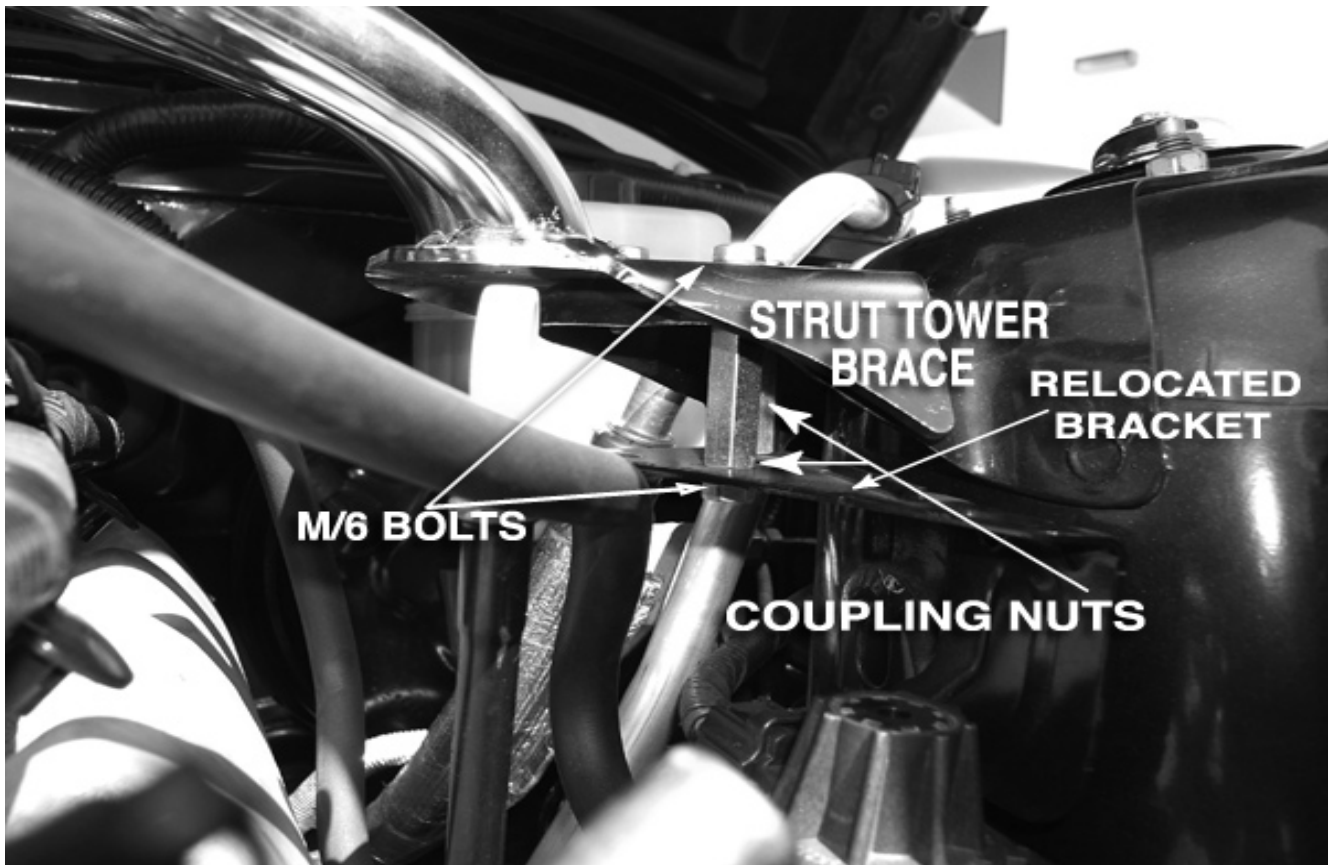


Photo A

