



INSTALLATION INSTRUCTIONS

2011-2014 Ford Mustang GT

2005-2010 Ford Mustang GT

Axle Back System

Part # 4100, 4101, 41005, 41015



Special Tools

Required:

- Impact or Ratchet
- Pry Bar

Install Time:

Approximately
30-45 mins

Difficulty:

3 out of 5

Follow these instructions carefully to ensure correct fitment and operation.

STEP 1

- Lift and support the vehicle.

STEP 2



- Starting on the driver side, loosen the clamps at the mufflers and mid pipes.

STEP 3



- Using a pry bar or grommet removal tool, remove the rubber grommet located by the muffler tip from the muffler hanger.

STEP 4



- Twist the mid pipe so the muffler has enough clearance to be removed.



Join our Facebook page
www.facebook.com/bbkperformance



Follow us on Twitter
[@bbkperformance](https://twitter.com/bbkperformance)



Check us out on Youtube
www.youtube.com/bbkperformance

GO TO NEXT PAGE

WWW.BBKPERFORMANCE.COM

For any questions, email us:

tech@bbkperformance.com

installation instructions

1

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.

INS-198

Axle Back System

STEP 5



- Slide the muffler towards the front of the vehicle and remove.

STEP 6 (Only for 2011-14 Mustang GT)



- NOTE!!** On 2011-2013 Models you will need to remove the factory clamp from the stock muffler to use on the inlet tube for the BBK Axle Back System. The clamp has a very small and brittle tack weld on it only for the factory production line use. Its easily removed by cutting or wiggling the clamp back and forth until it breaks off the stock muffler.

STEP 7

- Repeat steps 2-6 for the passenger side.

STEP 8



- Starting on the driver side, slide the inlet pipe through the 2 hanger grommets and into the mid pipe and snug the clamp to hold the tubing in place.

STEP 9



- Slide the muffler over the inlet pipe, then slide the grommet closest to the rear bumper onto the muffler hanger.



Join our Facebook page
www.facebook.com/bbkperformance



Follow us on Twitter
[@bbkperformance](https://twitter.com/bbkperformance)



Check us out on Youtube
www.youtube.com/bbkperformance

GO TO NEXT PAGE 

WWW.BBKPERFORMANCE.COM

For any questions, email us:
tech@bbkperformance.com

installation instructions

2

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.

INS-198

Axle Back System

STEP 10



- Slide and snug the exhaust tip onto the outlet tube of the muffler.

STEP 11


- Repeat steps 8-10 for the passenger side

STEP 12



- With all the clamps snug, make any fitment adjustments starting at the front clamps on the mid pipe and ending at the muffler tips, then tighten.

2011-2013 Mustang GT Dyno Results

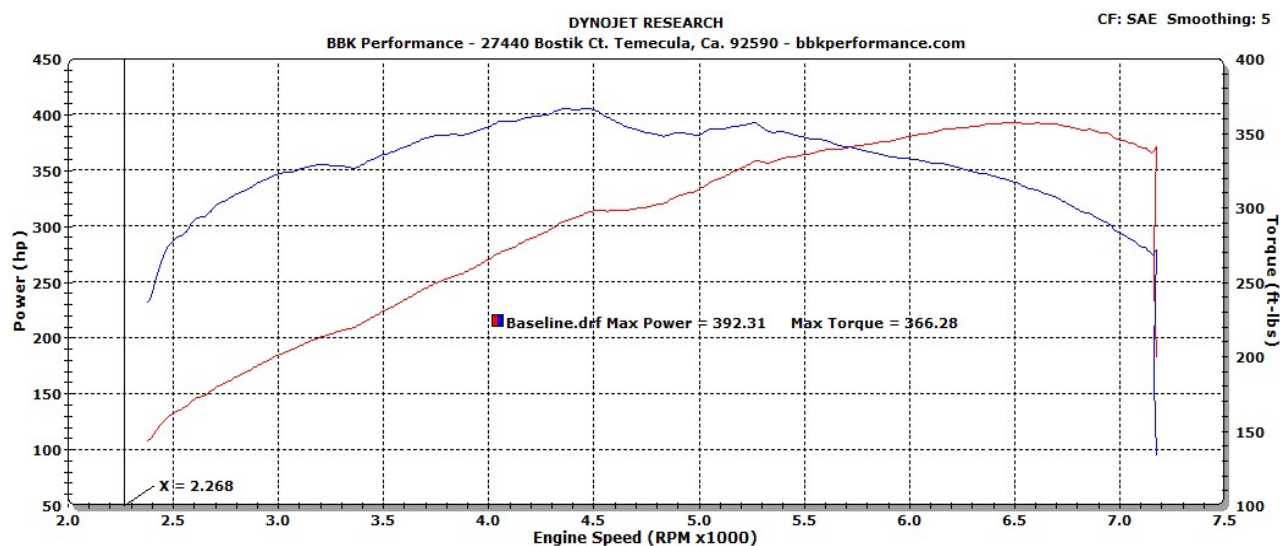

Join our Facebook page
www.facebook.com/bbkperformance



Follow us on Twitter
[@bbkperformance](https://twitter.com/bbkperformance)



Check us out on Youtube
www.youtube.com/bbkperformance

GO TO NEXT PAGE

WWW.BBKPERFORMANCE.COM

For any questions, email us:
tech@bbkperformance.com

installation instructions

3


IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.



2011-2014 Ford Mustang GT

2005-2010 Ford Mustang GT

Axle Back System

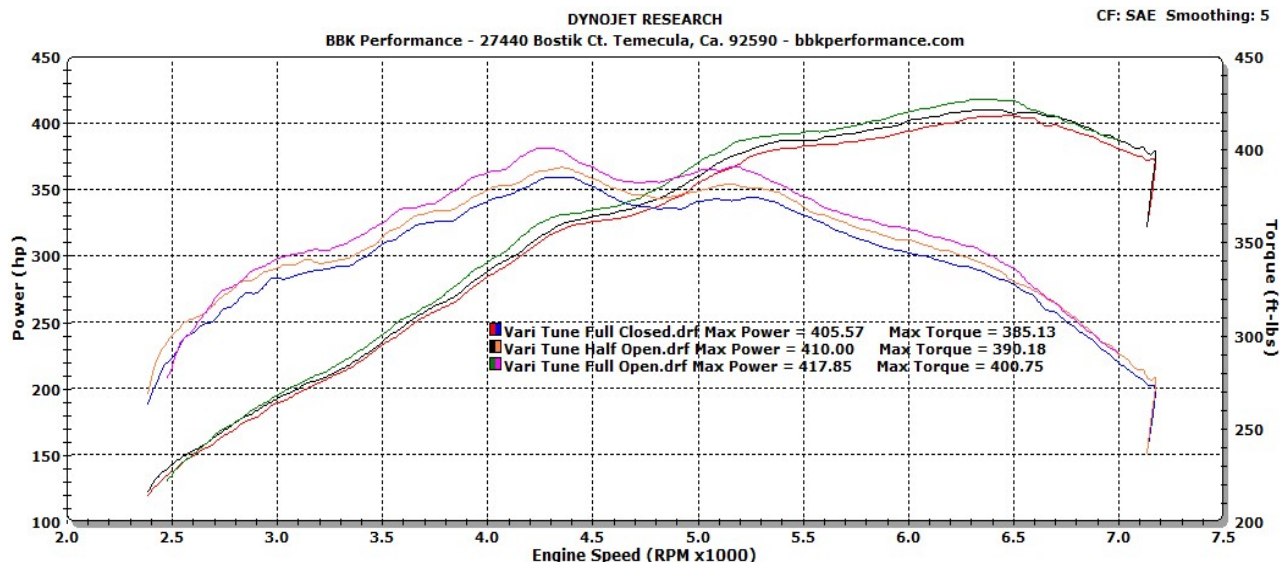

Hardware Included

- Inlet Tubes (2pcs)
- 4102B- Muffler Tips
- Muffler (2pcs)
- KIT4101/5 SCP-248-275 2-3/4" Band Clamp (2pcs)
SCP-248-300 3" Band Clamp (2pcs)
- KIT4100/5 SCP-248-250 2-1/2" Band Clamp (2pcs)
SCP-248-275 2-3/4" Band Clamp (2pcs)
SCP-248-300 3" Band Clamp (2pcs)

Stainless steel kits come with SCP-275-### clamps.



Join our Facebook page
www.facebook.com/bbkperformance



Follow us on Twitter
[@bbkperformance](https://twitter.com/bbkperformance)



Check us out on Youtube
www.youtube.com/bbkperformance

WWW.BBKPERFORMANCE.COM

For any questions, email us:
tech@bbkperformance.com

installation instructions

4

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.