

INSTALLATION PREPARATION

TOOLS NEEDED FOR INSTALLATION:

The majority of these tools will be needed to install your Burco Redi Cuts® or Redi-Set-Go™ mirror replacement.


- PUTTY KNIFE
- FLAT HEAD SCREWDRIVER
- SCISSORS
- TOWEL
- SILICONE OR URETHANE
- RUBBING ALCOHOL
- RUBBER MALLET
- GLASS CLEANER

STEPS FOR SAFETY:

Please follow safety steps prior to installation.

- **SAFETY GLASSES**
Safety glasses are needed to protect eyes against flying glass or debris.
- **CUT-RESISTANT GLOVES**
Cut-resistant gloves must be worn when handling broken glass.
- **LONG SLEEVES**
A long-sleeved shirt is recommended.
- **PROPER VENTILATION**
When working with adhesives and cleaners, proper ventilation is recommended.

INSTALLATION ILLUSTRATION

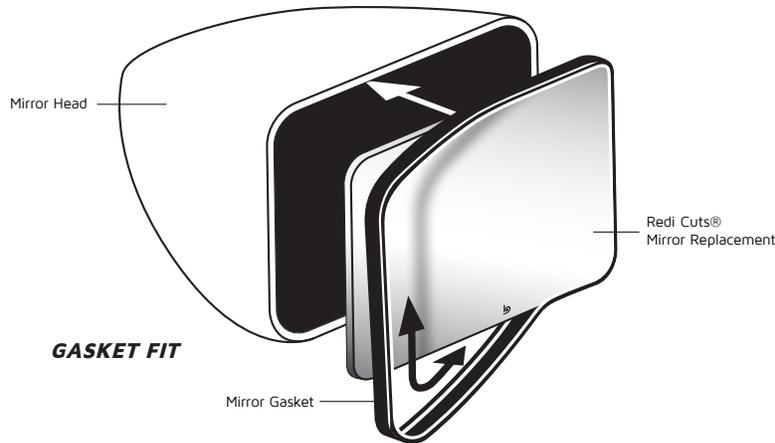

STEP-BY-STEP INSTRUCTIONS

Install your gasket fit Redi Cuts®

STEP 1: REMOVE ALL BROKEN GLASS

Remove the broken glass and gasket from the mirror head with a small screwdriver or fiber stick. You may have to remove a framing screw.

STEP 2: CLEAN GASKET

If possible, use your existing gasket. Remove broken glass from the gasket and clean with glass cleaner.

STEP 3: PLACE GASKET AROUND MIRROR

Install the gasket around the mirror. Be sure that the front of the mirror is facing out.

TIP: Burco part number can be read from the front.

STEP 4: PREP GASKET

Lubricate the edge of the gasket with silicone or urethane for ease of installation into the mirror frame.

STEP 5: INSTALL REDI CUTS™

With the gasket installed on your Redi Cuts®, gently tap the gasket edges into the mirror head with a rubber mallet.

TIP: Tap the gasket edges, not the mirror, to reduce the risk of breakage.

STEP 6: CLEAN UP

Clean your installed Redi Cuts® mirror replacement with glass cleaner.

© 2016 Burco, Inc.