

INSTALLATION INSTRUCTIONS

Thank you for purchasing genuine Design Engineering, Inc. products. Be sure to always wear the proper safety equipment when installing any DEI product. Design Engineering Inc. WILL NOT BE HELD LIABLE FOR IMPROPER INSTALLATION OR USE OF THIS PRODUCT. Please follow all instructions provided. If you are unsure of any installation procedure, please contact a certified technician.

DESCRIPTION: 50027

1973-1987 C/K Truck Damping Material Kit

KIT CONTENTS:

- 8 - 12" x 24" damping material
- 3 - 12" x 12" damping material
- 1 - Roll damping material tape
- Installation roller
- Instructions

TOOLS NEEDED:

Vacuum/broom
Cleaner/Degreaser

SAFETY:

Safety glasses
Gloves

NOTE OF CAUTION: Wear eye and hand protection when installing all materials. Edges of damping material may be sharp. Use caution when installing damping material

OVERVIEW: This kit controls noise and vibration on 1973 to 1987 Chevy GMC C/K trucks.

**Preparation**

STEP 1. Remove your seats, floor console and carpet according to the manufacturer's instructions.

STEP 2. Once the floor pan is exposed, clean all debris, grease, and rust from the area. Now would also be a good time to coat any areas using Boom Mat Prep spray (50491) to seal and convert any rust and corrosion.

Installation

STEP 1. Using Figure 2 & Figure 3 as a guide, layout the pieces of Boom Mat Damping Material in those locations.

STEP 2. Peel back plastic liner from damping material and press pieces in place. Using an installation roller, roll material to make sure you get good adhesion to floor pan.

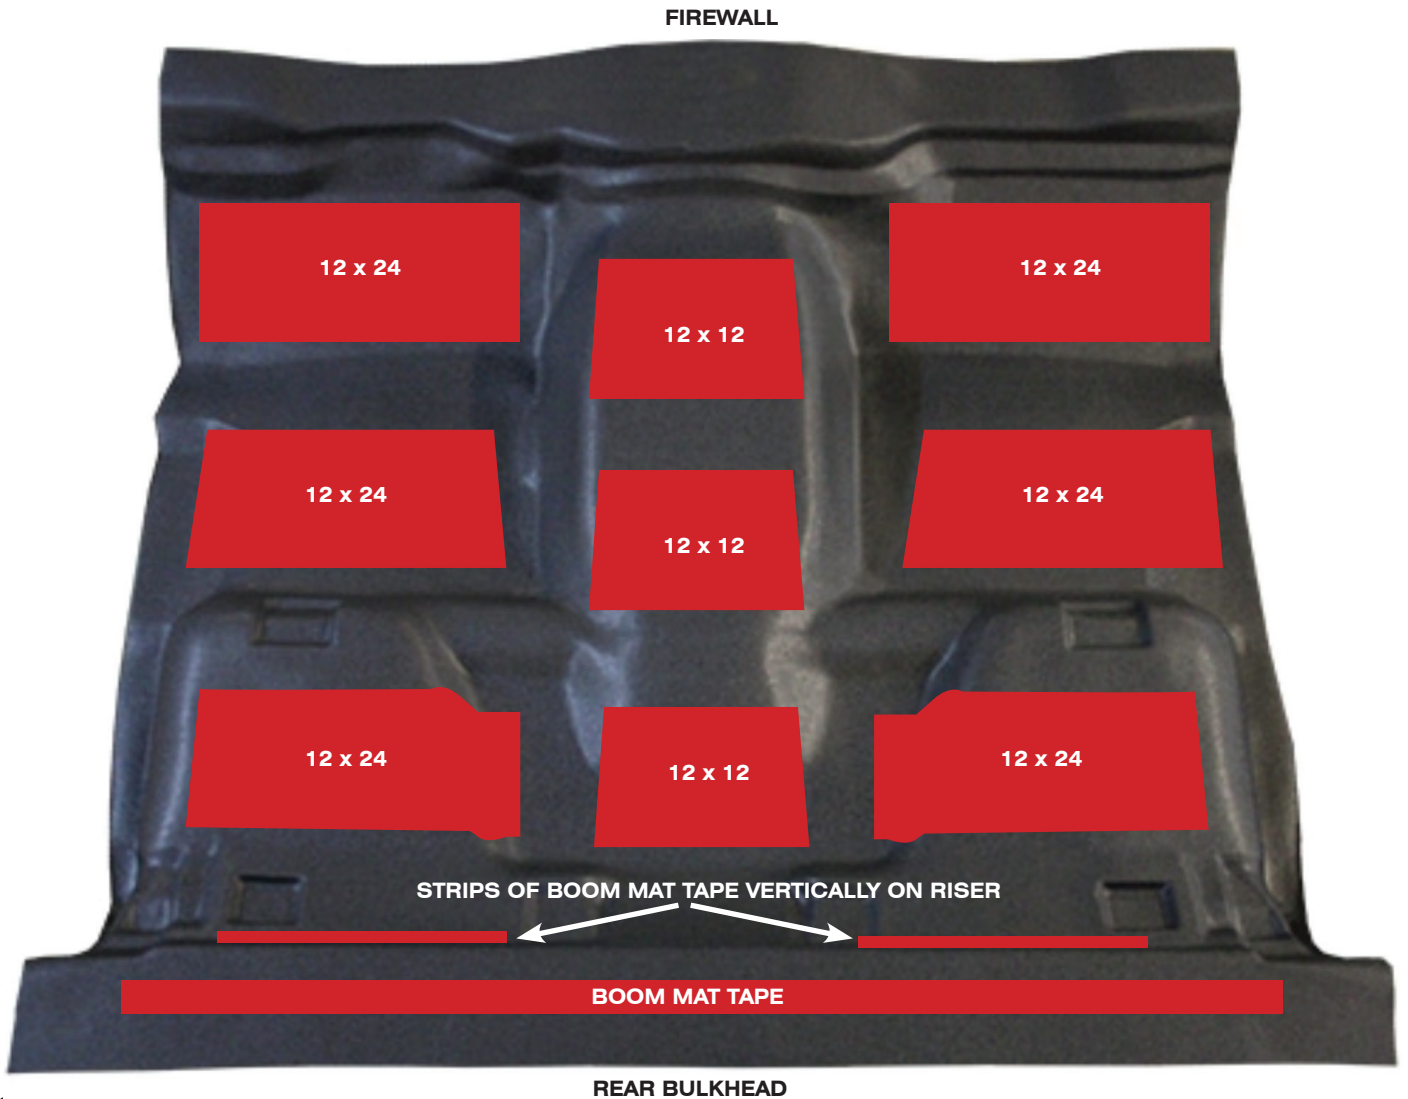


FIG. 2
Install damping material in these approximate locations. The perfect placement is not critical. But good adhesion is key. Make sure to press material in place with roller to ensure good adhesion. (View from above)



FIG. 3 Rear Bulkhead
Install damping material in these approximate locations. The perfect placement is not critical. But good adhesion is key. Make sure to press material in place with roller to ensure good adhesion. (View from driver side door)

NOTE: We have provided extra Boom Mat Tape that can be used in other areas or in your doors as needed.