

# Hellwig PRODUCTS.com


559-734-7451 800-367-5480 FAX 559-734-7460

## INSTALLATION INSTRUCTIONS

### Rear Stabilizer Bar 5813

1965-70 Chevrolet Full Size

Thank you for purchasing a quality Hellwig Product.

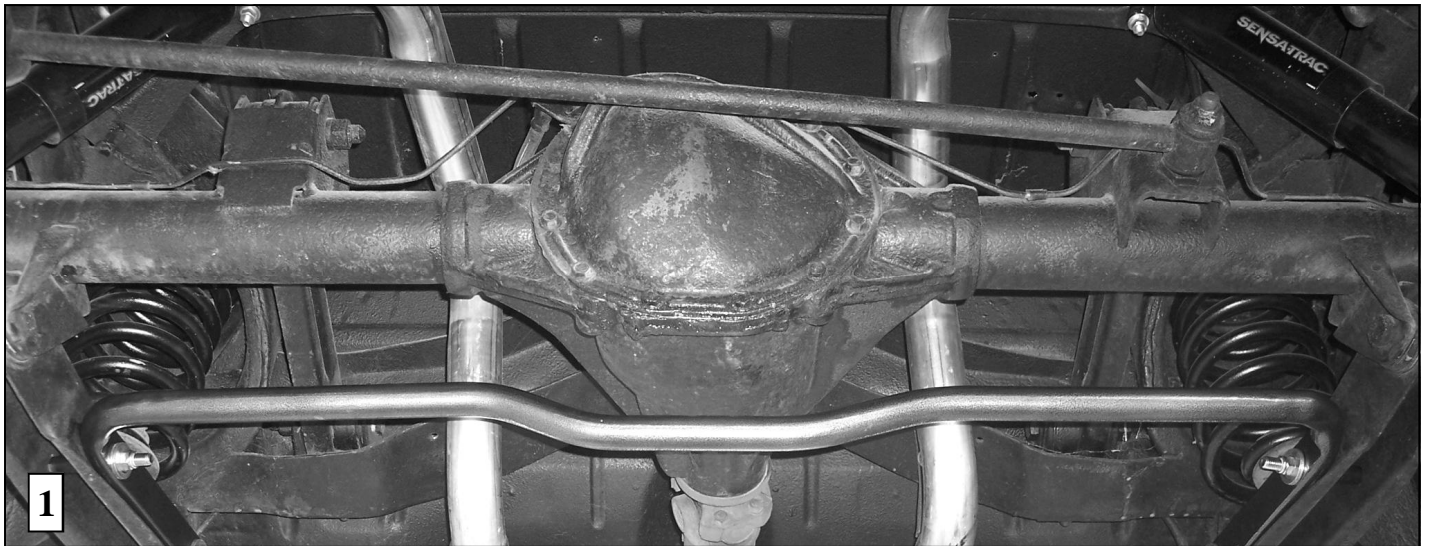

# Hellwig PRODUCTS.com

559-734-7451 800-367-5480 FAX 559-734-7460

## TORQUE TABLE

Bolt Size 3/8"— 35 ft lbs \* Bolt Size 7/16"— 45 ft lbs\* Bolt Size 1/2"—75 ft lbs \*Bolt Size 9/16"— 90 ft lbs

**SAFETY: BEFORE BEGINNING INSTALLATION BE SURE TO SET THE PARKING BRAKE AND CHOCK THE WHEELS.**

1. Ensure that the vehicle is secure and stable before working under the vehicle.
2. Lay out holes in lower control arms as shown in diagram. Locate rear hole 6 inches from center of rear axle bushing. Locate forward hole 6 inches forward of rear hole. Install sway bar between control arms and check fit to marked holes.
3. After checking hole locations for fit, remove sway bar and drill a 1/2" hole through both walls of the control arm in marked locations. Use a transfer punch or other means to mark holes in outer walls so that holes are square.
4. Install spacers in control arm as shown in photo (2). The spacers may need to be ground down to fit between the walls of the control arms. They are made slightly long to accommodate variations in the factory control arms. Spacers must be used to avoid crushing the control arms when the bolts are tightened.
5. Attach sway bar to control arm using supplied hardware.
6. Torque bolts to 40 ft-lb
7. **Bounce the vehicle checking for clearance on all under carriage components.** Test drive the vehicle and re-check all clearances and the installation alignment. Adjust as needed. Re-check your installation after one week of driving and periodically on a regular basis.

**ATTENTION INSTALLER: BE SURE THAT THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET, ALL IMPORTANT NOTE CARDS AND THE WARRANTY FORM**

