## 11617 74-89 MERCEDES BENZ SL COUPE / ROADSTER

## 12/7/2012


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 1,500 LBS. TRAILER WEIGHT & 150 LBS. TONGUE WEIGHT.

\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

\*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\*

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

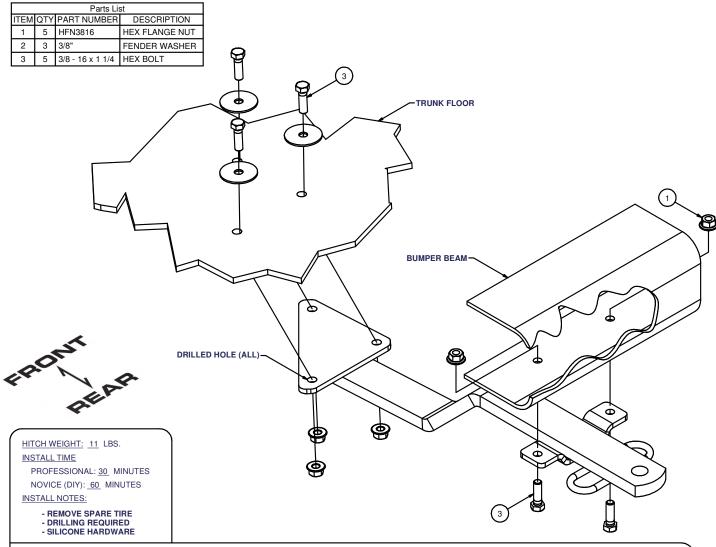

## **INSTALLATION STEPS**

- 1. Remove spare tire. Position the hitch against the underside of trunk floor(spare tire well) and rear bumper as shown. Adjust the front/rear for bumper clearance.
- 2. Using the hitch as a template, mark and drill (3) places in trunk floor and (2) places in rear bumper surface for 3/8" bolts.
- 3. Fasten hitch into position. Be sure to use fender washers opposite the hitch as shown.
- 4. Torque all 3/8" fasteners to 45 lb-ft.
- 5. Use silicone sealant around fasteners in floor pan to seal out water and exhaust fumes.
- 6. Reinstall spare tire.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.