
HUMMER H3

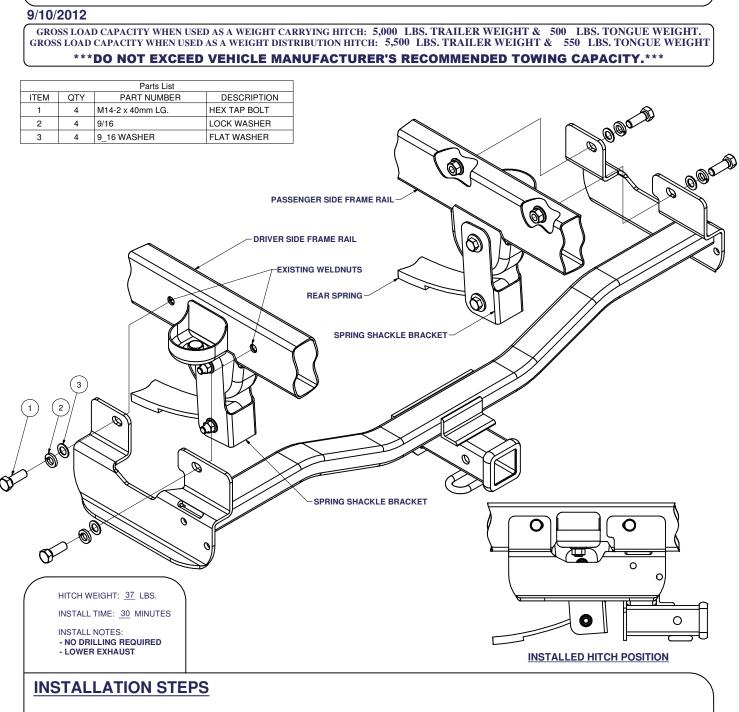

- 1) Remove 2 existing bolts from each frame rail as shown. (NOTE: Lower exhaust for ease of installation)
- 2) Raise hitch into position, in front of the spring shackle brackets.
- 3) Install supplied 14mm bolts lock washers and flat washers as shown.
- 4) Torque all 14mm fasteners to 126 lb-ft.

13270

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.