CURT The FIRST Name in Towing Products** Scan for helpful INSTALLATION INSTRUCTIONS

51457 APPLICATIONS

Make	Model
Ram	1500
Ram	2500
Ram	3500

NOTE

All steps must be followed to ensure the CURT brake control harness will function properly. Once installed, test for proper function by following the brake control unit instruction manual.


BRAKE CONTROL HARNESS



BRAKE CONTROL HARNESS LOCATION GUIDE

Representative vehicle shown below

BH2- Under dash, to right of steering column

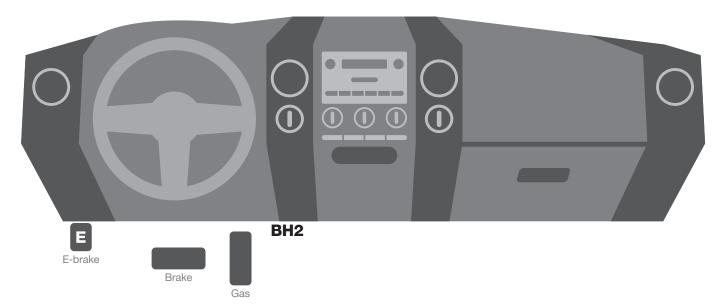

INSTALLATION

Step 1

Locate the grey, vehicle brake control harness connector to the right side of the steering wheel, underneath the dash, taped to another harness. The connector will be similar to that on the CURT brake control harness. If there is foam padding on the connector remove it for install.

Step 2

Insert the connector on the CURT brake control harness into the vehicle connector. Make sure the connector is fully inserted with locking tabs in place (A).





Step 3

Insert the brake control harness's black connector into the brake control's quick plug connector (B). Secure the brake control harness with the provided cable ties, avoiding any pinch points.

Step 4

Complete the installation using the brake control instructions. Mount the unit as directed and perform test procedures as instructed in the brake control user manual.