

# 55106

HONDA CR-V

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

2/9/09

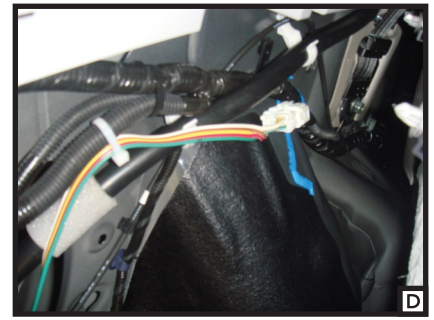

## English

1. Open the rear hatch and remove storage area cover, rubber mat & spare tire cover. [A]

2. Using a 10mm socket remove the driver and passenger side D-rings and remove the trunk scuff fascia panel. [B]

3. Using a pry tool carefully pull back the driver side interior trim panel. (A clip removal tool may be required). Start separating the trim panel in the rear of the vehicle and work your way up and forward to expose the mate to the T-connector. [C]

4. Plug the T-connector in to the vehicle's harness connector until they lock into place. Take care not to damage the locking tabs. [D]

5. Route the remaining part of the T-connector behind the trim panel toward the rear of the vehicle. Find a suitable location for the black converter box and mount using the double-sided tape provided. [E]

6. Route the the 4-flat to the spare tire area for storage and reinstall all parts removed.

7. Test the installation with a test light or a properly wired trailer.

### WARNING!

Verify miscellaneous items the may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury



55106