

55343

FORD ECONOLINE
FORD ESCAPE
MAZDA TRIBUTE

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.




¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

02/11/09

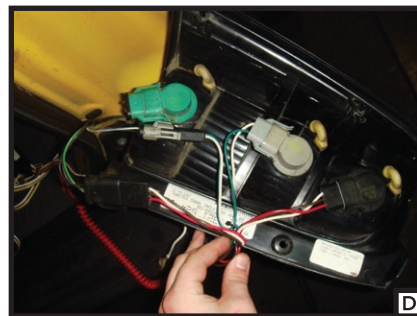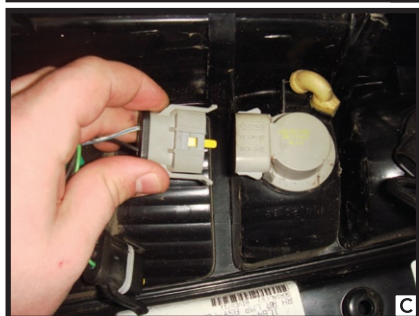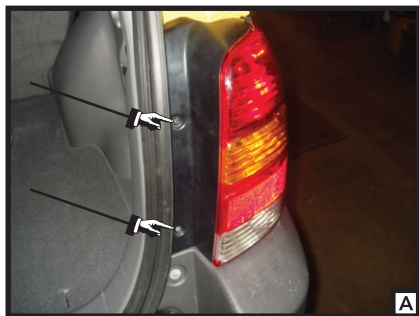

English

1. On the passengers side remove the taillight assembly by removing the two phillips head screws holding it in place. [A][B] Locate the vehicles taillight wiring harness. Disconnect the top two connectors from the taillight assembly. Repeat on the driver's side only disconnecting the middle connector. [C]

2. On the passenger side insert the T-connector end with the red wire in-between the top disconnected connectors. Insert the T-connector end with the green wire in-between the other separated connectors. [D]

3. Starting on the passenger's side route the T-connector end with the yellow wire and 4-Flat wire down thru the opening between the bumper and body under the taillight housing. [E] Route the wire along the backside of the bumper to the driver's side and up thru the opening. Insert the T-connector end with the yellow wire in-between the separated housing.

4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

6. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



55343