

55354

JEEP CHEROKEE

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

5/30/08

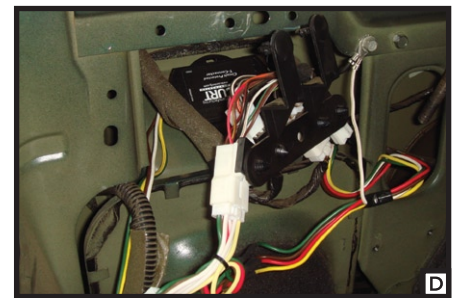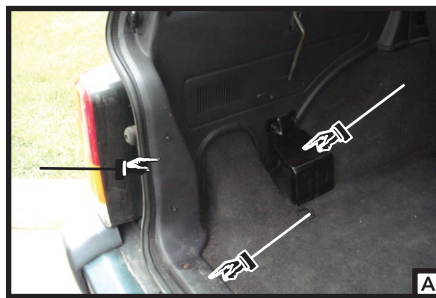

English


1. Open the rear hatch of vehicle. Remove the hatch threshold, spare tire, spare tire bracket using a phillips screwdriver and 10mm socket. [A]
2. Pull back the interior trim panel to reveal a housing connection matching that of the T-connector. [B] Separate the harness connectors, being careful not to break the locking tabs. [C]
3. Using a pry tool, pry trim fasteners out on black plastic wire bracket and adhere black box on T-connector to metal using the double-sided tape provided. [D]
4. Insert the T-Connector between the harness connectors and lock into place. Be sure that connectors are fully inserted with locking tabs in place. [D]
5. Locate a suitable grounding point near the adapter. (Do not drill into vehicle floor or bed). Clean dirt and rustproofing from area. If needed drill a 3/32" hole and secure the white wire using the eyelet and screw provided.
6. Route the 4-flat wire to the center of the vehicle and out of the hatch when in use. When not in use roll up and store in an out of the way location in the rear cargo area. [E] Reattach the interior panel, hatch threshold, spare tire and spare tire bracket to their original positions.

WARNING!

Verify miscellaneous items may be hidden behind or under and surfaces before drilling to avoid damage to vehicle and/or personal injury.

Español

Français

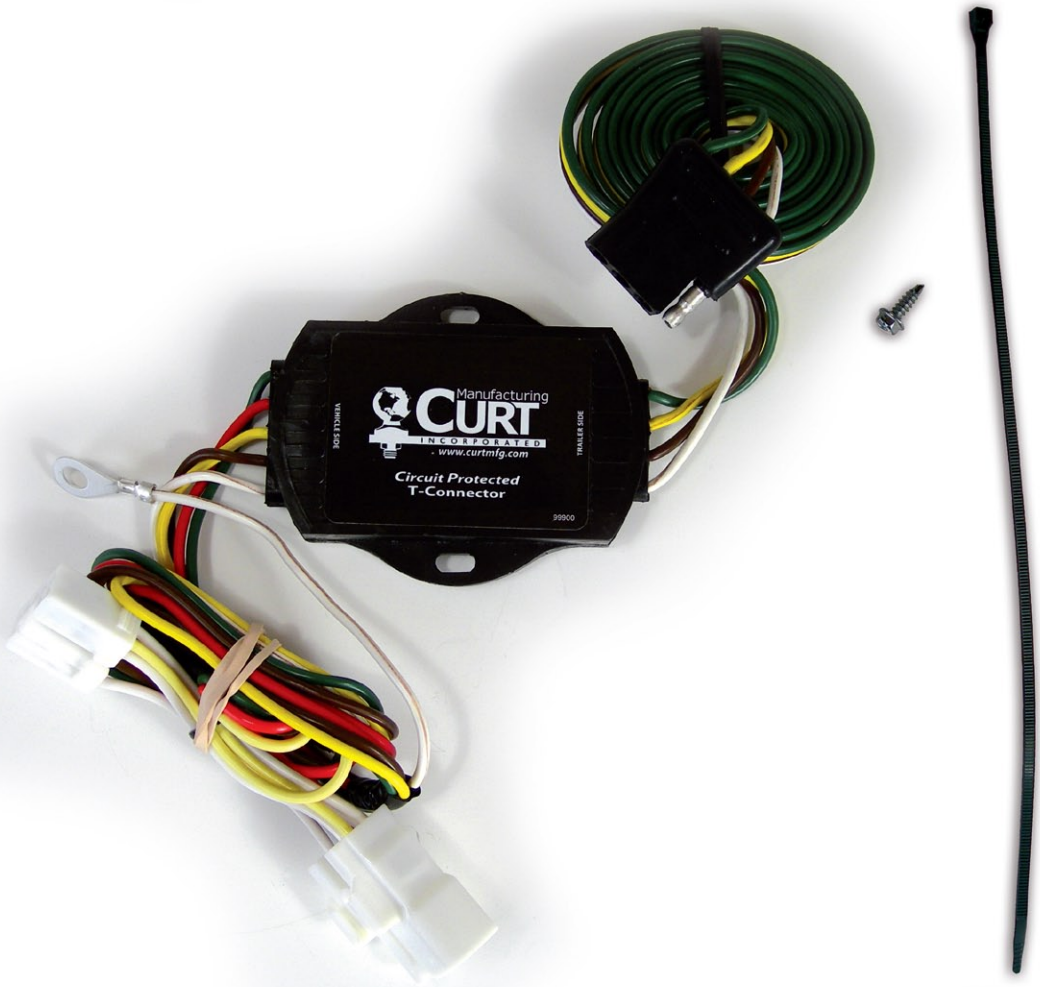

55354