

55356

JEEP TJ
JEEP WRANGLER

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

01/23/09

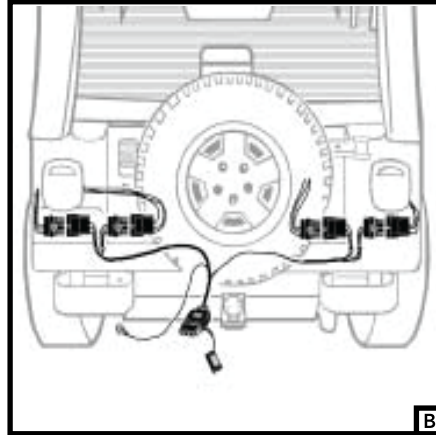

English

1. Temporarily remove each of the protective covers under the vehicle next to the rear bumper. **A** Locate the vehicle's wiring harnesses underneath the vehicle behind the protective covers. There will be connection points matching the ends of the T-connector on both sides of the vehicle. **B**

2. Beginning with the driver's side, separate the vehicle's wiring harness connectors, being careful not to break the locking tabs.

3. Insert the T-connector containing the Yellow wire between the vehicle connectors. Ensure that the connectors are fully inserted with locking tabs in place.

4. Repeat steps 2 & 3 for the passenger's side, using the T-connector end containing the Green wire.

5. Locate a suitable grounding point near the adapter such as the vehicle frame or cross member. Secure the White wire using the eyelet and screw provided.


6. Secure any loose wires to the vehicle's crossmember using the cable ties provided. Re-install protective covers removed in step 1.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid any damage and/or personal injury.

Español

Français

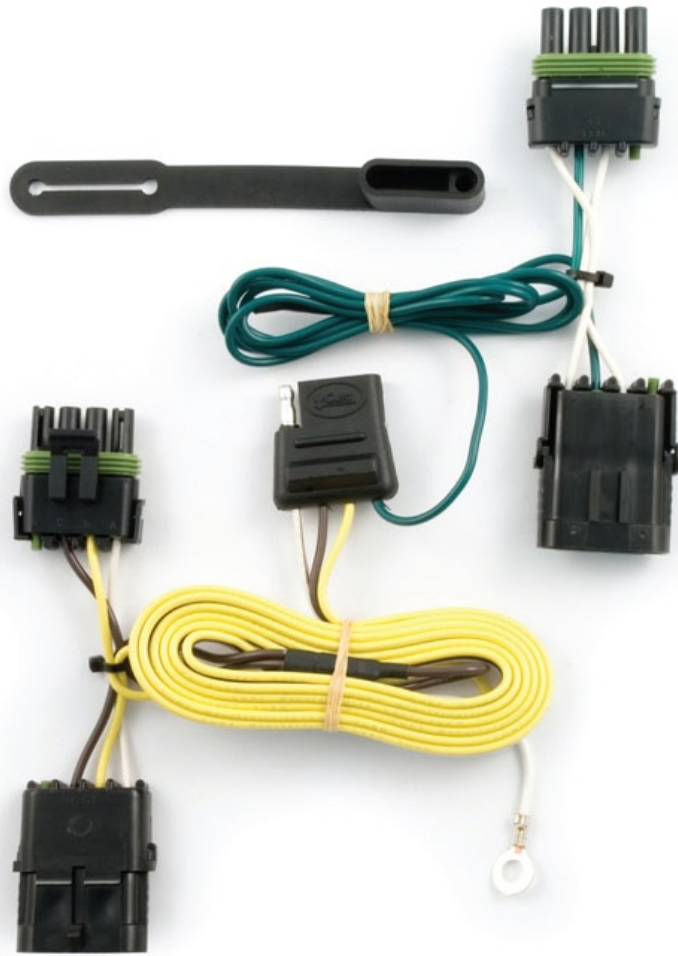

55356