

# 55376

CHRYSLER TOWN & COUNTRY  
DODGE CARAVAN  
DODGE GRAND CARAVAN  
PLYMOUTH VOYAGER

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

5/30/08

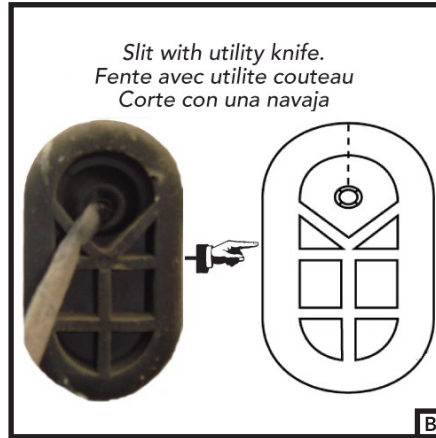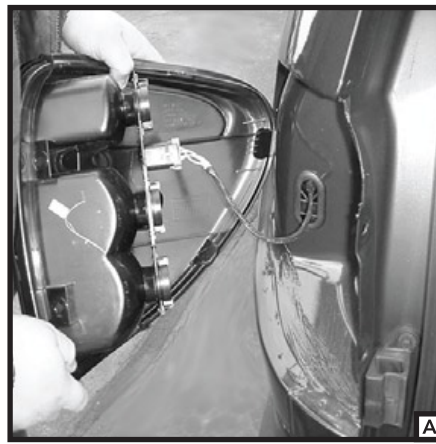

## English

1. Remove the left (drivers) side taillight assembly. There will be a black connector on the vehicle wiring harness similar to that found on the T-connector harness. Slide the red connector lock aside and disconnect the vehicle harness from the taillight assembly taking care not to damage the locking tab. **A**
2. Carefully pull the vehicle wiring harness and the rubber grommet out a short distance from the vehicle and slit the rubber grommet as shown. **B**
3. Remove the vehicle jack storage cover located inside the rear of the vehicle on the left (drivers) side and the hatch threshold. **C**
4. Pull back the left trim panel to expose the area behind. It may be necessary to remove the tape covering the access hole between the jack storage compartment and the area behind the taillight assembly. Route the T-connector housings behind the trim panel out through the taillight. **D**
5. Plug the matching T-connector harness end with the yellow wire between the taillight assembly and the vehicle connector removed in step 1. Secure the connectors together with the red locking tabs. Insert the harness wires in grommet slit and seat in mounting hole.
5. Locate a clean accessible mounting location on the vehicle near the wiring harness ends within reach of the white wire and grounding eyelet and drill a 7/64" hole.
6. Mount the white wire using the ground screw and eyelet provided.

## Español

## Français

## English

7. Route the 4-flat plug on the T-connector harness behind the trim panel and into the jack storage compartment. Secure black box and additional wiring. Reposition the tape removed in step 4 over the wires to seal the jack compartment.

8. Return the taillight assembly to its original position and secure with the fasteners removed in step 1. Replace the jack storage cover and any trim panels removed during installation. The 4-flat connector can be stored in the jack storage compartment when not in use.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.

## Español

## Français

