

55382

JEEP LIBERTY

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

7/10/08

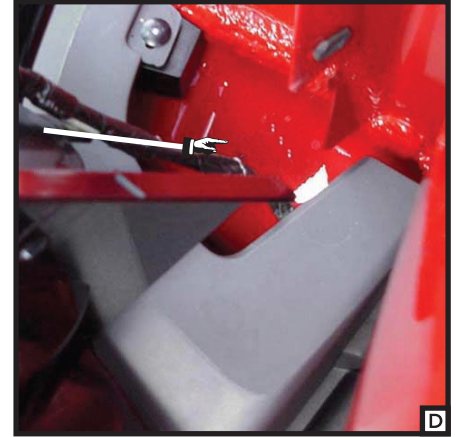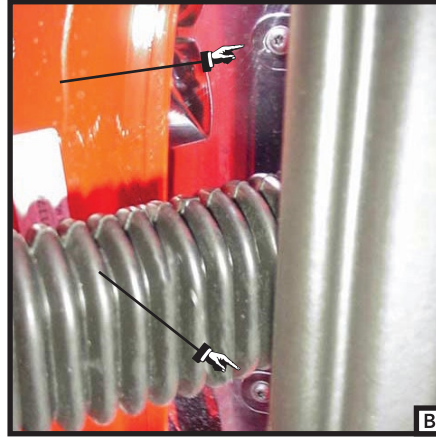

English

1. Open the rear glass gate and tailgate to access the screws that hold the taillights in place. The driver and passenger side taillights can be removed using a T-20 torx head screwdriver. The driver's side screws are located by the hinge on the inside of the taillight. [B] Remove the screws and carefully pry the taillight housings rearward away from the vehicle, being careful not to break the alignment tabs. [C]

2. Access the black housings that match the housings on the T-Connector. Slide the red locking tab on the harness connector to the unlocked position and disconnect the wire harness from both taillight sockets.

3. Beginning on the drivers side, plug the T-connector harness containing the yellow wire in between the vehicle's mating connectors, and slide the red locking tab into the locked position.

4. Locate a suitable grounding point on the drivers side near the connectors. Drill a 3/32" hole and secure white wire with eyelet using screw provided.

5. Route the harness containing the green wire and 4-flat down the opening behind the taillight on the drivers side. [D] Route the 4-flat harness to the center of the vehicle. Route harness containing the green wire underneath the vehicle up through the opening behind the passenger's side taillight.

6. Repeat step 4 for the passenger's side using the T-Connector harness end with the GREEN wire.

7. Secure wires with cable ties provided. Secure converter behind the driver's side taillight and reinstall both rear taillights

WARNING!

Verify miscellaneous items that may be hidden or under and surface before drilling to avoid to vehicle and/or personal injury.

Español

Français



55382