

55530

CHRYSLER PACIFICA

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

1/18/10

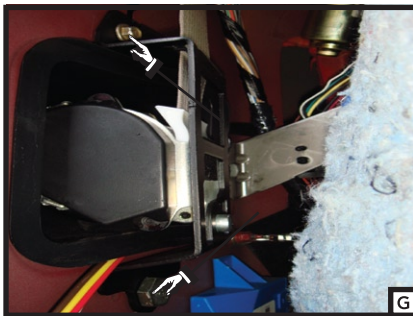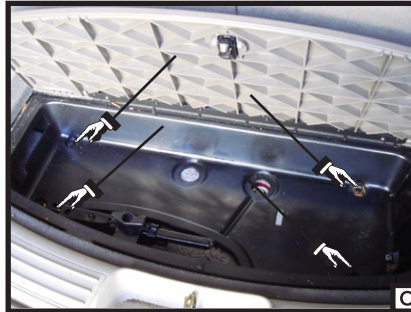

English

1. Open the rear hatch and remove two 10 mm bolts on each taillight assembly. [A] Pull out on the taillight assemblies being sure not to damage the alignment tabs. Behind the taillights locate the vehicles taillight wiring harness it will have connectors similar to those on the T-connector harness. Separate the connectors being sure not to damage the alignment tabs, set taillights aside. [B]

2. Fold the rear seats down and remove the rear cargo tray cover. Remove cargo tray by removing four 10 mm bolts. [C] Remove the rear scuff panel by pulling up being sure not to damage the alignment tabs. [D]

3. On both sides pull back on the interior trim panels. [E] Behind the taillights locate the oval grommet that has the taillight wiring harness running through it from inside the vehicle. [F] Pull out grommet and make a small slit using a utility knife from the top to the middle on both sides of the vehicle. Behind the interior trim panel temporarily remove the seat belt bracket by removing two bolts holding it in place. [G]

4. On the drivers side route the T-connector end with the yellow wire behind seatbelt bracket and out through the grommet and insert in-between the separated connectors make sure the connectors are fully inserted with locking tabs in place.

5. Route the T-connector end with the green wire out from under the interior trim panel under the removed cargo tray and under the passenger side trim panel. Route the green wire out through the grommet. Repeat step 4 on the passenger side using the green wire.

6. On the drivers side behind the rubber grommet locate the 2-pin connector it will be similar to the one on the T-connector harness. Unwrap the foam from the connector and insert the connector into the vehicles connector make sure the connector is fully inserted with locking tabs in place. [H]

7. Adhere the black converter box to the frame behind the drivers side trim panel of the car using the double-sided tape provided. Secure any loose parts of the

T-connector with the cable ties provided.

8. (Only applies to 2004-2006 Pacifica's) In the engine compartment locate the vehicles fuse box it will be on the drivers side near the battery. Insert 20 amp fuse provided into position 10 in the fuse box labeled trailer/tow. [I]

9. Route the 4-flat wire under the drivers side trim panel to the center of the vehicle and out the hatch when in use. When not in use roll up and store in an out of the way location in the rear cargo tray.

WARNING!
Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



55530