

# 55542

TOYOTA COROLLA

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

01/29/09

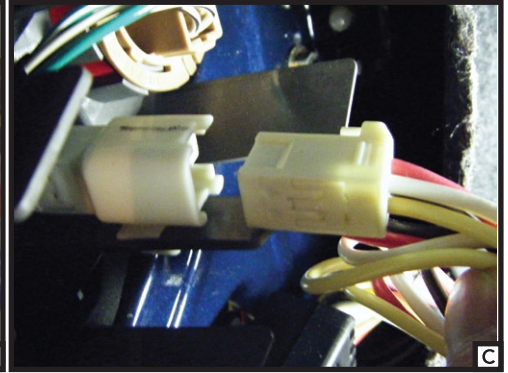


## English

1. Open the trunk and remove the rear threshold.**[A]** Starting on the drivers side remove the fasteners**[B]** and pull back on the trunk lining to reveal the connectors that matching those on the T-connector. Disconnect the vehicles connectors. Repeat on the passenger's side.
2. On the drivers side insert the T-connector end with the yellow wire in-between the disconnected vehicle connectors. Making sure the locking tabs are in place.**[C]**
3. Route the green wire along the threshold to the passenger side. Repeat step 2 using the green wire.
4. Adhere the black converter box to the frame of the car using the double-sided tape provided.**[D]** Secure any loose parts of the T-connector with the cable ties provided.
5. Route the 4-flat wire to the center of the vehicle and out of the trunk when in use. When not in use roll up and store in an out of the way location in the trunk.
6. Put the trunk liner back into position and reinstall the threshold.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

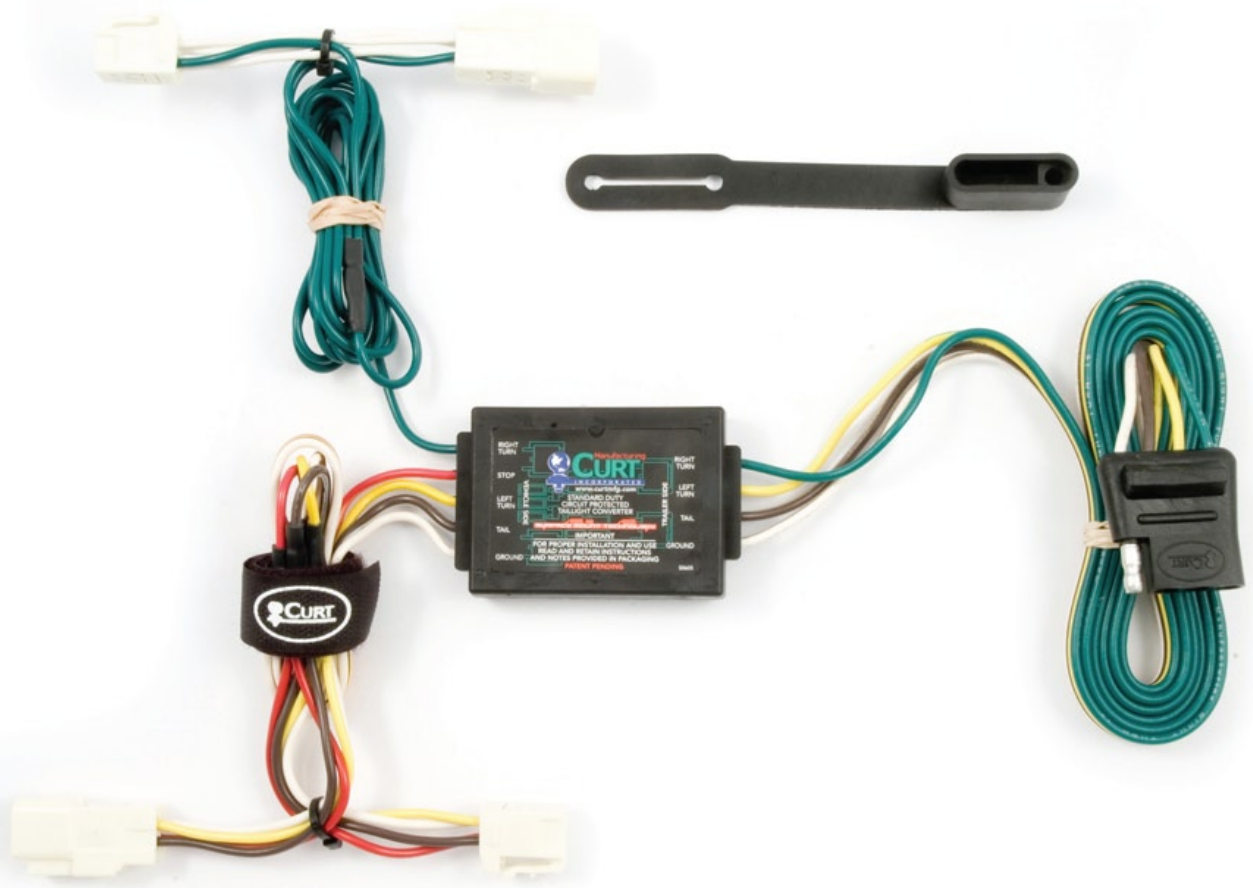

55542