

55570

NISSAN QUEST

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

4/6/09

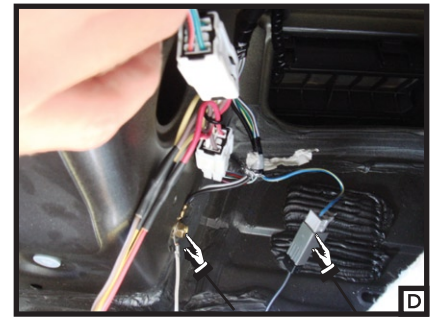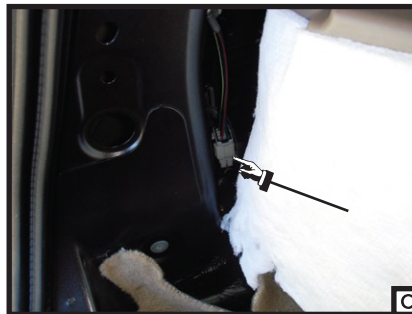

English

1. Open the rear hatch and remove the side access panel. Partially remove the rear trim panels by removing plastic wing nuts holding them in place. [A] Remove the rear scuff panel. [B]
2. Starting on the drivers side locate the vehicles taillight wiring harness behind the rear trim panels. The harness will have connectors that are similar to those on the T-connector. [C] Separate the connectors being sure not to damage the locking tabs. Insert the T-connector end with the yellow wire in-between the separated connectors. [D] Make sure the connectors are fully inserted with locking tabs in place. Insert the T-connectors power wire into its mating connector located next to the taillight wiring harness. [D]
3. Route the T-connector end with the green wire out from under the rear trim panel and along the rear scuff panel to the passenger side. [E] Repeat step 2 on the passenger side using the green wire.
4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided. [D]
5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.
6. Insert the 10 AMP fuse into the slot labeled tow lamp in the fuse box next to the battery. [F]

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



55570