

55597

CHRYSLER ASPEN DODGE DURANGO

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

2/28/2011

English

1. Open the vehicle's tailgate and remove each of the taillights by removing the two fasteners (A) on each using a pry tool. Carefully pull the taillight to the rear of the vehicle (B) to remove it from the vehicle.

2. Beginning with the driver's side, route the T-Connector harness end with the yellow wire out from under the vehicle, through the body opening to the left taillight housing. (D)

3. Disconnect the vehicle harness connector from the driver side taillight, taking care not to damage the locking tabs (C).

4. Position the T-Connector ends between the separated vehicle connectors. Firmly press the connector ends together until the locking tabs engage. Make sure the connectors are fully inserted with locking tabs in place (D).

5. Route the T-Connector end with the green wire underneath vehicle to the passenger side of the vehicle.

6. Repeat Step 4 on the passenger side using the T-Connector end with the green wire.

WARNING!


Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage to vehicle and/or personal injury.

7. Route the black power wire from the battery as shown on the CME-PCL-INS sheet included.

8. Secure all wires using cable ties provided. Mount the black converter box with double sided tape on back of converter.

9. Reinstall all items removed during install.

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

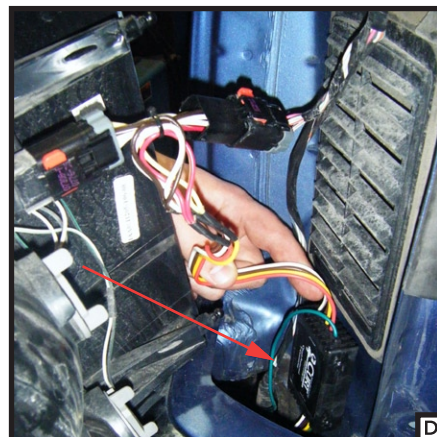



55597