

# 56013

CHEVROLET MALIBU  
PONTIAC G6

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

3/10/09

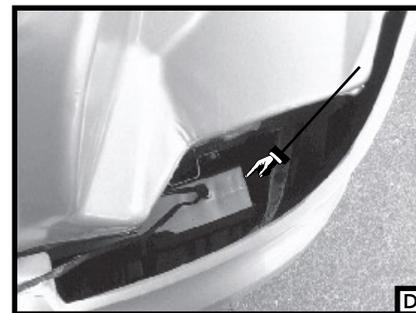

## English

### 1. PONTIAC G6 SEDAN/ MALIBU

A. Open the trunk and on each side remove two plastic nuts holding the felt trunk liner in place. [A] Pull back on the felt trunk liner to expose two 10 mm nuts that hold the taillight assemblies in place. Remove nuts and pull out on the taillight assemblies making sure not to damage alignment tabs. [B]

B. On the backside of the taillight on the driver's side separate the vehicles wiring harness connectors. [C] Insert the T-connector end with the yellow wire in-between the separated connectors.

C. Route the T-connector end with the green wire and 4-flat wire down through the opening under the taillight assembly. [D] Under the vehicle route the green wire to the passenger's side along the backside of the bumper and up through the passenger's side opening. Repeat step B using the T-connector end with the green wire on the passenger's side. Continue to step 2 for remaining instructions.

### 1. PONTIAC G6 CONVERTIBLE/COUPE

A. Starting on the drivers side, under the vehicle, behind the bumper reach hand into the opening between the vehicle bumper and body to locate the vehicles wiring harness. [E] Separate the the connectors and insert the T-connector end with the yellow wire in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place. [C]

B. Route the T-connector end with the green wire across the backside of the bumper to the passenger's side. Repeat step A on the passenger's side using the green wire.

## English

2. On the passenger's side locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

3. Route the 4-flat to the center of the bumper and secure in a convenient out of the way location. Re-install anything removed during install. Secure any loose wires with cable ties provided.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

