

56020

FORD ECONOLINE

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

03/17/09

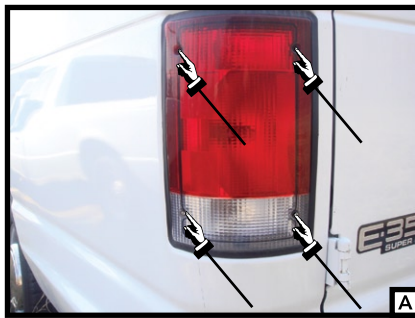

English

1. Remove both taillight assemblies by removing four T-15 torx head screws holding each assembly in place. [A] Behind the taillight assemblies locate the vehicles taillight wiring harness it will have connectors similar to those on the T-connector. [B] Separate the vehicles taillight wiring harness from the back side of the taillights. Behind the taillight assembly gently pull out the grommet that the wiring harness comes through to the taillight. [C] [D] Make a slit in the grommet from the outside to the center using a utility knife.

2. Open the rear cargo doors and remove the rear scuff panel by removing eight phillips head screws. [E]


3. Inside the vehicle starting on the passenger's side route the T-connector end with the green wire out through the grommet behind the taillight and insert in-between the separated connectors making sure the connectors are fully inserted with locking tabs in place.

4. Route the T-connector end with the yellow wire down along the inside body panel and under the removed scuff panel to the driver's side. Repeat step 3 on the driver's side using the yellow wire. Reassemble anything removed during install.

5. Route the 4-flat wire to the center of the vehicle and out the rear doors when in use. When not in use roll up and store in an out of the way location in the rear cargo area.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

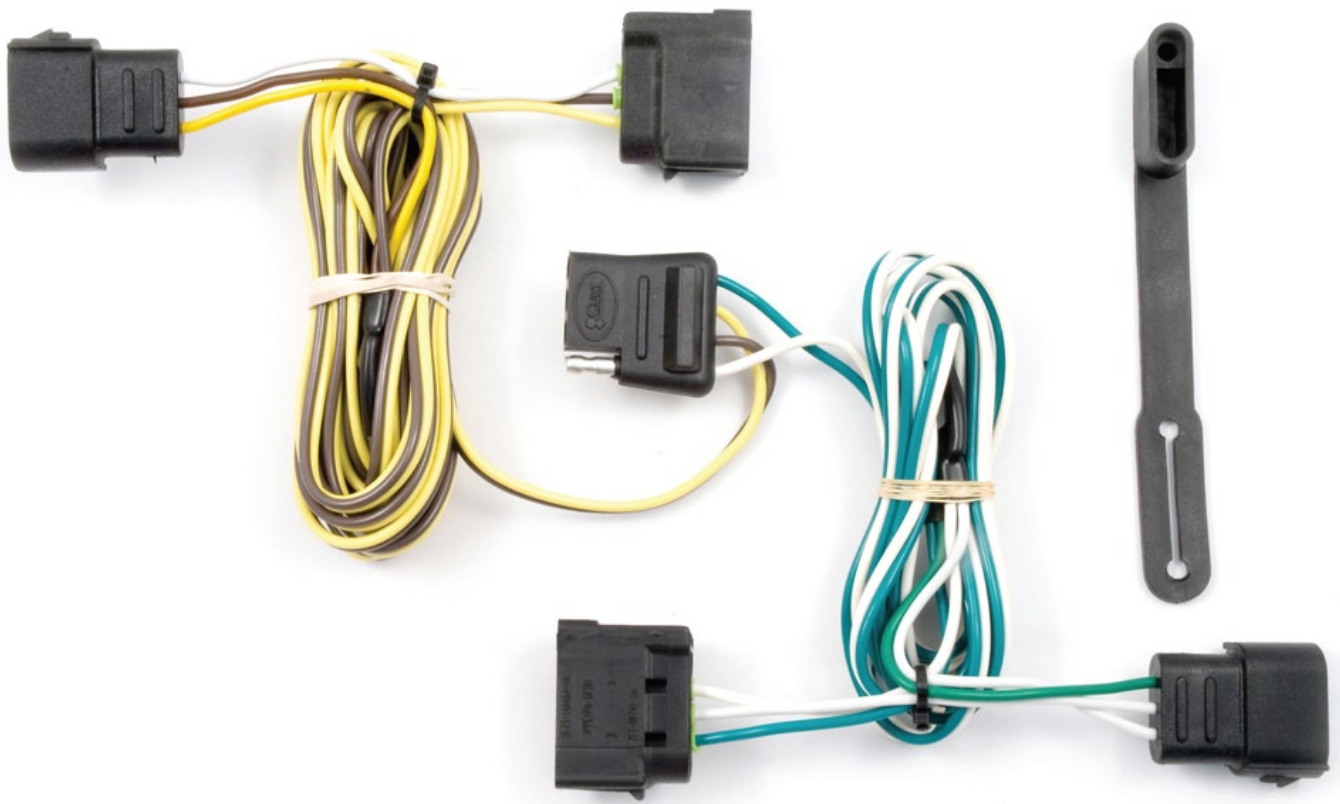

56020