

# 56027

BUICK ENCLAVE  
CHEVROLET MALIBU  
CHEVROLET TRAVERSE  
VOLKSWAGEN ROUTAN

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

01/28/09

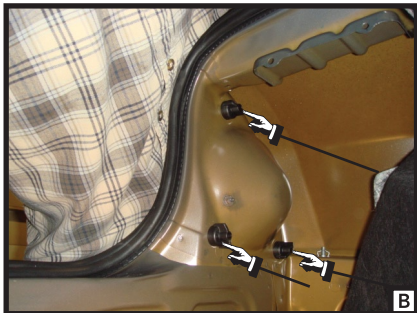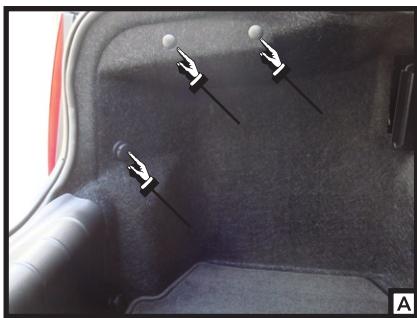

## English

### 1.CHEVROLET MALIBU

a. Open the trunk on the driver's side, remove the fasteners that secure the trunk liner. Pull back on the trunk liner to expose the plastic wing nuts securing the taillight assembly. [A]

b. Remove the three plastic wing nuts and remove the taillight assembly and separate the connectors. Repeat steps 1 and 2 on the passenger side. [B]

### BUICK ENCLAVE/CHEVROLET TRAVERSE

a. Open rear hatch. On the drivers side remove the two bolts securing the taillight assembly. Remove the taillight assembly separate the connectors. Repeat on the passenger side. [C]

### ALL VEHICLES

2. On the drivers side insert the T-connector end with the yellow wire in-between the separated vehicle connectors. [D]

3. Route the green wire and 4-Flat wire down through the opening underneath the taillight assembly. [E] Route the green wire along the backside of the bumper and up through the opening on the passenger side. Repeat step 2 on the passenger side using the green wire.

4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

5. Re-install the taillight assemblies. Secure any loose parts of the T-connector with the cable ties provided.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



56027