

56096

CADILLAC SRX

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.




¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

10/28/09

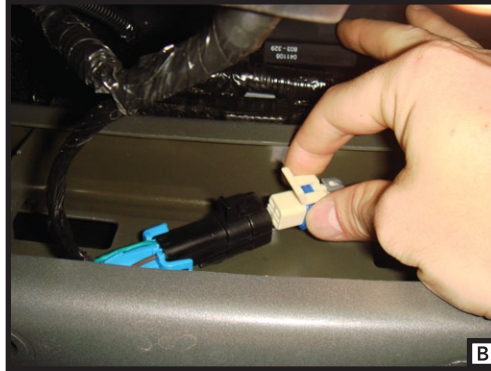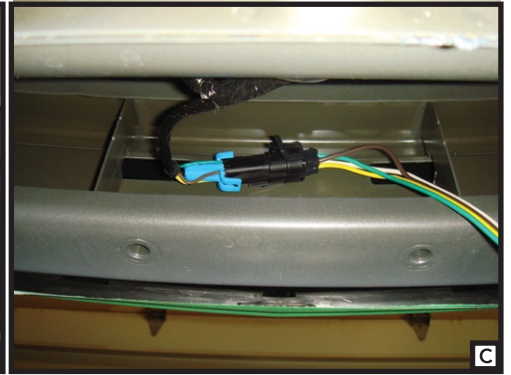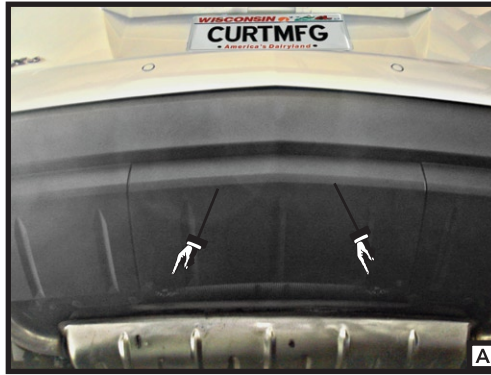

English

1. Remove the bumper fascia panel by removing the two phillips head screws holding it in place. [A] Behind fascia panel and above the bumper beam locate the vehicles OEM trailer wiring harness connector. The connector will mate with connector on the harness. [B]
2. Remove white plastic plug from the connector. Be sure not to damage the locking tabs. [B] Insert the harness connector into the vehicles connector. [C] Make sure the connectors are fully inserted with locking tabs in place.
3. Secure the 4-flat to the center of the vehicle with the cable ties provided. [D]

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



56096