

# 56109

DODGE JOURNEY

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

4/19/2010

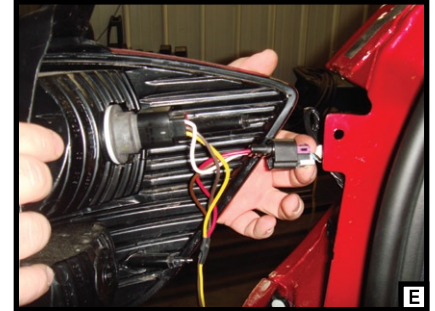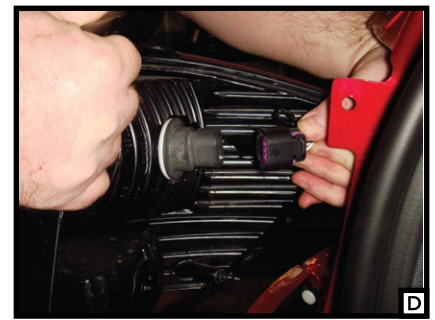

## English

1. Open the hatch. Remove both of the vehicles taillights by removing two plastic fasteners holding each in place. [A][B] Behind the taillights locate the vehicles taillight wiring harness. [C] The harness will have connectors similar to those in the T-connector harness. Separate the connectors being sure not to damage the locking tabs. [D]

2. On the drivers side insert the T-connector end with the yellow wire in-between the separated connectors. [E] Make sure the connectors are fully inserted with locking tabs in place.


3. Route the the T-connector end with the green wire down through the opening under the taillight and across the backside of the bumper to the passenger side and up through the passenger side opening. Repeat Step 2 on the passenger side using the green wire.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white ground wire using eyelet and screw provided.

5. Secure the 4-flat to the center of the vehicle in a convenient out of the way location. Secure any loose wires with the cable ties provided. Re-install anything removed during install.

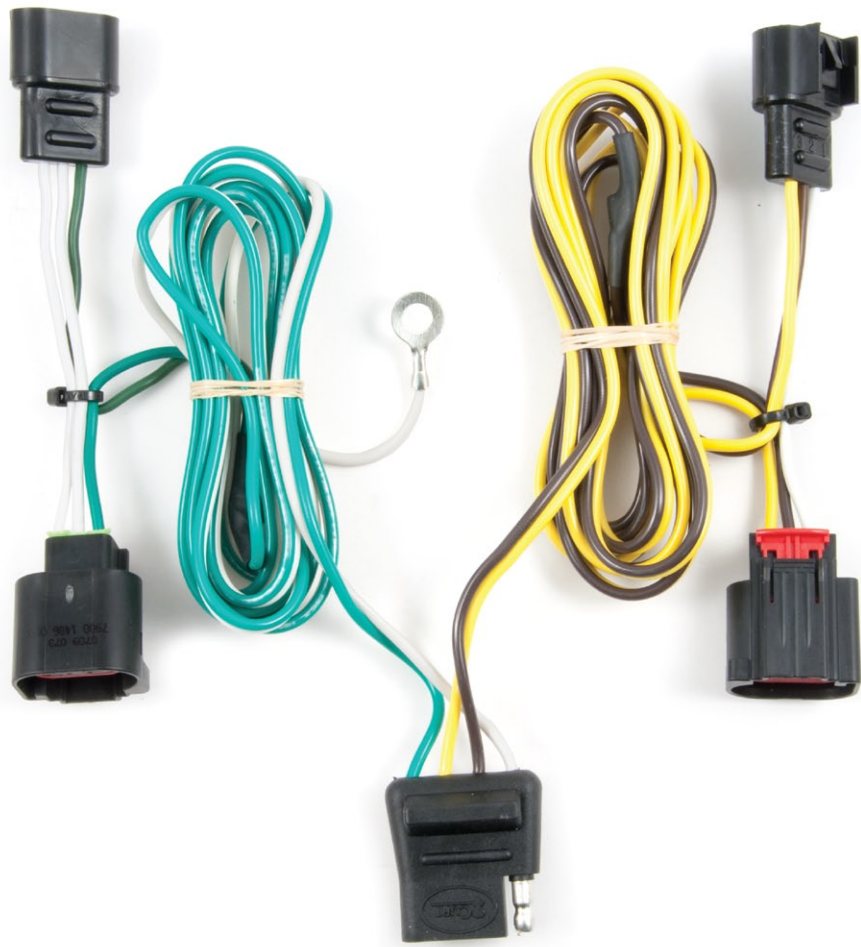

56109