

INSTALLATION MANUAL

Level of Difficulty


Easy

Wiring Location(s)

S6

Wiring Location Guide* for SUVs and Vans (S)

S1	Behind driver side taillight housing
S2	Behind passenger side taillight housing
S3	Behind driver side rear access panel
S4	Behind passenger side rear access panel
S5	Behind driver side rear bumper
S6	Behind center of rear bumper
S7	Behind passenger side rear bumper
S8	Under rear floor panel
S9	Behind driver side rear access panel
S10	Behind passenger side rear access panel

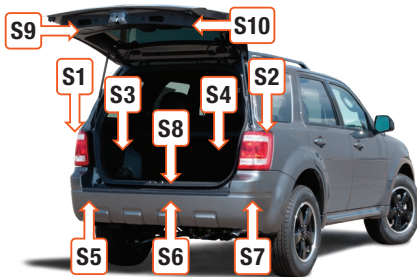

*Representative vehicle shown

Tools Required

Ratchet / wrench Cutting tool

⚠ WARNING

Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Do not lay tools across the positive terminal (typically labeled with red covers or a red “+” symbol). This can cause a ground to short causing sparks, and / or electrical shocks.

NOTICE

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

All steps must be followed to ensure the product will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

Maintenance

Periodic inspection of all wires and connections should be performed to ensure there is no visible damage or loose connections.

Product Registration and Warranty

CURT Group stands behind our products with industry-leading warranties.

Provide feedback and help us to improve our products by registering your purchase at: warranty.curtgroup.com/surveys

Step 1

Locate the vehicle battery. Look up the battery location in the owner's manual of your vehicle. Disconnect the negative battery terminal. Be sure to fasten this wire down and away from the battery when completing the installation process.



Step 2

From under the rear vehicle bumper cover, locate the housing with dust cover.



Step 3

Slide the red lock back, press the housing lock in and remove the dust cover. Install the custom wiring harness and slide the red lock back into the locked position.

Secure the custom wiring harness with the provided cable ties as needed, with the 4-flat positioned near the receiver hitch.



Step 4

NOTICE

Once the harness is connected, verify that the harness is functioning by attaching the battery and testing with a test light, 4-flat tester, or a functioning trailer.

Reinstall all items removed during install. If it was disconnected at the beginning of the installation, reconnect the negative battery terminal. Install the provided 4-flat dust cover to help prevent corrosion.