
INSTALLATION INSTRUCTIONS PART#4353(B-C-PS) 04 - 13 Nissan Titan King Cab.	
Parts List : (1 QTY (1) Sidebar set (Left & Right) (2) Front mounting bracket (left & right) (2) Rear mounting bracket (left & right) (2) Auxiliary mounting bracket (left & right)	<ol> <li>Hardware kit including :         <ul> <li>(4) 1/2 x 2" Hex head bolt</li> <li>(2) 3/8 x 1 1/2" Carriage bolt</li> <li>(4) 1/2" Flat washer</li> <li>(4) 1/2" Lock washer</li> <li>(4) 3/8 x 1 1/4" hex head bolt</li> <li>(6) 3/8" Flat washers</li> <li>(6) 3/8" Lock washers</li> <li>(6) 3/8" hex nut</li> </ul> </li> </ol>
Tools Required :3/4" SocketRatchet3/4" Wrench14mm Socket	
<ul> <li>before installation.</li> <li>3. Locate front body mount and remove existing bolts</li> <li>4. To install auxiliary mounting bracket, locate exist mounting bracket with 3/8" flat &amp; lock washers and</li> <li>5. To install rear mounting bracket, locate rear body removed and 3/8 x 1 1/4" hex head bolts, flat &amp; lock</li> <li>6. Place the sidebar up to the mounting brackets and head bolt, flat and lock washer. Bolt to the rear mounting</li> </ul>	sting hole in the frame then pass thru a 3/8 x 1 1/2" Carriage and secure auxiliary d hex nut. Picture 2. mount and remove existing bolts, place rear mounting bracket and secure using bolts
Assembly Diagram :	
Picture 1	Picture 2
Remove existing bolts to secure front mounting bracket	1/2 x 2" hex head       bolt       3/8 x 1 1/2"       carriage bolt

All Stops

FODI7.003.E

## INSTALLATION INSTRUCTIONS PART#4353(B-C-PS)

Picture 3

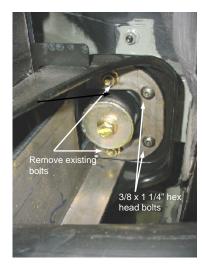

## Cleaning and care instructions :

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scracht the finish and cause corrosion.

Revised 29/06/06 3:\Usuarios\Diseño\Instructivos.pdf\37's\37058-ing.pdf

FODI7.003.E