
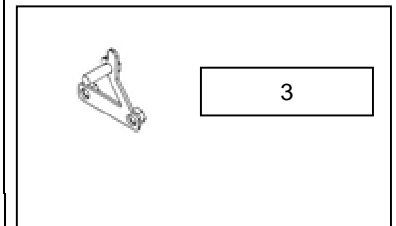
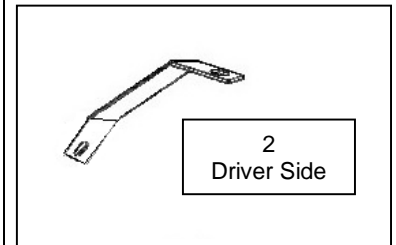


**INSTALLATION INSTRUCTIONS**  
**DOMINATOR D3 SIDE STEPS PART NUMBER D36150 (B-PS)**  
**2010-2014 DODGE RAM 2500HD, 3500HD CREW CAB P/U 4DR 2/4WD 6.4' BED**  
**Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!**

**Parts List**

Item	Qty.	Part #	Description	Torque
1	3 Pr	D07	Bracket	-
2	1 Pr	370452BA	Rear Auxiliary Bracket	-
3	6	372240BA	3/8" T-Plate	-
4	26	-	3/8" x 1 1/4" Hex Bolt	30 Ft. Lbs.
5	46	-	3/8" Flat Washer	-
6	32	-	3/8" Lock Washer	-
7	20	-	3/8" Hex Nut	30 Ft. Lbs.
8	6	-	Vinyl Gasket	-
9	1	KTE-G6000MK	Side Step Assembly Kit	-
10	1	148FD	Driver Front (side step section)	-
11	1	148FP	Passenger Front (side step section)	-
12	1	148RD	Driver Rear (side step section)	-
13	1	148RP	Passenger Rear (side step section)	-

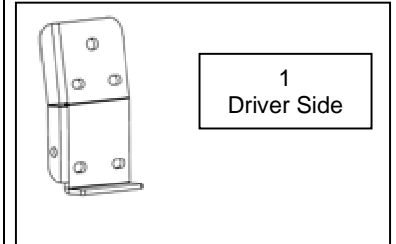

**Tool Required:**

9/16" & 18MM Socket  
 9/16" Wrench  
 Ratchet & Ratchet Extension

**Approximate Installation Time: 60 min**

**Read the installation instructions completely and verify that all of the parts listed are accounted for. If you have defective, missing or damaged parts or need assistance, please contact Go Rhino Products for fast, friendly customer service at: 1-888-427-4466 or email: [warranty@gorhino.com](mailto:warranty@gorhino.com)**



**WARNING!** There is thread-locking compound on all factory body mount bolts. Removal using an air assisted impact or ratchet will damage the body mount bolt threads and the internal nut assembly. We only recommend using hand tools to slowly remove and reinstall body mount bolts.

## Installation



**Step-1** Begin the installation on the driver side of the vehicle.

**Step-2** Locate the obround hole covered with tape and (2) hexagon holes in the body panel at the front of the cab. Remove the tape covering the obround hole and install (1) 3/8" T-Plate in the body panel and install (1) vinyl gasket over the threads to prevent the T-Plate from falling into the body, (**Photo 1**).

**Step-3** Attach one of the driver side brackets to the body panel using the 3/8" T- Plate, (2) 3/8" x 1 1/4" hex bolts, (3) 3/8" flat washers, (3) 3/8" lock washers and (1) 3/8" hex nut, (**Photo 2**). Leave the nut and bolts loose for final adjustment.

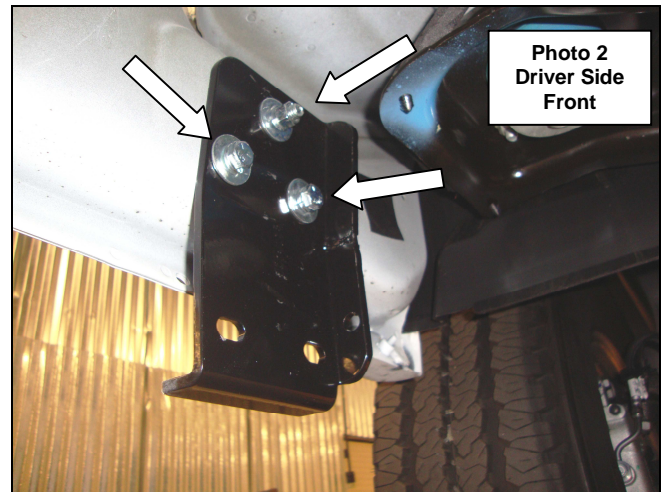
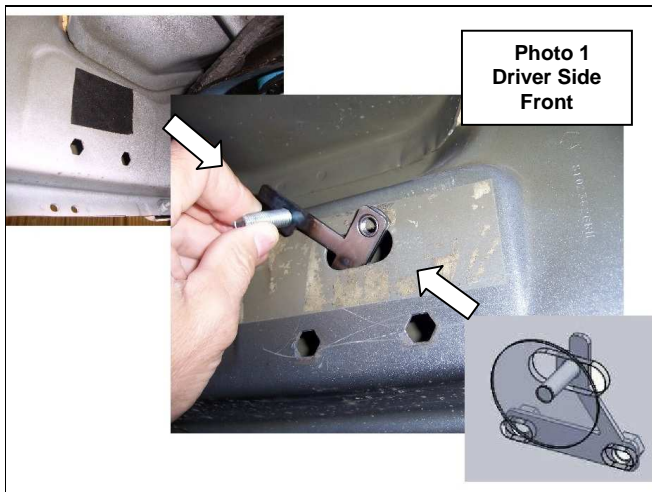


**Step-4** Locate the obround hole covered with tape and (2) hexagon holes in the body panel at the center and rear of the cab, and repeat the above steps to install the two remaining driver side brackets, (**Photo 3 & 4**).

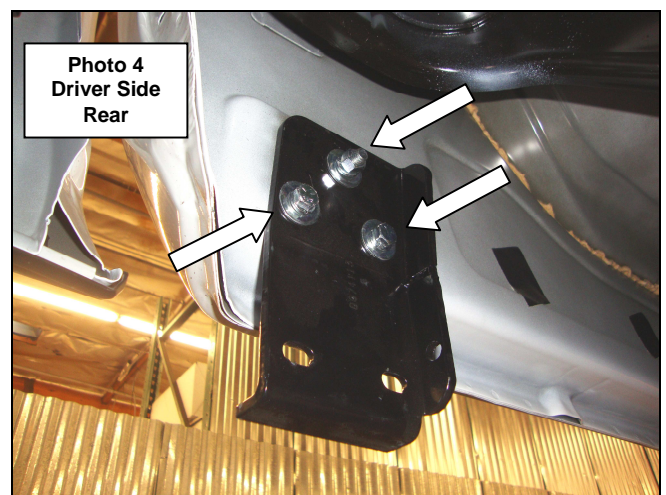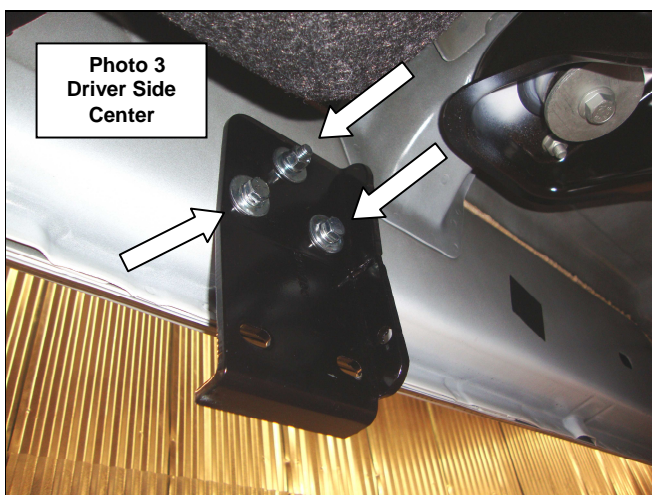

**Step-5** Locate and remove the driver side rear factory body mount bolt and washer, (**Photo 5**).

**Step-6** Insert the factory body bolt and washer through the slot hole in the top of the driver side rear auxiliary bracket, reinstall the body mount bolt and attach the opposite end of the auxiliary bracket to the rear bracket using (1) 3/8" x 1 1/4" hex bolt, (1) 3/8" flat washer, (1) 3/8" lock washer and (1) 3/8" hex nut, (**Photo 6**). Leave the nut and bolts loose for final adjustment.

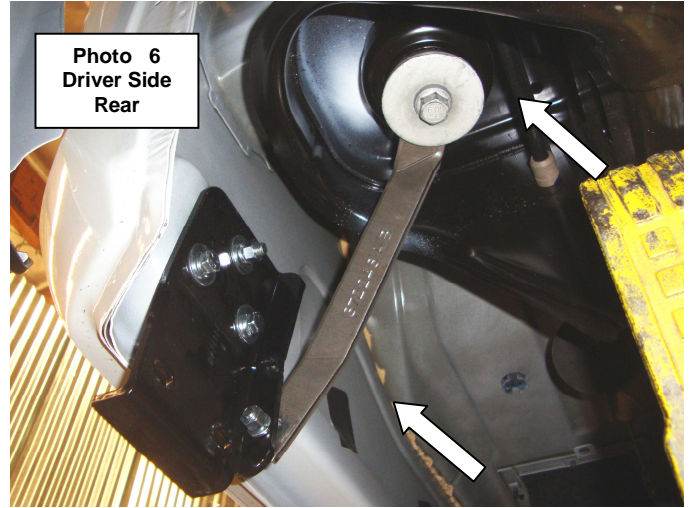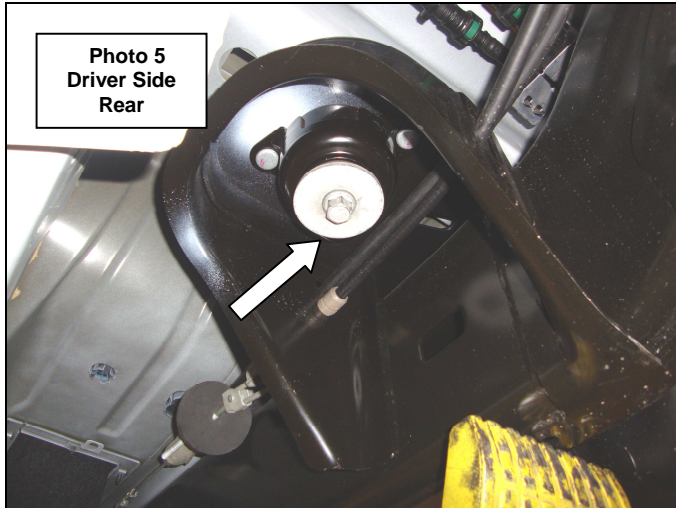

**Step-7** Attach the driver side step to each of the brackets using (2) 3/8" x 1 1/4" hex bolts, (4) 3/8" flat washers, (2) 3/8" lock washers and (2) 3/8" hex nuts, (**Photo 7**).

**Step-8** Align the side step with the vehicle and tighten all factory, side step and bracket nuts and bolts. Repeat the installation steps to install the passenger side brackets and side step.

**Remember to check and retighten all nuts and bolts periodically.**

