


**REVISION HISTORY**

REV	DESCRIPTION	DATE	NAME
A00	Initial Design	3/1/07	RJT

**STEP #1**


INSTALL 16" OF HEATSHRINK. MAKE SURE TO SLIDE IT INSIDE THE DISTRIBUTOR'S STRAIN RELIEF.

HEATSHRINK: 170049

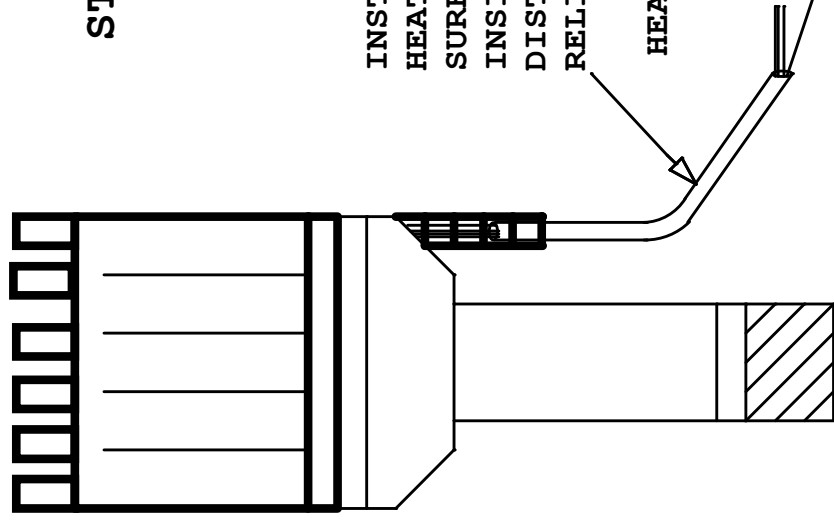

**STEP #2**

USE BLUE HANDLE WIRE CRIMPERS TO CRIMP PINS

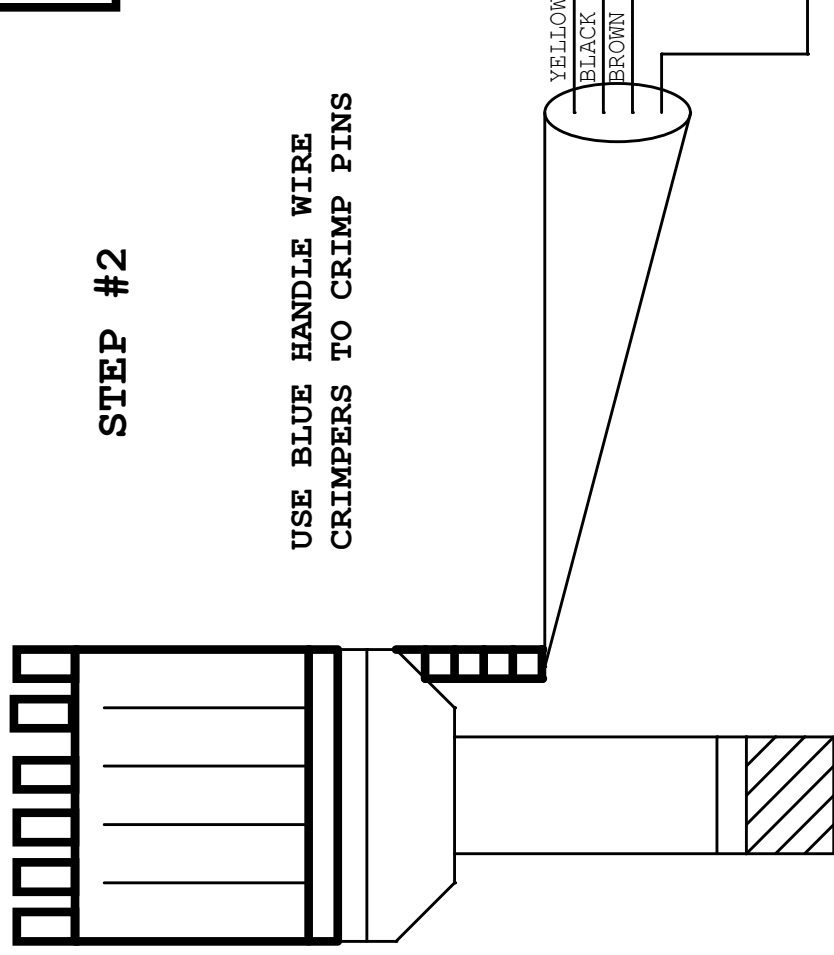


**NUMBER 1**

INSTALL A 1/4" PIECE OF HEATSHRINK AROUND THE NUMBER 1 POST ON THE CAP


HEATSHRINK: 170055

**NUMBER 1**

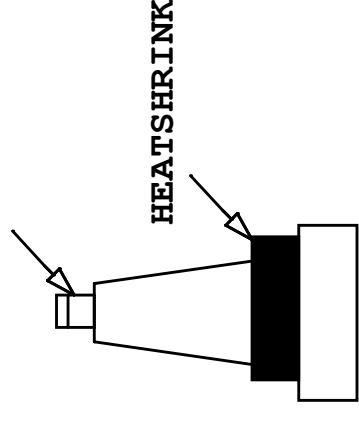

WIRE STRAIN RELIEF

**VIEW FROM BOTTON OF DISTRIBUTOR**

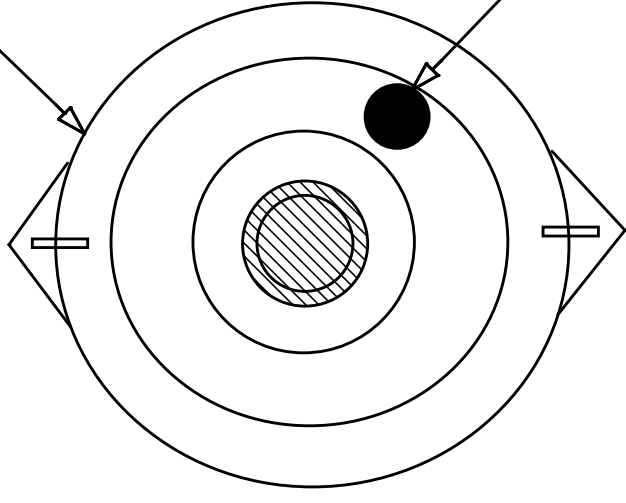

- (1) CONNECTOR: 170264
- (5) RUST SEALS: 170087
- (1) LOCK: 170213
- (3) TERMINAL: 170557
- (3) BLUE SEALS: 170558

**FAST**

FUEL AIR SPARK TECHNOLOGY

3753 Old US23, Suite 300, Brighton, MI 48114

Chevy Distributor Connector Installation

Title	
Size A	Document Number 305005
Rev A00	
Date: Wednesday, May 16, 2007	Sheet 1 of 1