

2019+ Ram 1500 5.7L

**CORSA**  
PERFORMANCE

Part #: CC0004



## IMPORTANT! WARRANTY AND INSTALLATION INSTRUCTIONS

*Please Forward All Information to Consumer*

Be sure to review the enclosed instructions prior to beginning the installation process. If you have any questions about the enclosed parts or instructions, or if you encounter a problem during installation:

**CALL TECHNICAL SUPPORT: 440.891.0999 or 800.486.0999**

**TO ACTIVATE YOUR WARRANTY GO TO:  
[CORSAPERFORMANCE.COM/WARRANTY](http://CORSAPERFORMANCE.COM/WARRANTY)**

COLOR INSTRUCTIONS ARE AVAILABLE BY PART NUMBER ON: [CORSAPERFORMANCE.COM](http://CORSAPERFORMANCE.COM)



**NEVER work on a hot engine bay.**  
Allow time for the vehicle to cool.

**INSTALL DIFFICULTY**



### RECOMMENDED TOOLS & SUPPLIES

- T-30 Torx Wrench
- 2.5mm Hex Wrench
- 11/16" Wrench
-

**Please take time to read and understand these installation instructions.**

CORSA recommends that the installation of this system be performed by a qualified service center or professional installer who has the necessary equipment, tools, and experienced personnel. However, if you decide to perform this installation yourself, the use of an additional person may be required.

**WARNING:** Never work on a hot engine bay. Allow time for the vehicle to cool.

This warranty does not extend to damaged or defect in the finish of a product or to any product, that in the opinion of CORSA Performance, has been misused, damaged by accident or negligence, altered or modified in any way, faulty installation or installed contrary to CORSA installation instructions, or repaired by an unauthorized service facility.

Full warranty available on [www.corsaperformance.com](http://www.corsaperformance.com)

**Please confirm that all parts are present according to the bill of materials before beginning the installation.**

If something is missing call Tech Support at 440.891.0999 or Toll Free: 1.800.486.0999



**HARDWARE KIT**


1. 1/2" Barbed Straight Fitting	1	3. 1/2" Barbed Elbow Fitting	1	6. 4mm Hex Screws	3
2. 3/8" NPT Elbow Fitting	2	4. Catch Can Body	1	<b>NOT PICTURED:</b>	
		5. Bracket	1	7. 1/2" Hose A	6"
				8. 1/2" Hose B	9.5"

**REMOVAL INSTRUCTIONS**

FACTORY  
PCV LINE




1. Remove the 2 bolts that secure the engine cover by using a T-30 Torx wrench. Pull engine cover towards the front of the vehicle to separate engine cover from rubber grommets to fully remove.

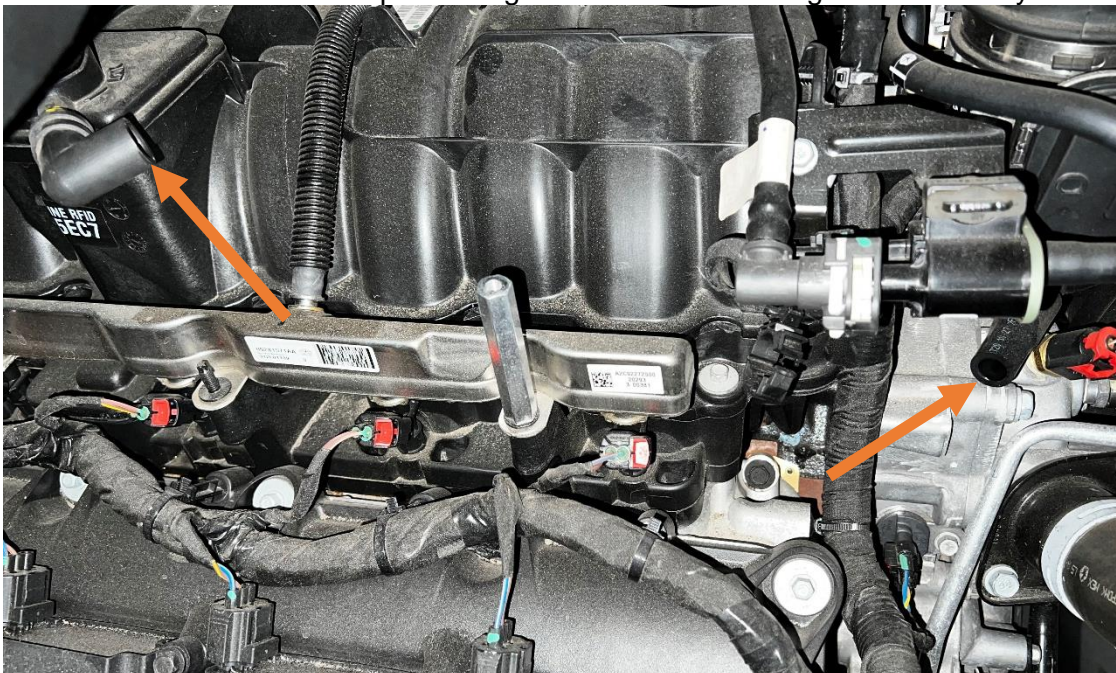

2. Remove factory PCV line from the passenger side of the vehicle in the 2 locations shown.

This concludes removal instructions.

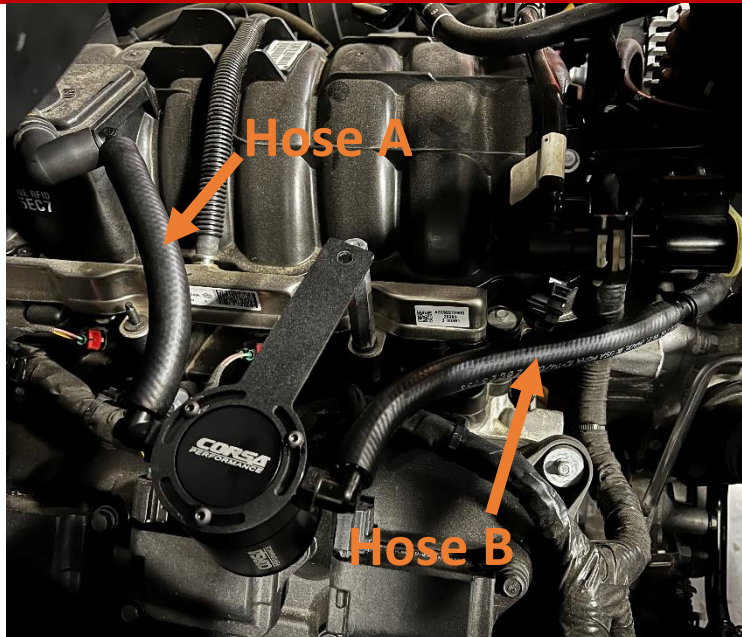**INSTALLATION INSTRUCTIONS**
**CORSA CATCH CAN SYSTEM**


1. Install fittings with an 11/16" Wrench. Use a 2.5mm Hex wrench to secure bracket to the catch can. **IMPORTANT:** Corsa recommends using thread sealant or PTFE tape on barbed fittings and bottom drain plug to prevent any leaks.
2. First connect the barbed fittings to the PCV hose ends. Make sure Hose A connects to the side located on top of the engine and Hose B connects to the side on the front of the engine.



3. Align the hole on the catch can bracket to the bolt hole that secures the engine cover. When aligned, reinstall the engine cover and thread in the T-30 Torx bolt to the catch can. Reinstall other T-30 bolt to secure engine cover.

This concludes installation instructions.

*Check that this catch can complies with your Federal, State and Local laws.  
We recommend saving your stock PCV line.*

---

### **BEFORE ROAD TESTING**

- 1.** Start engine, leaving the transmission in park and securing the parking brake.
  - 2.** Make sure to look and listen for any unusual noises or air leaks. Repair problems if needed.
  - 3.** Once completed it will be necessary to check periodically, after a few heat cycles, for realignment and tightening of all connections.
- 

**EMPTYING CATCH CAN:** Twist off the bottom of the catch can and dump captured oil back into engine or dispose of it. It is recommended to check and empty the catch can with every oil change.