

Dee Zee Custom-Fit Front Splashguard Instructions

DZ 17928

(1999 - Current) Chevy Silverado Pickup / Tahoe / Suburban

(1999 - Current) GMC Sierra Pickup / Yukon / Yukon XL

****Non - Flared Vehicles****

Instructions: Please take time to read all of the instructions carefully before beginning this installation.

Note: Turn the front wheels all the way to the left or right for the custom-fit mudflaps installation. It may be necessary to remove the wheels depending on the tools being used for this installation. Clean and degrease the custom-fit mudflaps installation locations on the vehicle fender well before beginning this installation.

Package contents:



Qty:1 Right-hand splashguard adapter
Qty:1 Right-hand splashguard backer
Qty:1 Left-hand splashguard adapter
Qty:1 Left-hand splashguard backer
Qty:4 #8 x 3/4" phillips head screws
Qty:4 #8 Spring Clips
Qty:2 #10 x 3/4" phillips head screws
Qty:6 Plastic Fasteners
Qty:6 Washers
Qty:1 Instruction Sheet

Tools Required:

#2 phillips screwdriver
Hammer
3/32" drillbit / drill
1/4" drillbit / drill
Center punch
1/2" socket / ratchet


1. Position the splashguard adapter onto the splashguard backer piece.

2. Insert plastic fasteners through the matching holes in the splashguard backer piece and the splashguard adapter as shown. Hold the parts firmly together and install washers onto the plastic fasteners. Push the washers as far down as possible to secure into place.

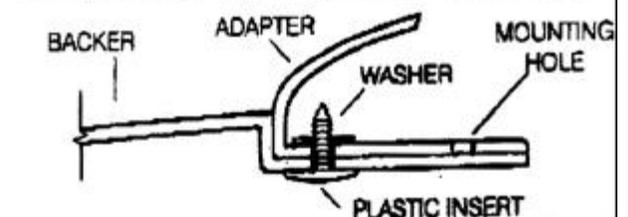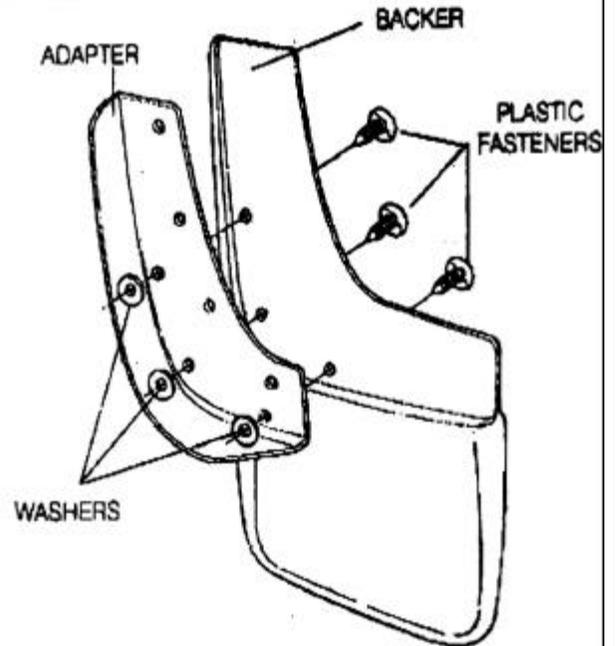

3. Examine the assembled parts to identify the remaining holes in the splashguard adapter.

4. Use a drill with a 1/4" drillbit to drill out the remaining holes. These holes will be used to mount the splashguard onto the vehicle.

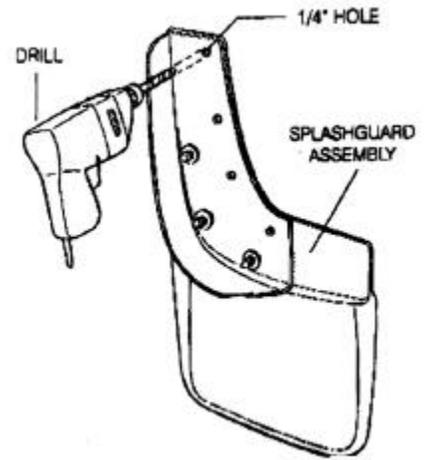



5. Remove the existing push-pin retainer on the vehicle rocker panel at the front of the vehicle and install the supplied #8 spring clips over the holes at locations (C / D).

6. Remove the lower body bolt from location (E) using a 1/2" socket / ratchet.

7. Place the splashguard up to the vehicle wheel well and secure into place using #8 x 3/4" phillips head screws at locations (C / D). Tighten into place using a phillips head screwdriver until snug. Note: Do not overtighten the #8 x 3/4" phillips head screws. Re-install the lower body bolt at location (E) and tighten into place using a 1/2" socket / ratchet.

8. Center punch hole location (A) and then drill a 3/32" hole through the vehicle wheel well.

9. Secure the splashguard into place using a #10 x 3/4" phillips head screw at location (A). Tighten into place using a phillips head screwdriver until snug. Note: Do not over tighten the #10 x 3/4" phillips head screws.

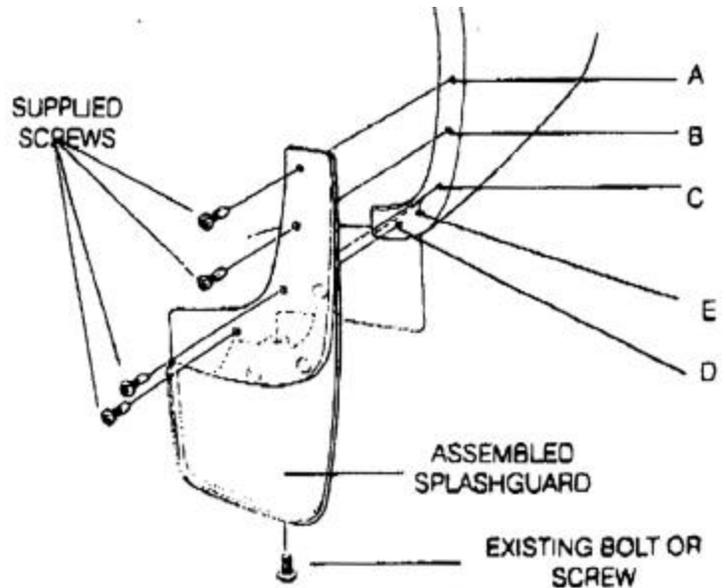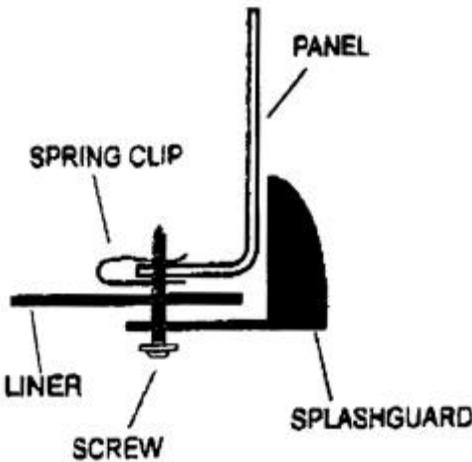

Painting Instructions:

1) Clean the custom-fit splashguards using a lacquer thinner or acetone to remove the dirt and other contaminants.

2) Apply a coating of flexible primer.

3) Apply a flexible paint as directed by the paint manufacturer.

If you should incur any problems with the installation of this product, please feel free to call us at 1-800-779-8222. So that we may better serve you when you call, please have the Part # and the LMO# from the labels on the outside of the box.