

DEE ZEE

67 & 68 & 70

Topsider Tool Box Installation Instructions

Congratulations on your purchase of a quality Dee Zee product. Dee Zee is recognized as having the highest quality running boards and accessories on the market today. We have earned this reputation by offering our customers a product they can be proud to place on their vehicles. Dee Zee meets all the criteria of manufacturing a custom-fit product which guarantees it to be the easiest product to install.

Tools Required

Two 7/16" Wrenches
Drill with a Set of Bits
Tape Measure
Two 1/2" Wrenches

PARTS LIST:

	QTY
Topsider Tool Box	1
Mounting Brackets with Holes	2
Mounting Brackets	2
Keys	2
Key Chain	1
Hardware Bag	1
Rolls of Foam Tape for 67 & 68	2
Roll of Foam Tape for 70.....	1

INSTRUCTIONS: Please take time to read all instructions carefully before beginning installation.

NOTE: After drilling, Dee Zee recommends putting a sealant or rust inhibitor around all holes drilled into the body panel of the vehicle.

STEP 1

Apply protective tape along the top of the side rail.

STEP 2

Position the tool box in the desired location on the side rail of the vehicle.


STEP 3

Locate the best positions for securing the tool box to the vehicle, and drill four evenly spaced 1/4" holes through the tool-box and the side rail. Secure together with a 1/4" x 1" carriage bolt (C), washer and nut (N)1. Refer to Drawing 1.

STEP 4

Position the mounting bracket with holes to the bottom of the tool-box. Using the existing hole in the horizontal bend as a guide, drill a 5/16" hole through the bottom of the tool box. Secure together with a 5/16" x 1 1/4" hex head bolt (X), washer and (large) nut (N)2. Refer to Drawing 2. Position the other mounting bracket to the bottom of the bed. Using the existing holes in the mounting bracket with holes as a guide, drill two 1/4" holes through the other mounting bracket and secure with two 1/4" x 3/4" hex head bolts (J), washer and nut (N)1. Refer to Drawings 3 and 4. Using the hole in the foot of the mounting bracket as a guide, drill a 5/16" hole through the floor of the bed. Fasten the foot of the mounting bracket to the bottom of the bed using a 5/16" x 1 1/4" hex head bolt (X), washer and nut (N)2. Refer to Drawing 2.

NOTE: If more room in the box is needed, the vertical legs may be mounted closer to the side rail.

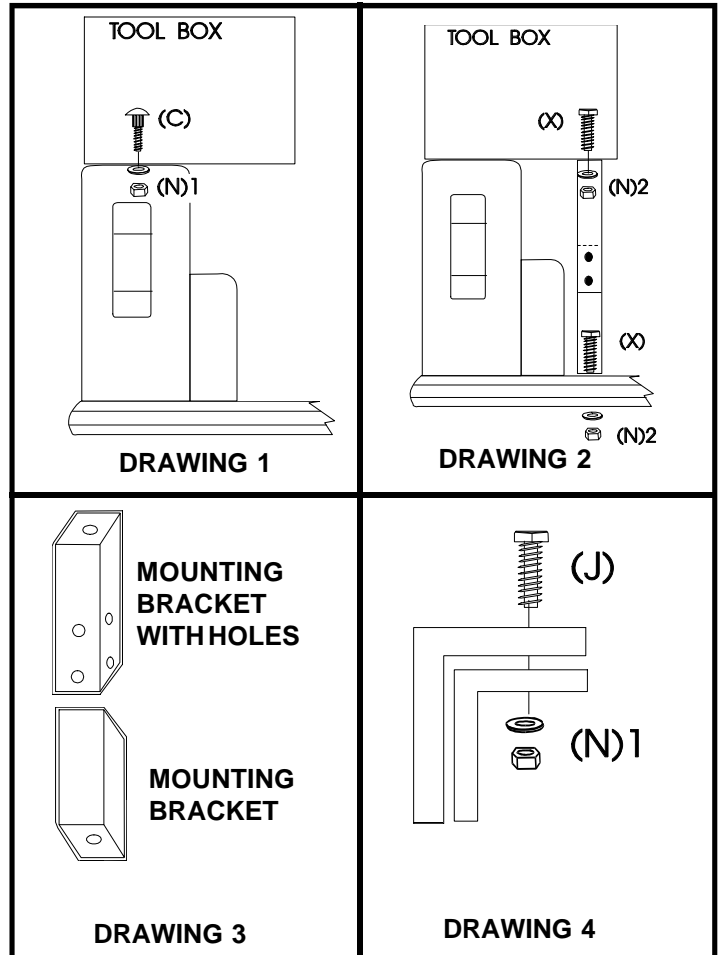

***If you should incur any problems with the installation of this product, please feel free to call us at 1-800-779-8222. So that we may better serve you when you call, please have the W/O#, SEQUENCE#, and the DATE from the labels on the outside of the box.*

Ever Lose Your Keys? Save Yourself Time & Trouble?

Order some extra keys now and have them when you need them. Please fill out and mail this portion to us. We'll send you a couple of extra keys for your Tool Box for just \$5.00 (American).

Name: _____

Day Phone : _____

Address: _____

Method of Payment :

☐ Cash, Check, Money Order

☐ Master Card

☐ Visa

City, State, Zip: _____

Expiration Date: _____

KEY & Lock #: _____

Card Number: _____

Please mail form and payment to: Dee Zee, Inc.

Or Fax to: 515-265-7296

PO Box 3090

Des Moines, IA 50316