


## *DiabloSport Catch Can Installation Instructions*

### *Installation for JEEP SRT-8*

**Warning:** This installation should be performed while your vehicle is off and has not been operated for at least several hours to avoid coming in contact with any hot parts.

Remove the catch can from the mounting bracket and disassemble the 2 pieces. Position the mounting bracket on the strut bar with the bottom "vee" of the mounting bracket underneath the bar, recommended mounting as shown is with the can attachment half of the bracket on top. Other configurations and locations are possible. Secure by reattaching the top of the mounting bracket and tightening the two screws. Reattach the catch and adjust to a vertical position. Securely tighten the screw holding the can to the bracket. Remove and discard the existing hose. Lay out new hoses provided to achieve optimum routing (note inlet and outlet to catch can are interchangeable.) Attach hoses to barbed fittings on the catch can. Trim as required and attach other ends to the engine. Note: catch can may be mounted higher or lower by flipping around the mounting bracket 180 deg.

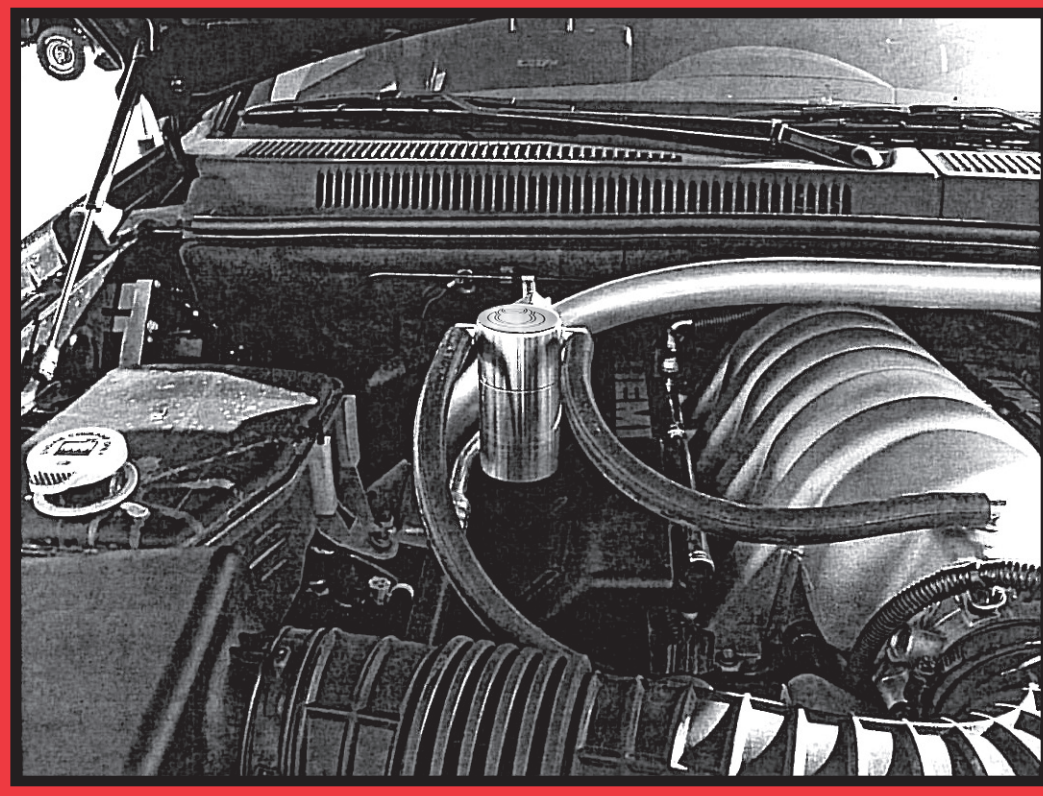

**JEEP**  
**SRT-8**

**Note:** For the first month or two check your oil levels frequently. Take note of how fast your can fills up (this will depend on driving style.) Discard oil at a proper discard station and reattach can. Never add oil from catch can back into your engine. After your vehicle's characteristics have been established, check your catch can's oil levels regularly.

**Product Liability Statement:** By purchasing this product for DiabloSport the customer and DiabloSport Inc. enter into an agreement to which DiabloSport assumes no liability for damages or injury incurred by the buyer or installer of this product. The buyer has complete responsibility for installation, use, and upkeep of this catch can.