

FBJL-02

2018+ JL/JT Premium Modular Front Bumper



WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit requires knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.


• *Always wear eye protection when operating power tools.* •

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

INSTALLATION MANUAL


1. Begin by unpacking all items and inspecting them for damage or missing items. Any concerns, please contact the company you purchased the bumper from.
2. After inspection, remove your factory bumper. With the front of the frame rails clear, install the winch plate using the provided M12 hardware. **NOTE:** Ensure the winch plate is centered on the frame rails.

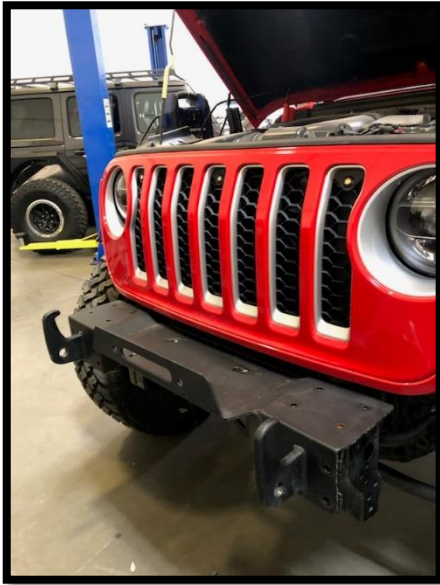


3. Once winch plate is secure, install the main center section of the bumper by sliding it over the top of the winch plate. The bumper should wrap over the D-Ring mounts like shown in image below.



- Align the 8 holes on the top of the bumper with the winch plate below. Secure the 4 holes closest to the center with our taper allen head bolts and rock washers provided in the hardware kit.

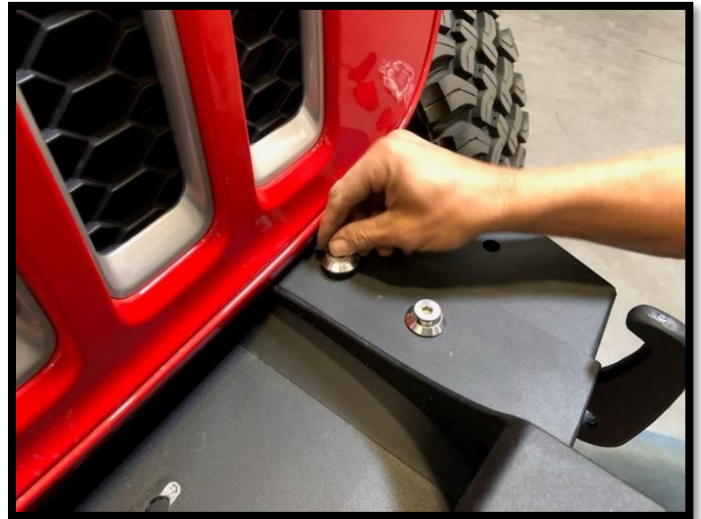


- After the center section of the bumper is secure, install the winch.

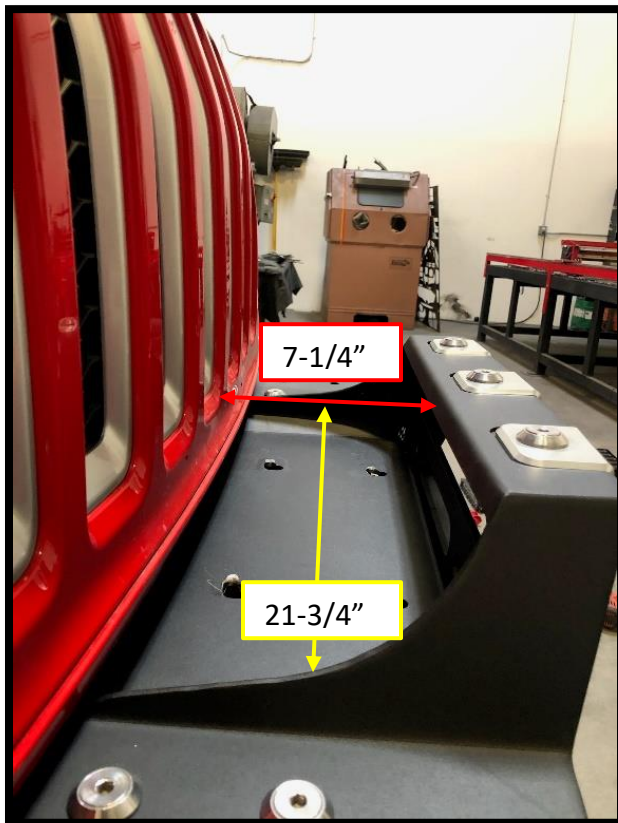

6. If you are going to install our BS10E50W5W, install the light now with the hardware supplied with the light.



7. Install the wings (included stubby) or (full-width FBJL-02W) with the provided rock washers and hardware. The hole in the front of the stubby wing will remain open at this point.

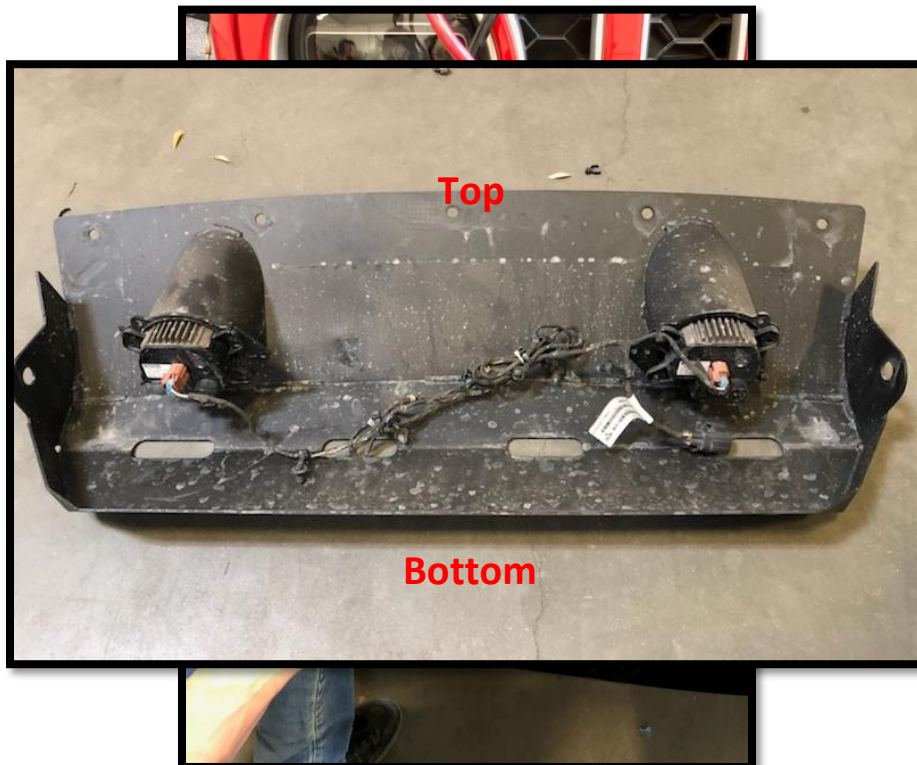

8. Install your fog lights into the skid plate.



9. Install the Skid plate onto the Jeep using the provided long bolts. These bolts will go through the frame horn on each side of the Jeep. Keep bolts loose.



10. Once the two lower skid plate bolts are loosely installed, rotate skid plate up, and use the provided bolts to secure the top portion of the skid plate to the main bumper and wing. Once installed, you can secure the lower frame horn bolts.



11. lastly, Install your fairlead and connect your fog lights and ensure all your hardware is secured. and you are done!



If you have any questions, please email us at sales@dv8offroad.com or call us at 951-680-9595