



## EDELBROCK CAT-BACK EXHAUST SYSTEM

For 2005-2008 Dodge Magnum R/T, 2006-2008 Dodge Charger R/T, & 2005-2008 Chrysler 300C with 5.7L Hemi V8  
Catalog #5719

### INSTALLATION INSTRUCTION

Please study these instructions carefully before installing your new Cat-Back Exhaust System. If you have any questions, contact our **Technical Hotline at: 1-800-416-8628** from 7 am - 5 pm, Monday through Friday, Pacific Standard Time or e-mail us at **Edelbrock@Edelbrock.com**.

#### SUGGESTED TOOLS FOR INSTALLATION:

- Jack and proper rated jackstands
- 13mm Wrench
- 15mm and 13mm deep socket and ratchet
- Pry bar

#### **IMPORTANT NOTE:**

**Proper installation is the responsibility of the installer. Improper installation will void warranty and may result in poor performance and engine or vehicle damage.**

### INSTALLATION INSTRUCTIONS

#### DISASSEMBLY

1. Jack up the vehicle on solid level ground and support with jackstands.  
**NOTE: DO NOT depend on jack to support vehicle without jackstands.**
2. Unbolt left rear tailpipe from rear of muffler.
3. Pry rubber isolators off of left rear tailpipe assembly and remove assembly.
4. Unbolt center crossbrace and remove.
5. Loosen headpipe clamps.
6. Pry all remaining rubber isolators, remove l-pipe and right tailpipe assembly from vehicle.

#### ASSEMBLY

1. Install #25-3257 l-pipe assembly onto head pipes using supplied 2-1/2" band clamps. l-pipe is installed with rear pipes slightly kicked up.
2. Install center crossbrace removed in the "Disassembly" section, Step 4.
3. Install mufflers onto l-pipes using supplied 2-1/2" band clamp, only snug clamps at this time. **NOTE:** Make sure to check for adequate driveshaft clearance.


4. Slip 2-1/2" band clamps over muffler outlets. Install left underaxle pipe #25-3258 into outlet of left (Driver side) muffler. Install right underaxle pipe #25-3259 into outlet of right muffler. Engage rubber isolators. Snug clamps.
5. Install pipe #25-3260 onto left underaxle with supplied clamp, and engage rubber isolator. Install pipe #25-3261 onto right underaxle with supplied clamp, engage rubber isolator.
6. Install resonators onto pipes installed in previous step with supplied clamps. Inlet of resonators are stamped. Adjust resonators to give best clearance, only snug clamps. Resonators will sit at approximately a 45° angle behind the rear valance.
7. Slip supplied clamps onto polished tips and install onto resonators.
8. Starting from the front to the rear, align pipes for best clearance and tighten clamps. Be sure to give proper clearance for any brake lines or ABS wiring.
9. Use supplied tie wrap to move left ABS wire to the top of rear control arm.
10. Check for leaks and correct, if any are found.

**WARNING: Exhaust gas contains carbon monoxide, a deadly invisible gas. Correct any leaks before driving!**

**KIT CONTENTS  
CATALOG #5719**

Qty	Part #	Description
☐ 1	25-3257	X-Pipe Assembly
☐ 1	25-3258	Under-axle Assembly (Left)
☐ 1	23-3259	Under-axle Assembly (Right)
☐ 1	25-3260	Elbow Assembly (Left)
☐ 1	25-3261	Elbow Assembly (Right)

Qty	Part #	Description
☐ 2	25-3262	Tailpipes (Polished 304 SS)
☐ 1	25-3275	Resonator Assembly (Left)
☐ 1	23-3276	Resonator Assembly (Right)
☐ 2	25-55733	SDT Mufflers
☐ 1	22-5719	Installation Kit

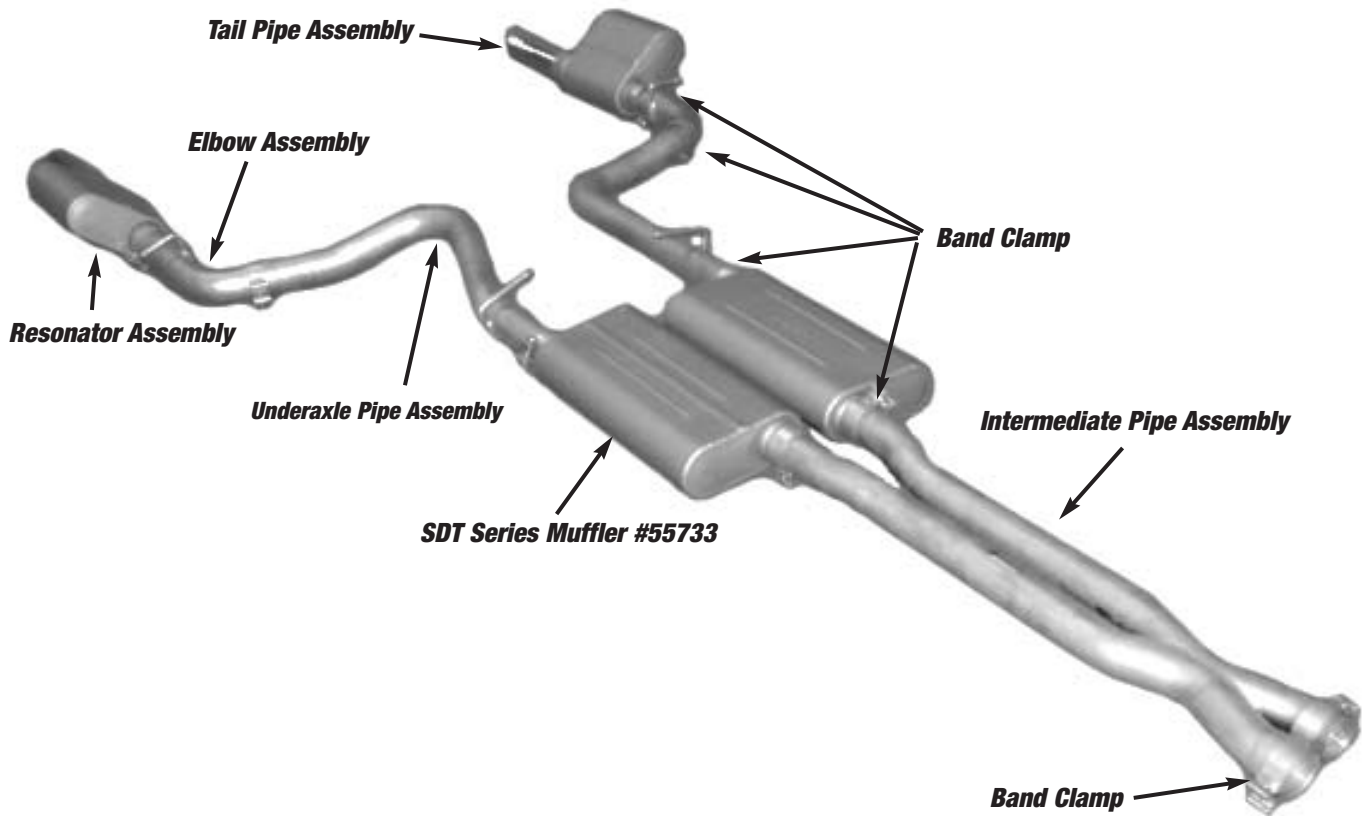

**WARNING:** Support your vehicle with proper jackstands or ramps rated for the total vehicle weight. Place stands so that the rear axle is allowed to hang free for easy system removal.

**WARNING:** These cat-back systems are engineered to fit vehicles with stock catalytic converters or equivalent replacements. If your original system has been modified, Edelbrock will not warranty fit or performance.



**Edelbrock Corporation, 2700 California Street, Torrance, CA 90503**  
**Tech Line: 1-800-416-8628**  
**E-mail: Edelbrock@Edelbrock.com**