



EDELBROCK CAT-BACK EXHAUST SYSTEM

For 2006 Dodge Ram, Mega Cab 5.7L Hemi V8, 2 & 4 WD

Catalog #5736

INSTALLATION INSTRUCTION

Please study these instructions carefully before installing your new Cat-Back Exhaust System. If you have any questions, contact our **Technical Hotline at: 1-800-416-8628** from 7 am - 5 pm, Monday through Friday, Pacific Standard Time or e-mail us at **Edelbrock@Edelbrock.com**. Please fill out and mail your warranty card.

SUGGESTED TOOLS FOR INSTALLATION:

- 3/8" ratchet set with SAE and metric sockets
- 9/16" and 15mm wrenches
- Jackstands and jack
- Liquid penetrant and rubber lubricant

IMPORTANT NOTE:

Proper installation is the responsibility of the installer. Improper installation will void warranty and may result in poor performance and engine or vehicle damage.

DISASSEMBLY

1. Raise vehicle and support with proper jackstands for the weight, leaving the suspension hanging.
2. Use caution around hot exhaust systems to avoid burns.
3. Use penetrating oil on all nuts and bolts.
4. Remove the bolts and clamps from the system and lubricate the rubber hangers to ease removal.
5. Use a long pry bar to pull the rubber hangers off of the pipe hangers.
6. Remove the old system. In some cases, you will find it easier to cut the overaxle pipe to remove it.

Note: On some vehicles, the removal of the straight pipe behind the cat-converter will not be necessary. This can be determined by laying the cat-back system out next to or under your truck to compare length.


ASSEMBLY

1. Clamp the intermediate pipe to the catalytic converter with a 3" band clamp and just snug the clamp at this time. Make sure that you have engaged the stock rubber isolator with the wire hanger welded to the pipe.
2. Slip the muffler onto the intermediate pipe with a 3" band clamp on the front. The offset of the muffler is the front inlet. Snug the clamp so you can adjust the pipes later.
3. Install hanger clamp assembly (#23-4080) onto outlet end of muffler, engage hangers into the stock rubber isolators as you slip it onto the muffler outlet. Slip the overaxle pipe over the rear end and into the muffler outlet, engage hanger at rear into stock rubber isolator.
4. Put one 3" band clamp onto outlet of overaxle pipe, install tailpipe and snug band clamp.
5. Working from the front of the system, align and tighten each pipe from the cat-back.
6. Check for clearance to body, frame, and driveline as you tighten the system from front to rear.
7. Check for leaks and correct, if any is found.

WARNING: Exhaust gas contains carbon monoxide, a deadly invisible gas. Correct any leaks before driving!

KIT CONTENTS
CATALOG #5736

Qty	Part #	Description
☐ 1	25-3245	Intermediate Pipe
☐ 1	25-55754	Muffler
☐ 1	23-3246	Overaxle Pipe Assembly
☐ 1	25-3157	Tail Pipe
☐ 3	46-6612	3" Band Clamps
☐ 1	23-4080	Hanger Clamp Assembly

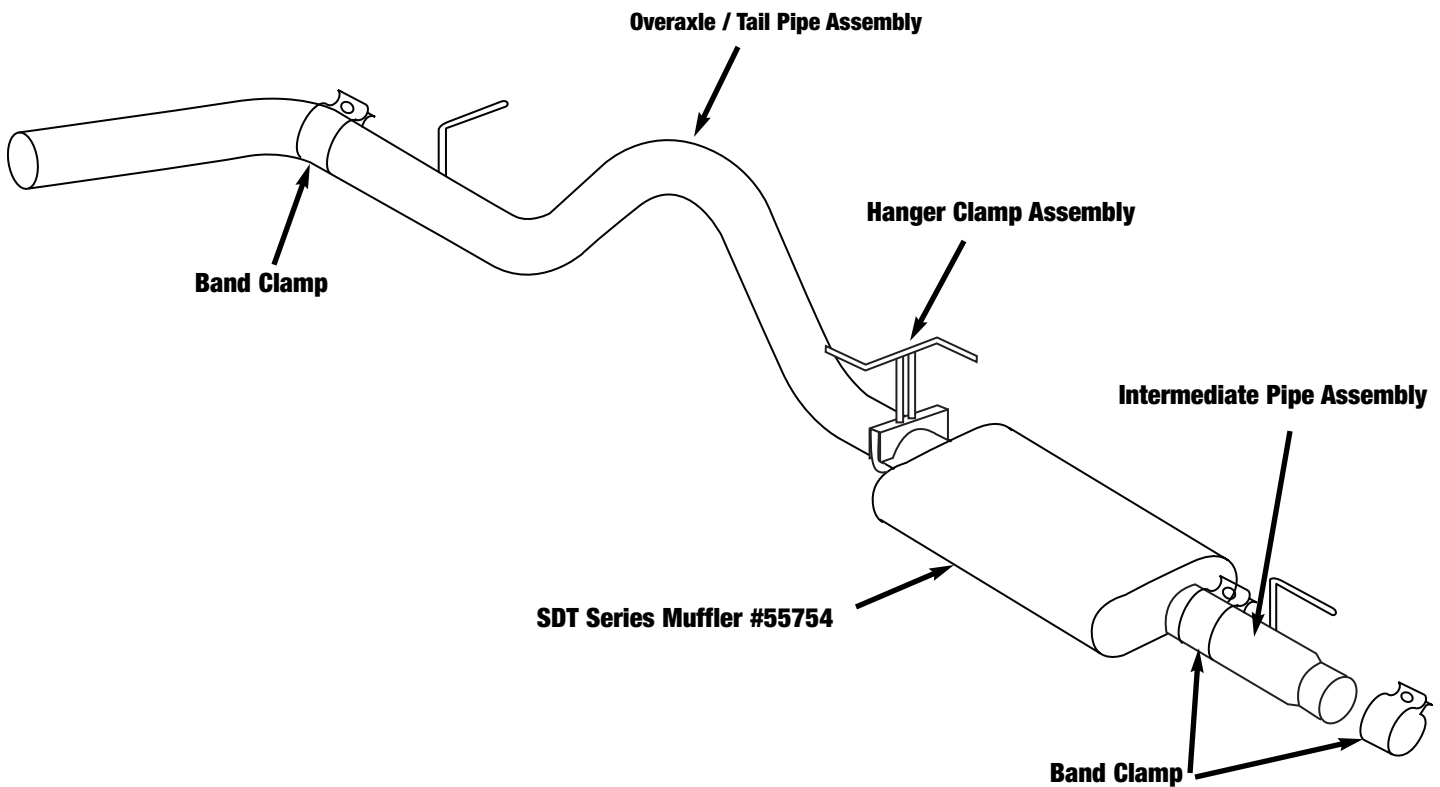

WARNING: Support your vehicle with proper jackstands or ramps rated for the total vehicle weight. Place stands so that the rear axle is allowed to hang free for easy system removal.

WARNING: These cat-back systems are engineered to fit vehicles with stock catalytic converters or equivalent replacements. If your original system has been modified, Edelbrock will not warranty fit or performance.

Edelbrock Corporation
2700 California Street
Torrance, CA 90503
Tech Line: 1-800-416-8628
E-mail: edelbrock@edelbrock.com