




EDELBROCK NITROUS SYSTEMS
 SUPER VICTOR V8 DIRECT PORT WITH E1 JET MAP
 CATALOG #71831
 INSTALLATION INSTRUCTIONS

Please read both your DIRECT PORT INSTRUCTION MANUAL and this JET MAP insert before installing your Edelbrock Nitrous System. If you have any questions or comments, please feel free to contact our Technical Hotline at: 1-800-416-8628 from 7a.m.-5p.m., Monday through Friday, Pacific Time or e-mail us at Edelbrock@Edelbrock.com.

BILL OF MATERIALS (Excluding Electrical)

Qty.	Description	Qty.	Description
2	Victor Pro Nitrous Solenoid	8	Red Tube Nuts
2	Victor Pro Fuel Solenoid	16	Compression Fittings
8	Edelbrock E1 Nozzles	4	Distribution Blocks
16	3/16" Tubing	2	90° Union Fittings
16	Tube Sleeves	2	6AN Nitrous Filter Fitting
8	Blue Tube Nuts	2	6AN Red Filter Fitting
2	1/8" Male Pipe Nipples	56	Various Jets

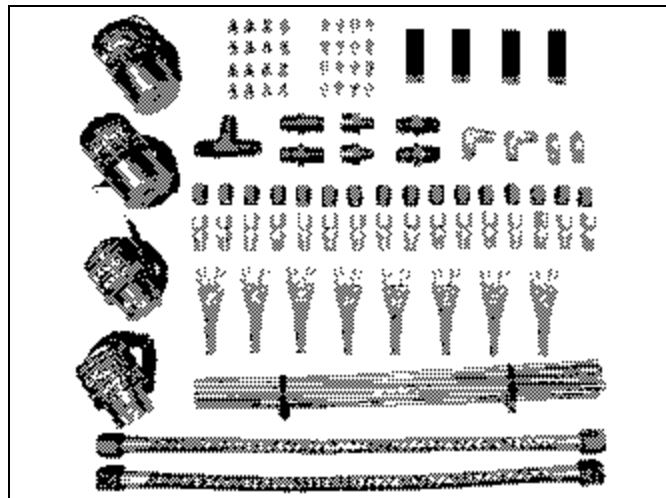

Jet Map

Approx. HP Gain	Nitrous Jet	Fuel Jet	Sugg. Timing Retard
200 HP	24	20	6°-8°
300 HP	32	28	8°-10°
400 HP	38	34	10°-12°
500 HP	42	38	12°+

This jet map is based on a nitrous system with a flowing fuel pressure of 6.5 PSI. Any variations different than 6.5 PSI will change your jet map and potentially damage your engine. We highly recommend using the *Edelbrock Flow Test Tool (Catalog #76506)* to set your flowing fuel pressure.

Edelbrock Corporation • 2700 California St. • Torrance • CA 90503
 Tech Line: 800-416-8628
 E-Mail: Edelbrock@Edelbrock.com