



**AMP CONNECTOR, LCU 26 PIN
Part #91150, 91219 & 91220**

INSTALLATION AND ASSEMBLY INSTRUCTIONS


Please study these instructions carefully before assembling your QwikData2 LCU connectors. If you have any questions, contact our **Technical Hotline at: 1-800-416-8628**, 7 am to 5 pm, Monday-Friday, Pacific Standard Time or e-mail us at **QD2@edelbrock.com**.

SUGGESTED CRIMP TOOL PART # PA1440 MANUFACTURED BY PALADIN TOOLS


ASSEMBLY INSTRUCTIONS:

PUSH LARGE TAB IN SO TWO SMALL TABS MOVE TO UNLOCKED POSITION. CRIMP WIRE TO PIN AND INSERT INTO BACK OF PLUGS. PUSH DOWN TWO TABS TO LOCK PINS IN CONNECTOR.


LCU CONNECTOR

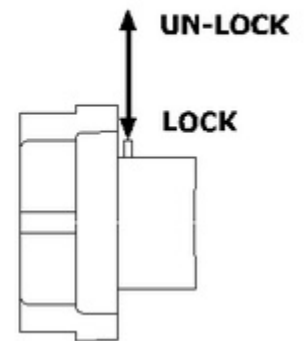

LCU CONNECTOR
26 PIN
VIEW FROM WIRE SIDE

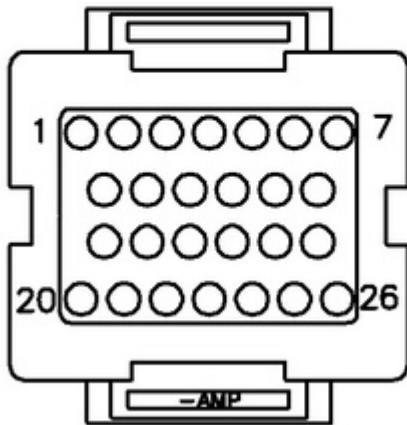

LCU CONNECTOR
34 PIN
VIEW FROM WIRE SIDE

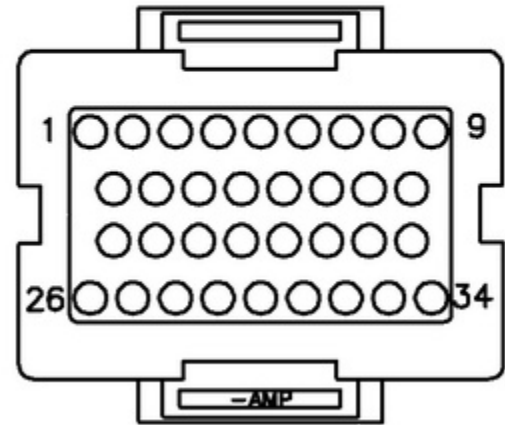

* FOR HARNESS PIN DESIGNATIONS DOWNLOAD QWIKDATA2 HARNESS INSTALLATION GUIDE FROM EDELBROCK QWIKDATA2 WEBSITE.

**Edelbrock Corporation • 2700 California St. • Torrance, CA 90503
Tech-Line: 1-800-416-8628 • E-Mail: QD2@Edelbrock.com**