


End link Instruction Sheet 1986-88 Mazda RX7 Set # 9-8134

ENERGY
SUSPENSION

1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

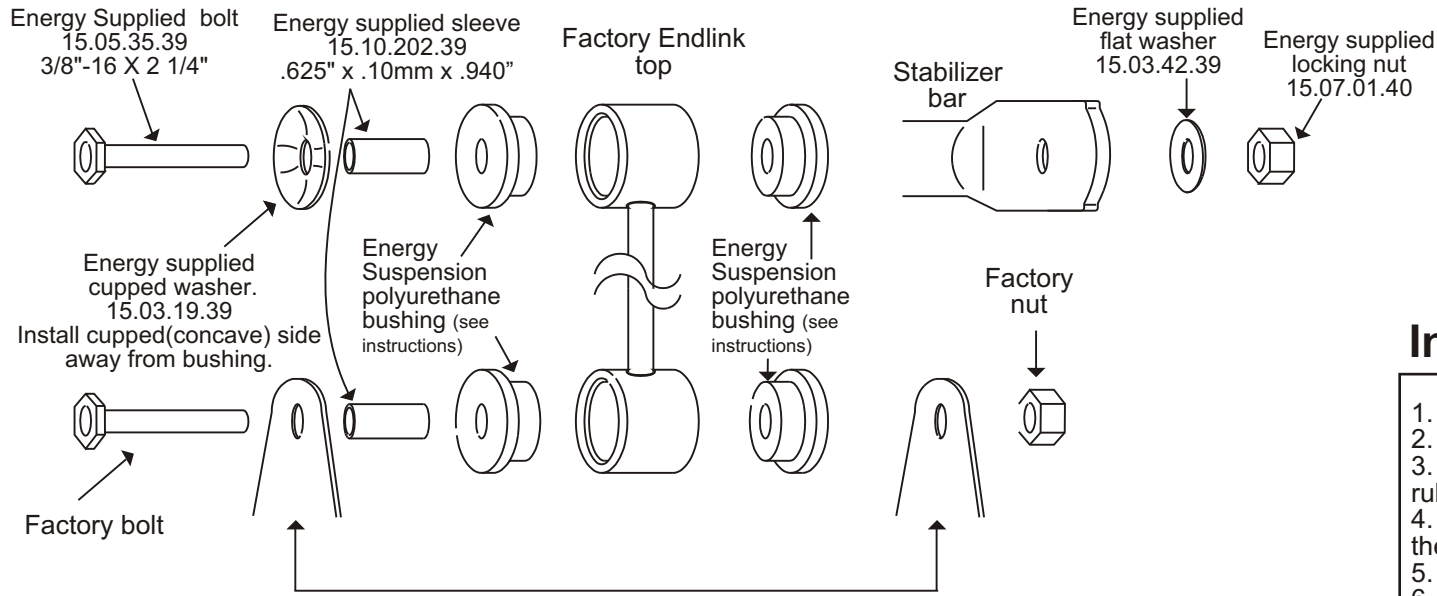

It is recommended that a factory service manual be purchased prior to performing any work on your car or truck.

Instructions:

1. Remove endlinks.
2. Remove bushing and sleeve.
3. Clean endlink surfaces of all old rubber.
4. Grease all sides of bushing where there is contact with metal.
5. Press bushing into endlink.
6. Press in sleeve.
7. Assemble as shown in diagram.

Note: On some vehicles, one end of the endlink is larger in diameter than the other end. Use part #2300 instead of part #2305.


Factory Bracket on control arm

Front endlinks

Rear endlinks

Factory bolt

This bolt is the longer of the two factory bolts. The shorter bolt will not be used.

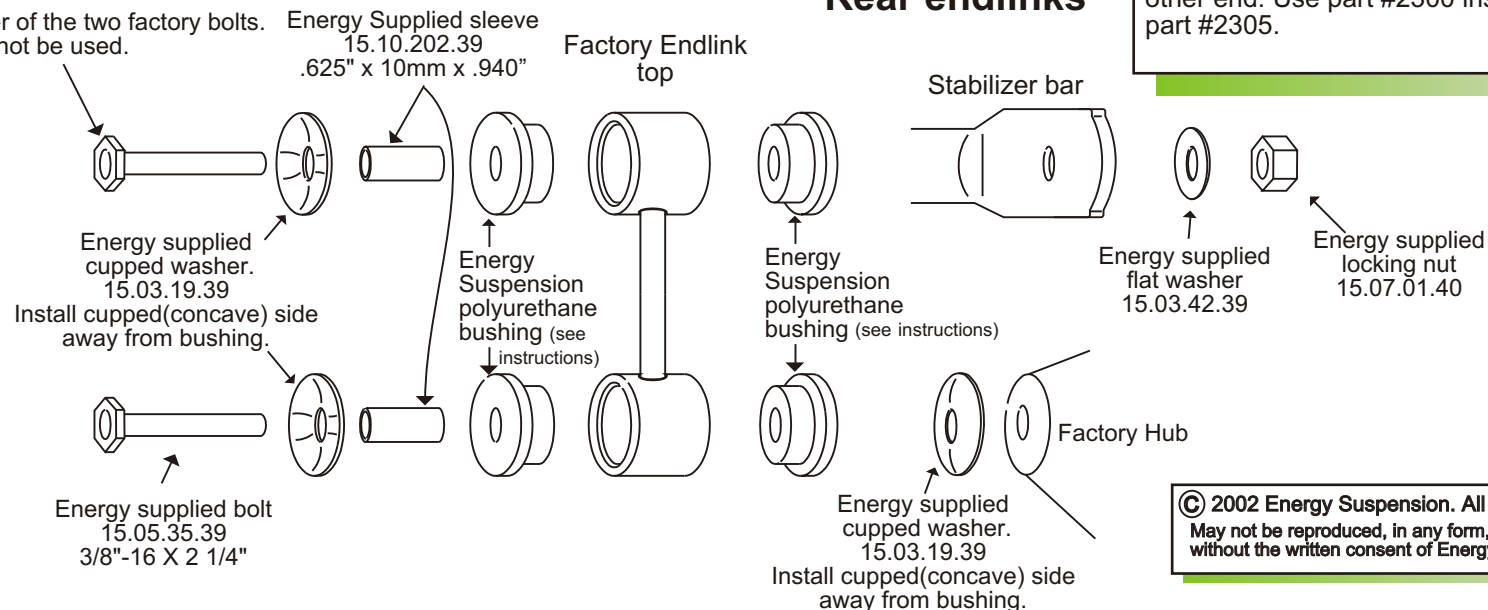

17123

1/17/97 KN
Updated 15/FEB/02 BRH

© 2002 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.