


Installation instructions

For set # 19-1101
02-up Subaru WRX



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

Note: It is recommended that this set be professionally installed if you are unfamiliar with this type of work, and a factory service manual be purchased prior to performing any work on your vehicle for proper disassembly, reassembly and torque specs. These instructions are intended for bushing removal and install of Energy Suspension polyurethane bushings, once you have removed the factory component from your vehicle.

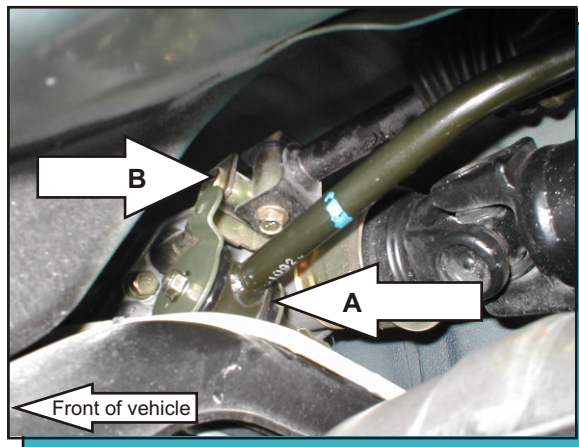

Note: Do not remove the upper shifter linkage (See arrow B). Remove old rubber bushing from the lower shifter linkage at the transmission mounting stud. (See arrow A) Install the new poly bushing into the linkage with the part number (1170) facing outward away from transmission.

17372

29/JUL/02 BRH

© 2002 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.


Installation instructions

For set # 19-1101
02-up Subaru WRX



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

Note: It is recommended that this set be professionally installed if you are unfamiliar with this type of work, and a factory service manual be purchased prior to performing any work on your vehicle for proper disassembly, reassembly and torque specs. These instructions are intended for bushing removal and install of Energy Suspension polyurethane bushings, once you have removed the factory component from your vehicle.

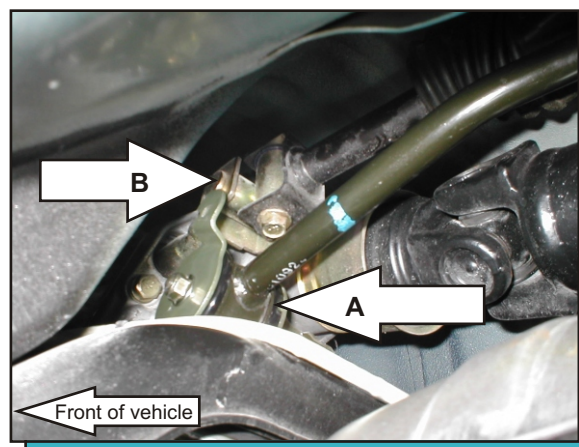

Note: Do not remove the upper shifter linkage (See arrow B). Remove old rubber bushing from the lower shifter linkage at the transmission mounting stud. (See arrow A) Install the new poly bushing into the linkage with the part number (1170) facing outward away from transmission.

17372

29/JUL/02 BRH

© 2002 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.