


# Installation Instructions

## For set # 19.1102



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

**Note:** It is recommended that this set be professionally installed if you are unfamiliar with this type of work, and a factory service manual be purchased prior to performing any work on your vehicle for proper disassembly, reassembly and torque specs. These instructions are intended for bushing removal and install of Energy Suspension polyurethane bushings, once you have removed the factory component from your vehicle.

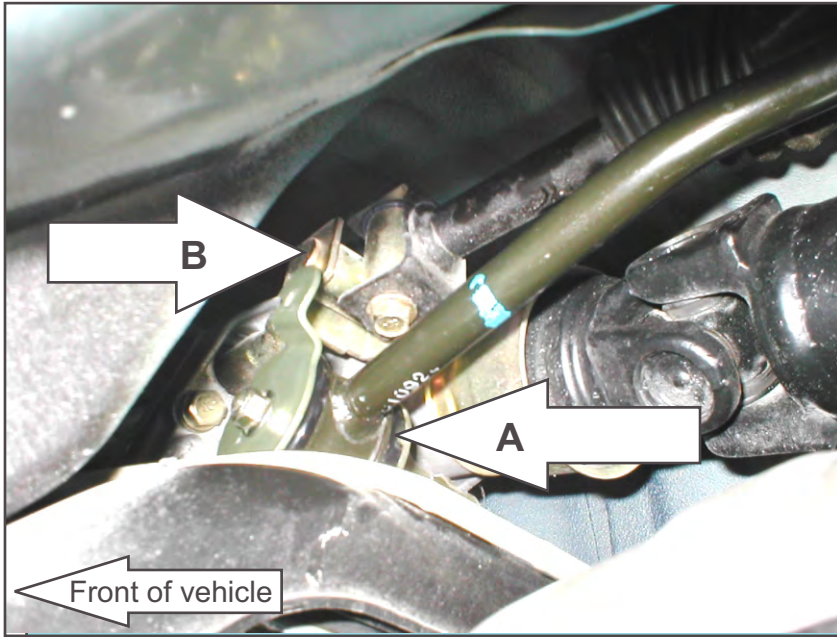

**Note:** Do not remove the upper shifter linkage (See arrow B). Remove old rubber bushing from the lower shifter linkage at the transmission mounting stud (See arrow A). Install the new poly bushing into the linkage with the part number (1170) facing outward away from transmission.

### Parts List:

- 1 - 1170 Shifter Linkage Bushing
- 1 - 01P01304 Rear Shifter Mount Bushing
- 2 - 15.10.92.39 Rear Mount Sleeves
- 2 - 15.03.140.38 Rear Mount Washers
- 2 - 15.05.97.42 Rear Mount Bolts
- 1 - 17P17614 Instructions Sheet

### Rear Shifter Mount:

Transmission tunnel heat shield must be removed to gain access to mount location. Rear drive shaft center support may also need to be loosened for ease of removal and installation of new bushing. See picture to the right for correct orientation of new bushing when installing. A small dab of grease on the end of the shifter will also help in installation.



# 17P17614

01/NOV/13 BEL ECN# 13074

© 2014 Energy Suspension. All rights reserved.  
May not be reproduced, in any form, or by any means,  
without the written consent of Energy Suspension.