Installation Instructions for set # 4-5178

 Remove sway bar brackets from vehicle undercarriage.
Remove sway bar bushings from front sway

bar. 3. Apply supplied grease to I.D. of polyurethane bushings.

Install polyurethane bushings onto sway bar as shown.

5. Install sway bar brackets and torque fasteners to factory specs.

© 2002 Energy Suspension. All rights reserved. May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension. 17321 6-7-00 jl Updated 8/MAY/02 BRH

Installation Instructions for set # 4-5178

1. Remove sway bar brackets from vehicle undercarriage.

2. Remove sway bar bushings from front sway bar.

3. Apply supplied grease to I.D. of polyurethane bushings.

4. Install polyurethane bushings onto sway bar as shown.

5. Install sway bar brackets and torque fasteners to factory specs.

© 2002 Energy Suspension. All rights reserved. May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.

Installation Instructions for set # 4-5178

1. Remove sway bar brackets from vehicle undercarriage.

2. Remove sway bar bushings from front sway bar.

3. Apply supplied grease to I.D. of polyurethane bushings.

4. Install polyurethane bushings onto sway bar as shown.

5. Install sway bar brackets and torque fasteners to factory specs.

© 2002 Energy Suspension. All rights reserved. May not be reproduced, in any form, or by any means, without the written consent of Energy Suspension.




17321

6-7-00 jl Jpdated 8/MAY/02 BRH



1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

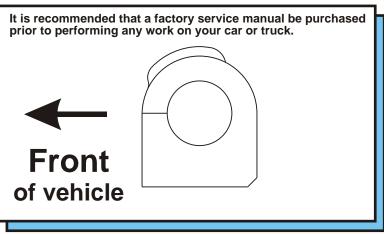



It is recommended that a factory service manual be purchased prior to performing any work on your car or truck.

